



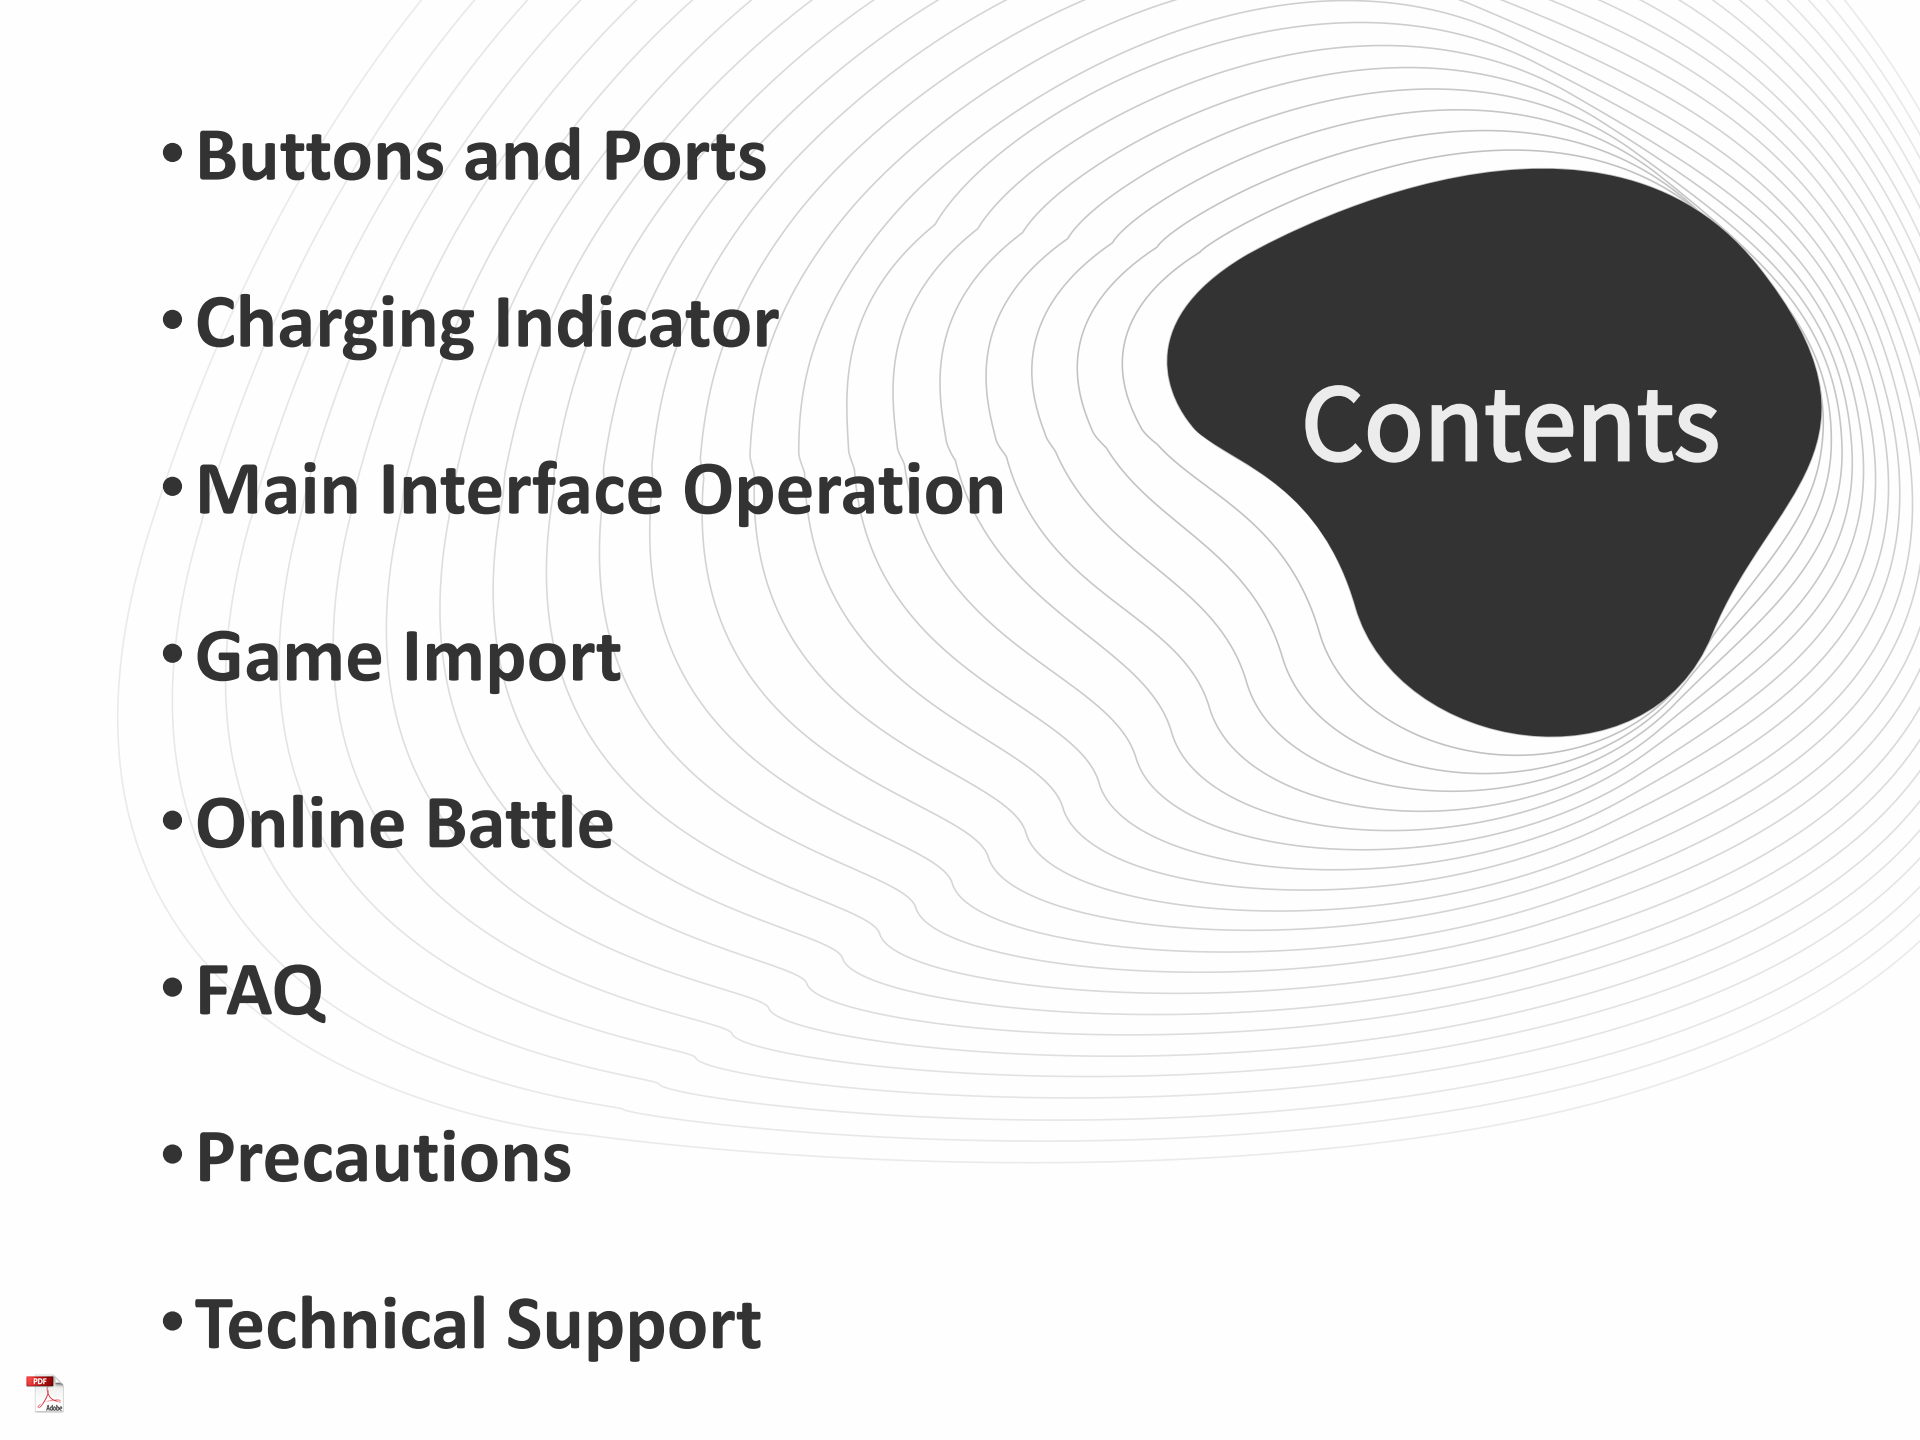

Contents

- **Buttons and Ports**
- **Charging Indicator**
- **Main Interface Operation**
- **Game Import**
- **Online Battle**
- **FAQ**
- **Precautions**
- **Technical Support**

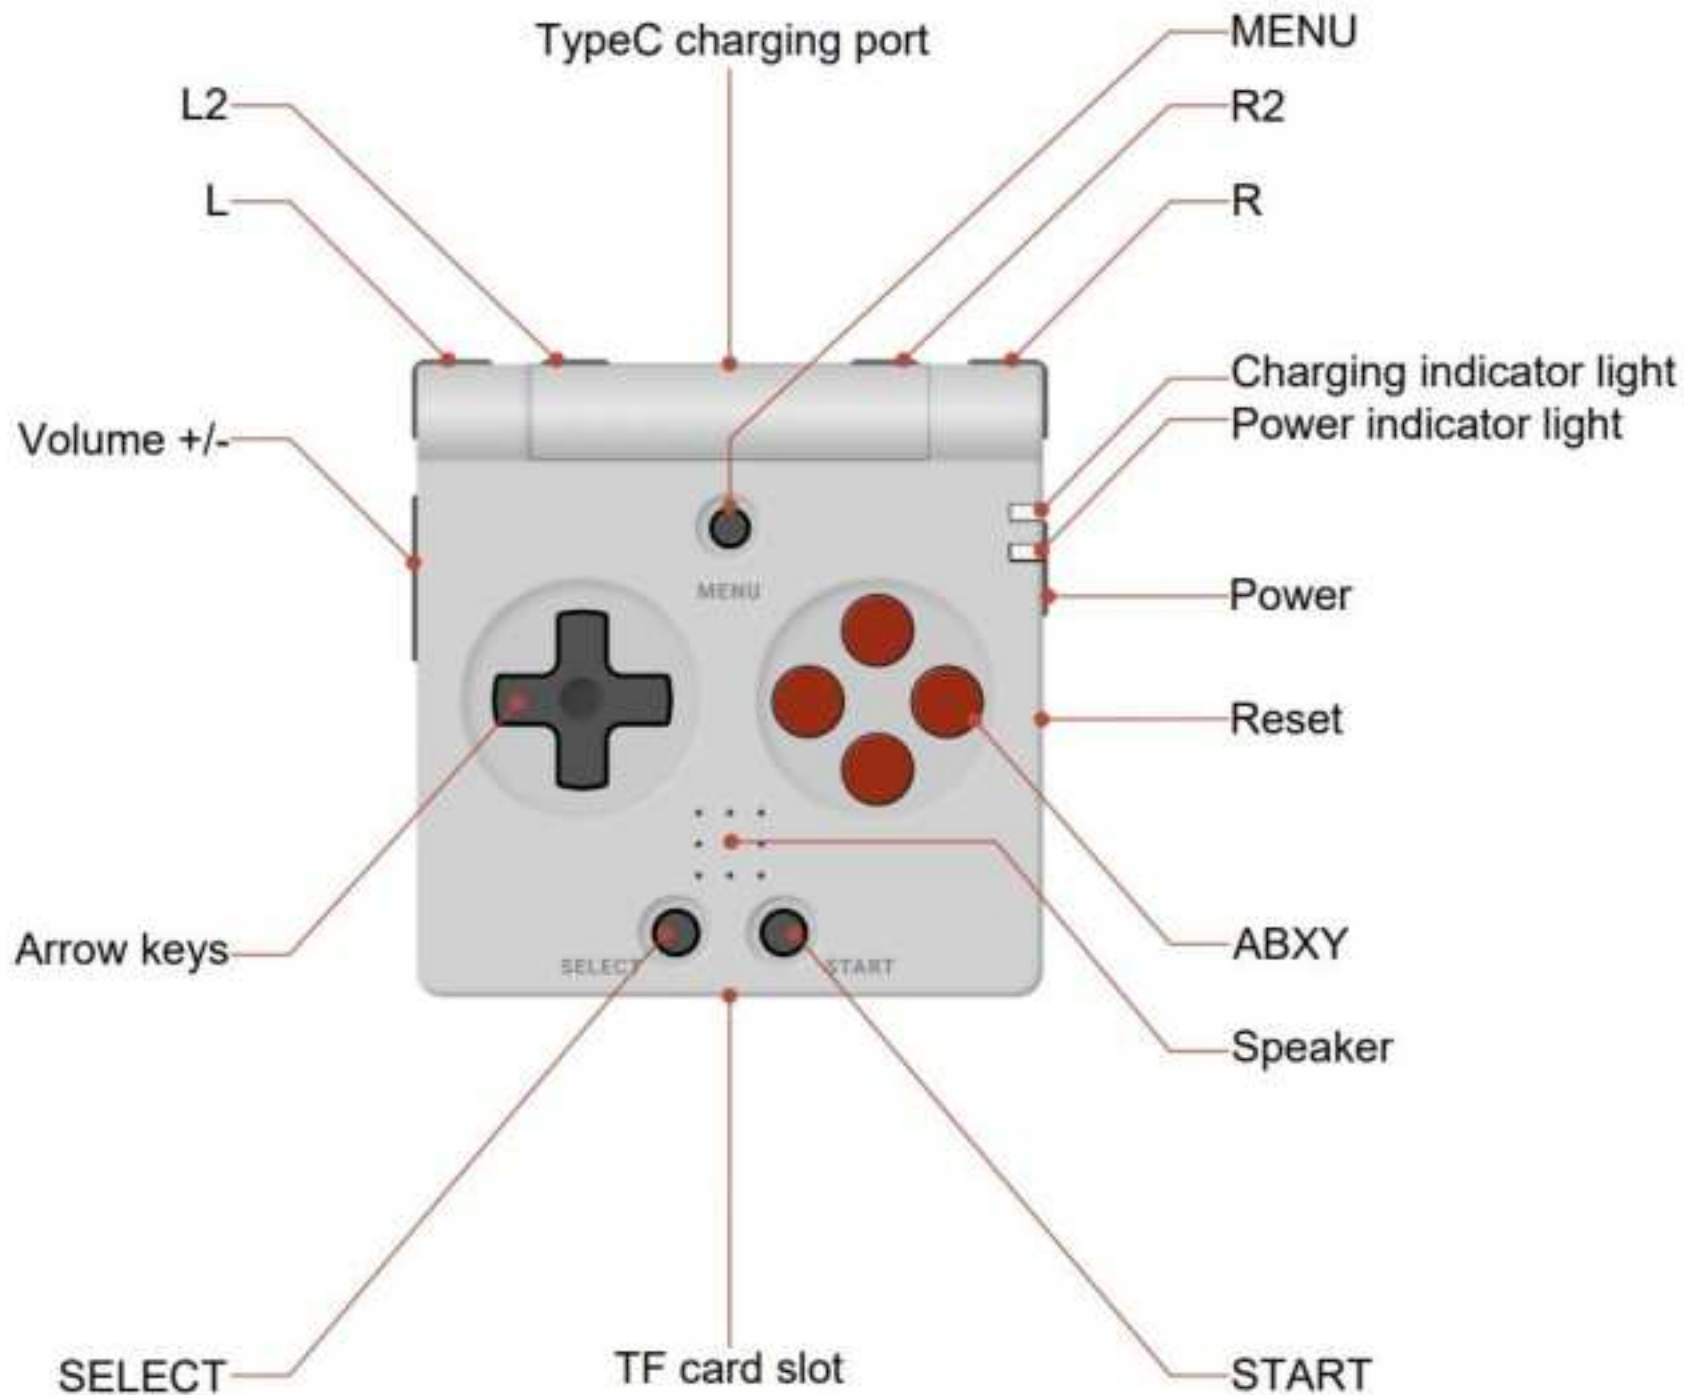

Charging indicator

01

Green light

When the device is started and operating normally, the green light is on, indicating that the device is in working condition and performing normally.

02

Red light

The red light turns on to indicate that the device is charging and the red light turns off automatically when fully charged. Do not use a charger with a power exceeding 5V/2A to avoid damaging the motherboard.

When the battery level is 5%, the red light starts flashing in dictating low battery level.

Main Interface Operation

Favorite

The game in the "emulator", press the "Menu" to call out the menu and select "Favorites".

Recently

Recently run games will be displayed here;
press the "Menu key" to select "Open" or "Clear"

Game

System simulator, quick save, restart, read records, open RA menu, exit.

RetroArch

Choose games from various simulators;
Use RA All-round Simulator;
Enjoy classic and novel game experiences.

APP

Includes ported games, RA presets, file management, etc.;
Create a personalized gaming space and enjoy the fun of gaming.

Setting

Contains device system settings and device information, allowing you to easily manage your devices, optimize your user experience, and enjoy convenient operations.

Game ROM Storage and Import Process



Game ROM storage

Insert the card into the card reader, then insert it into the computer to read, and put the game ROM into the corresponding simulator folder in the folder named "Rom".



Game import process

Insert the card into the console's card slot, start/restart the console, press the menu and select "Flash ROM", then you can select the game in game.

Firmware upgrade operation

1 Firmware upgrade operation

Download the latest firmware file from the official website, insert the memory card into the card reader and connect it to the computer, and put the upgrade file in the root Table of contents of the card file.

2 Upgrade success judgment

Insert the memory card into the game console slot, turn on the machine, and a small upgrade rocket will appear. Wait for 3 to 5 minutes, and the upgrade is complete when the screen goes off. Delete the upgrade file in the card.

3 Upgrade failure handling

If the upgrade fails and the game console becomes bricked, please contact customer service for specific instructions.

Online Battle

Connect to WIFI

Connect two game consoles to the same WIFI;

Write down the IP address of game console A's WIFI;

Go to Settings->WIFI->Displayed Numbers.

Online games

Enter the same version of the same game;


click the "Menu" button to call out the menu -> Online Game -> Online;

and select "Host" for game console A.

Connection successful

On console B, select "Connect to online host";

enter the IP address of console A and press START to confirm the connection is successful.

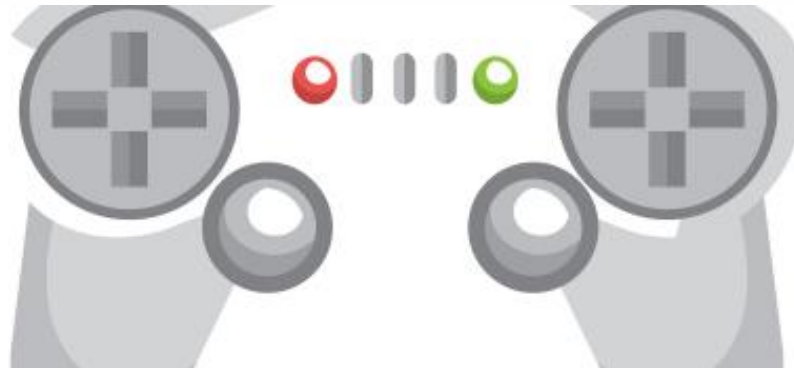

Frequently asked questions

● Buttons have no effect

"Settings". there is a response, the button is normal and needs to be mapped.

● The game runs slowly

Some games require high performance to play at full speed. It is normal for them to play at slow frames to adapt to the performance.

● Unable to run the game

Please ensure the game ROM file is intact, and consider changing the RA core option. The button settings are different in game. Select IO Test" from the main menu.

● About crash

Please long press the power button or press the reset button;

Restart the machine and refresh the ROM

● File cannot be read

Confirm the card format is FAT32;

insert the card first -> restart the console
-> refresh the ROM ; If it still cannot be read, please contact Technical support

● Unable to turn on

Turn on the computer without a card to troubleshoot, charge the battery for half an hour, plug in the wires, loosen the screws and restart. If the problem persists, please contact customer service.

Notes and instructions

● Cleaning requirements

It is prohibited to use any diluent or volatile liquid to clean the product.

● Battery use

The battery will consume different amounts of power depending on the game. Running some games will reduce the battery play time.

● Warranty policy

The warranty period is one year. Man-made damage is not covered by the warranty and must be followed in accordance with the product instructions and warranty terms.

● Charging requirements

Please use a charger that does not exceed 5V/2A to charge the battery; as this will help prevent damage to the motherboard.

● Note

Children must use this product under adult supervision; To avoid accidental swallowing of parts and ensure safe and hygienic use.

● Environmental requirements

It is recommended to place the product in a dry environment and avoid contact with liquids to prevent liquids from entering the machine and causing damage; avoid exposure to high temperature environments or direct contact with flames.

Technical Support



Technical Support Website

The official website providing Technical Support services is

www.lomiyoo.com;

where users can find solutions, driver downloads, product manuals and other resources.



Contact Us

If you have any questions about the product or need further assistance, you can contact us through the customer service of the ordering platform.