

QUICK START GUIDE

Formatting the microSD card




Note: Formatting the microSD card is recommended, but not necessary. All contents on the microSD card will be erased during formatting.

1. Insert a microSD card into the scanner.
2. Turn on the scanner by pressing and holding the [Power/Scan] button down for 2 seconds.
3. Press the [MENU] button once to enter the Setup menu. Use the UP [↑] or DOWN [↓] button until the [FORMAT] selection is highlighted.
4. Press [OK], then use the UP [↑] or DOWN [↓] button to highlight [YES].
5. Press [OK] to confirm and begin formatting the microSD card.
6. "Please wait" will appear on the LCD display. When the screen returns to the Setup menu, formatting process is complete.

How to scan

1. Turn on the scanner by pressing and holding the [Power/Scan] button down for 2 seconds.
2. Place the document on a flat surface and hold down the document with one hand.
3. Place the scanner on the edge of the paper approximately 5/8 to 3/4 of an inch onto the page to ensure the whole document can be scanned. Make sure to keep the scanning area in between the scanning width indicator marked on the side of the scanner.

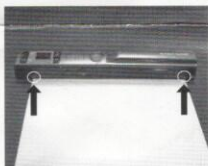

4. Hold the scanner flat against the material and then press the [SCAN] button once.



5. Slide the scanner slowly, keeping your hand stable to get the best quality picture.
6. Press the [SCAN] button again to stop scanning.

Optional use: ABBYY® OCR Software

Compatible with Windows® XP SP2, Windows® Vista™, Windows® 7


To access the software User's Manual, go to the Help menu for instructions on how to use the OCR software application:

1. Load and open the ABBYY® software.
2. Press the "F1" key located on your keyboard to launch the "Help" menu from the software.
3. OR, locate the ABBYY® icon found next to the Time indicated on your computer's taskbar and then right click on the icon to access the "Help" menu.

* Perform calibration only when white balance needs adjustment

- 1.) With the dry cleaning cloth provided, clean the scanning lens located on the bottom of the scanner.
- 2.) Turn on the scanner by pressing the  button. Place the scanner on the white area of the White Balance Calibration paper.
- 3.) Press and hold the UP [^] button. While holding the UP [^] button, press the  button once to enter into auto-calibration mode. SD symbol  will flash and then stop. "GREEN" and "RED" LED light will turn on.
- 4.) Do not move the scanner. Wait until the "RED" LED turns off. "GREEN" LED will stay on.
- 5.) With only the "GREEN" LED light on, start scanning the white paper by sliding the scanner across the paper until the "GREEN" LED light turns off. (Slide the scanner backwards if necessary).
- 6.) Press and hold the  button to power off the scanner. Calibration is complete.

LED Light Indications

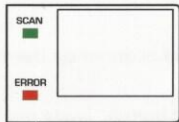

"GREEN" SCAN LED ON → Scan in progress.

"GREEN" SCAN LED OFF → Standby/Scan is complete.

"RED" ERROR LED ON → Scanning too fast.
May cause scanning error.
Restart and scan again.

"RED" ERROR LED OFF → No error in scanning speed.
Continue scanning process.



* scan will START when  button is pressed

* to END scan, press  button again

