

zenith



Thanks for
choosing Z

hookup directory

your on-screen menus

index



Thanks for
choosing Zenith!



page **3**



page **14**



page **26**

The model and serial number of your new TV are located on the back of the TV cabinet. For your future convenience, we suggest that you record these numbers here:

MODEL NO. _____

SERIAL NO. _____



WARNING

RISK OF ELECTRIC SHOCK
DO NOT OPEN



The lightning flash with arrowhead symbol, within an equilateral triangle, is intended to alert the user to the presence of uninsulated "dangerous voltage" within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.



The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.

CAUTION: To Prevent Electric Shock, Match wide blade of plug to wide slot, fully insert.

ATTENTION: Pour éviter les chocs électriques, introduire la lame la plus large de la fiche dans la borne correspondante de la prise et pousser jusqu'au fond.

This reminder is provided to call the cable TV system installer's attention to Article 820-40 of the National Electric Code (U.S.A.). The code provides guidelines for proper grounding and, in particular, specifies that the cable ground shall be connected to the grounding system of the building, as close to the point of the cable entry as practical.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Do not attempt to modify this product in any way without written authorization from Zenith Electronics Corporation. Unauthorized modification could void the user's authority to operate this product.

RECORD YOUR MODEL NUMBER
(Now, while you can see it)

WARNING:

TO REDUCE THE RISK OF ELECTRIC SHOCK DO NOT REMOVE COVER (OR BACK). NO USER SERVICEABLE PARTS INSIDE.
REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.

WARNING:

TO PREVENT FIRE OR SHOCK HAZARDS, DO NOT EXPOSE THIS PRODUCT TO RAIN OR MOISTURE.

POWER CORD POLARIZATION:

NOTE TO CABLE/TV INSTALLER:

REGULATORY INFORMATION:

 
CAUTION:

Hook-Up Directory

Use this page to decide where you need to begin your setup. First, find the line below that best describes what you want to do, then go to that page number.
Note: Design and specifications are subject to change without prior notice.


Antenna only

If you are using an antenna and no other equipment, go to page 4

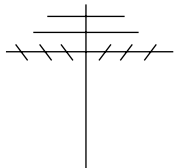


Cable only

If you have cable and no other equipment, go to page 5

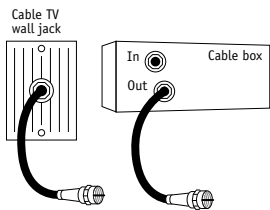


Antenna with VCR

If you are using an antenna and have a VCR, go to page 6

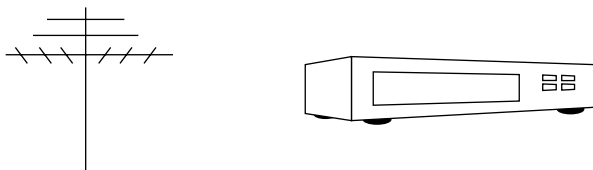

Cable and VCR

If you have cable and a VCR, go to page 7

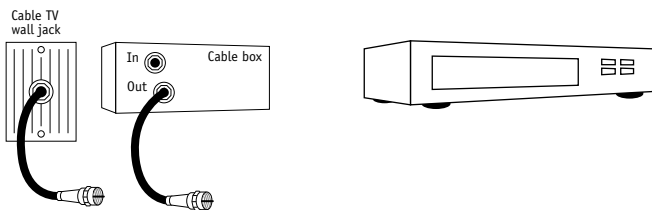


IMPORTANT!!

**This page will
direct you to
which page
to go to for
proper hook-
up of your
Entertainment
Machine.**


Hook Up Your Antenna to the TV

1 Hook up your Entertainment Machine, see diagrams at right.

2 Remove the back of the remote and put in two AA batteries matching + with + and - with -.

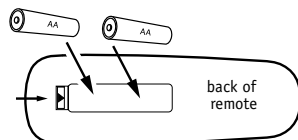


3 Plug in your TV. Do not plug it into a switched outlet.

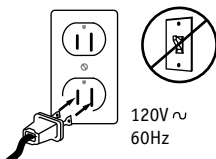


4 Go to page 8 to select your Antenna setup and page 9 to Auto Program your Entertainment Machine.

Flat-Wire Antenna to Adapter

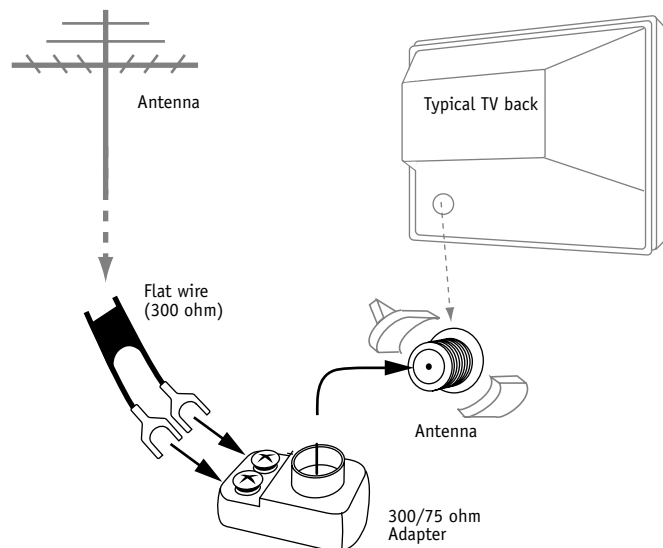

Round Antenna Wire

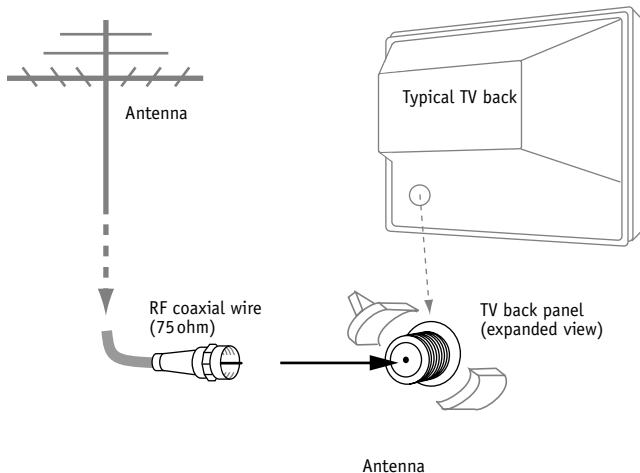

Mini glossary


75 OHM RF CABLE

The wire that comes from an off-air antenna or cable service provider. Each end looks like a hex shaped nut with a wire sticking through the middle, and it screws onto the threaded jack on the back of your TV.

300 TO 75 OHM ADAPTER

A small device that connects a two-wire 300 ohm antenna to a 75 ohm RF jack. They are usually about an inch long with two screws on one end and a round opening with a wire sticking out on the other end.

Connect an
antenna
to your
Entertainment
Machine.

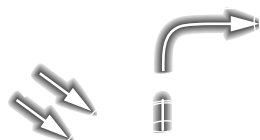

*If you have a 75 ohm RF cable,
then you don't need any adapters!*



*Remember, when screwing RF
cables onto jacks, clockwise tight-
ens, and counterclockwise loosens.*




*A 300 to 75 ohm adapter is not
included with your Zenith
Entertainment Machine.*




Hook Up Your Cable (CATV) to the TV

1 Hook up your Entertainment Machine, see diagrams at right.

2 Remove the back of the remote and put in two AA batteries matching + with + and - with -.

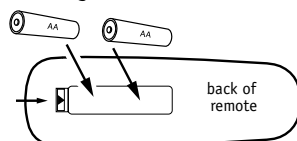


3 Plug in your TV. Do not plug it into a switched outlet.

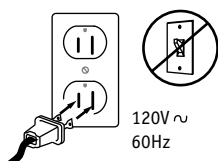


4 Go to page 8 to select your Antenna setup and page 9 to Auto Program your Entertainment Machine.

Without Cable Box

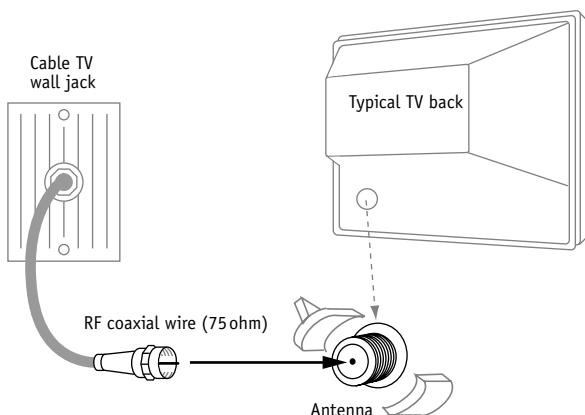

With Cable Box

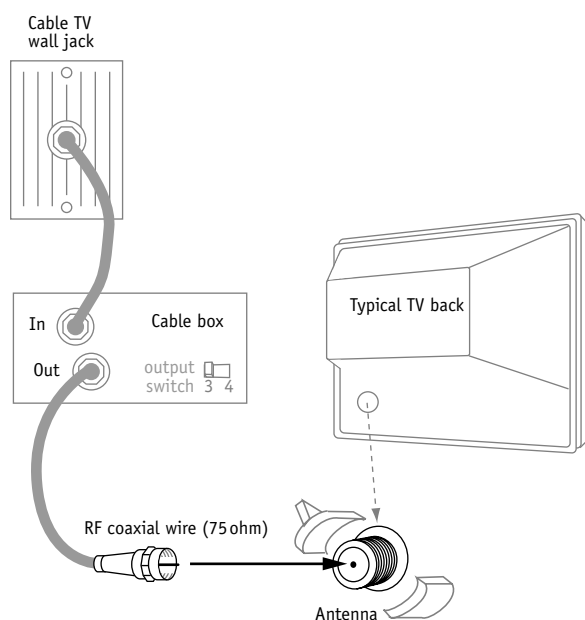

Mini glossary

CABLE SERVICE The wire that supplies all your cable TV (CATV) stations.

Connect
cable to your
Entertainment
Machine.



If you're using a cable box, leave your TV on channel 3 or 4 and use your cable box to change channels.



Remember, when screwing RF cables onto jacks, clockwise tightens, and counterclockwise loosens.




If you're using a cable box, Auto-Program (page 8) might only find the channel your cable service is on (usually channel 3 or 4). Don't worry, that's all you need!




Hook Up Antenna and VCR to the TV

1 Hook up your Entertainment Machine, see diagrams at right.

2 Remove the back of the remote and put in two AA batteries matching + with + and - with -.

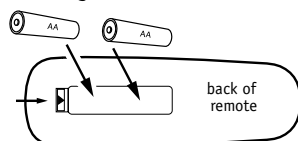


3 Plug in your TV. Do not plug it into a switched outlet.

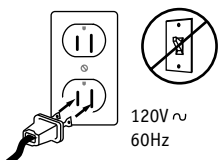


4 Go to page 8 to select your Antenna setup and page 9 to Auto Program your Entertainment Machine.



Flat-Wire Antenna to Adapter and Audio/Video Cables

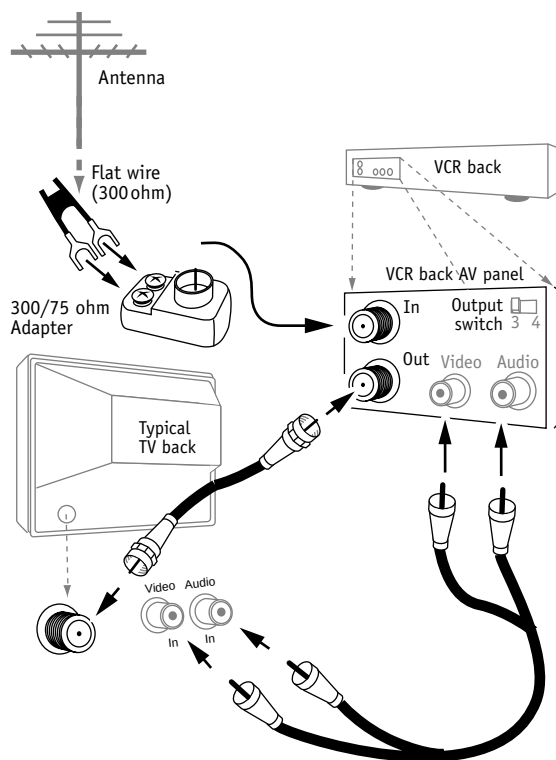

Round Cable to VCR and Audio/Video Cables

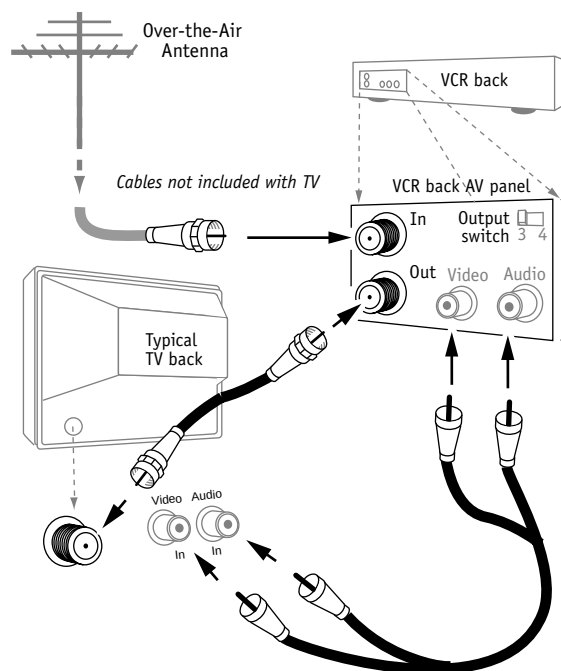

Connect your
off-air
antenna and
VCR to your
Entertainment
Machine.

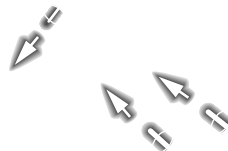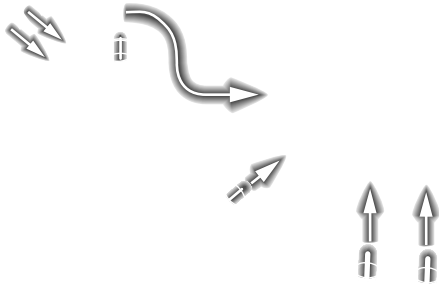

*Remember, when screwing
RF cables onto jacks, clockwise
tightens, and counterclockwise
loosens.*




*A/V cables or adapters are not
included with your Zenith
Entertainment Machine.*




Hook Up Your Cable (CATV) and VCR

1 Hook up your Entertainment Machine, see diagrams at right.

2 Remove the back of the remote and put in two AA batteries matching + with + and - with -.

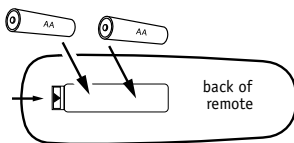


3 Plug in your TV. Do not plug it into a switched outlet.

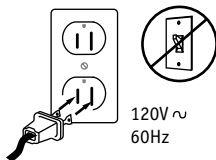


4 Go to page 8 to select your Antenna setup and page 9 to Auto Program your Entertainment Machine.


Cable Service and Audio/Video Cables

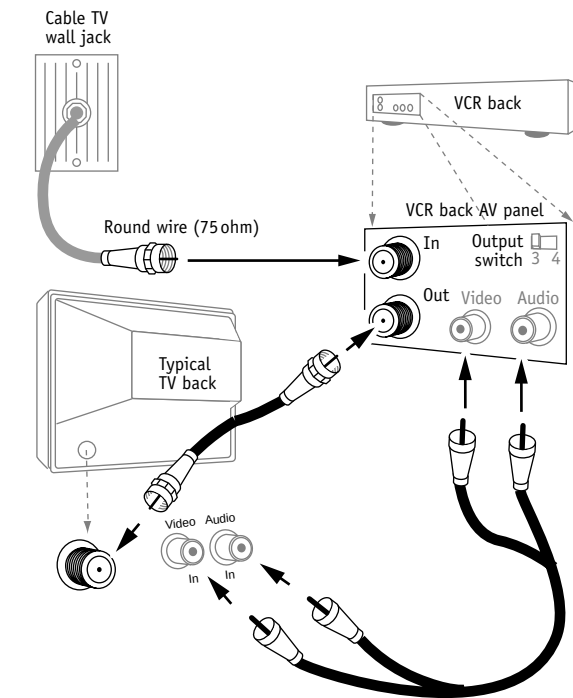

Cable Service with a Cable Box and Audio/Video Cables

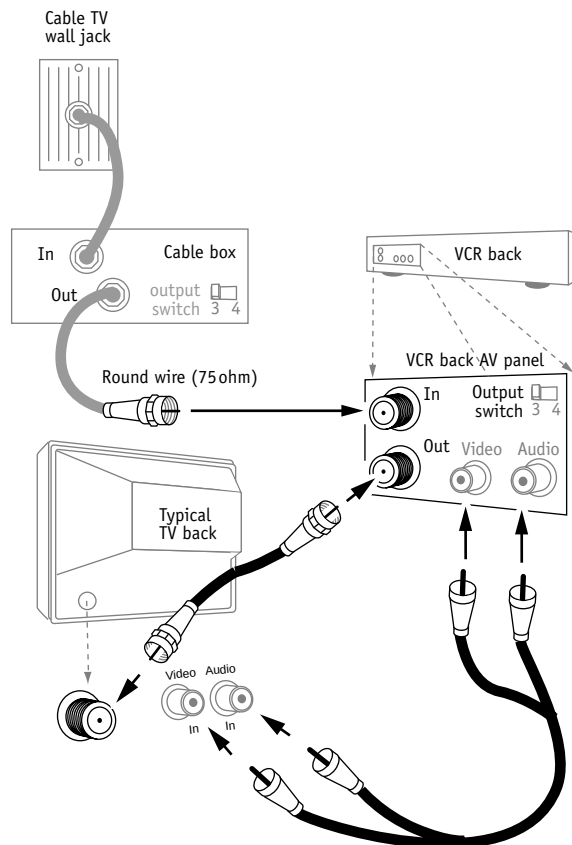

Connect
your VCR and
Cable to your
Entertainment
Machine.

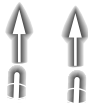


*Leave your VCR and your television
tuned to channel three and use
the cable box to change channels.*



*Remember, when screwing in RF
cables onto jacks, clockwise tight-
ens, and counterclockwise loosens.*




*No A/V cables are included with
your Zenith Entertainment
Machine.*

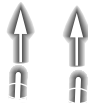

Antenna (Select Air or Cable Service)

Select your antenna setup before using Auto Program (Channel Search).


- 1** Press MENU to access the feature selection Menu.
- 2** Using the UP/DOWN Select arrows, choose Setup.
- 3** Press the RIGHT Adj arrow to access the Setup Menu.
- 4** Using the UP/DOWN Select arrows, choose Antenna.
- 5** Press a RIGHT/LEFT Adj arrow to choose Off-Air-Antenna, or Cable TV if you subscribe to cable service.
- 6** Go to page 9.

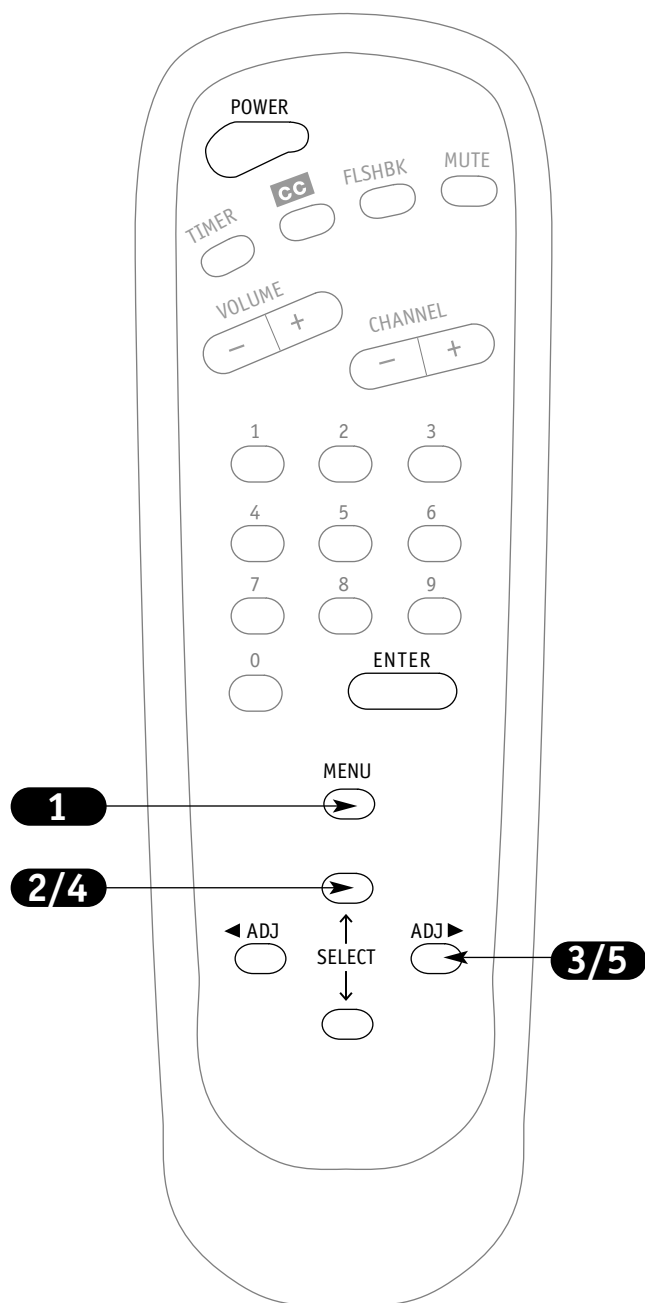

Mini glossary


Antenna	Specifies what type of incoming signal your TV will be receiving.
AIR	Signal is received by an over the air antenna.
CABLE	Pay TV Signal is provided by a cable service.

Select the
type of
signal your
Entertainment
Machine will
receive.

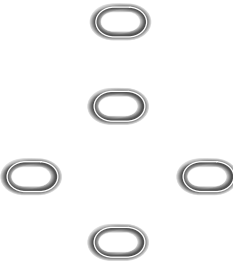

Auto Program


- 1** Press MENU to access the feature selection Menu.
- 2** Using the UP/DOWN Select arrows, choose Setup.
- 3** Press the RIGHT Adj arrow to access the Setup Menu.
- 4** Using the UP/DOWN Select arrows, choose Auto Program.
- 5** Press the RIGHT Adj arrow to begin the channel search.
- 6** When the channel search is complete, you can choose a channel for TV viewing.

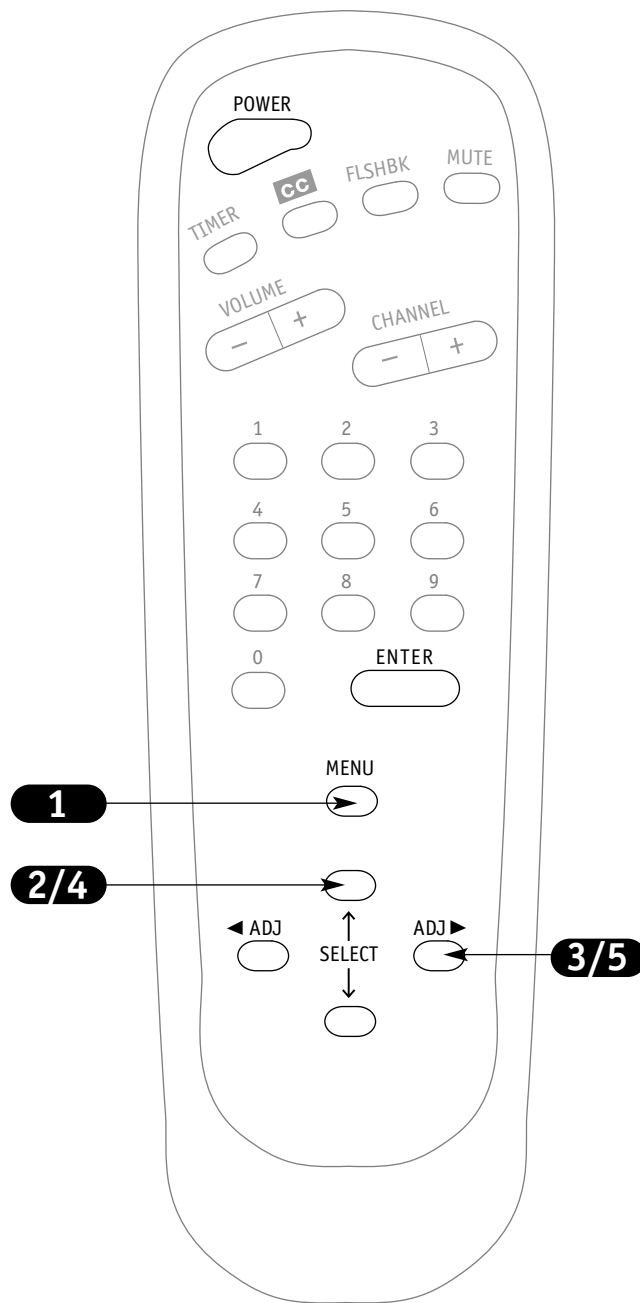

Mini glossary

AUTOPROGRAM Auto Program is how your Entertainment Machine finds all the channels available in your area and stores them into memory.

Use Auto
Program to
automatically
find and
store all of
the stations
available in
your area.

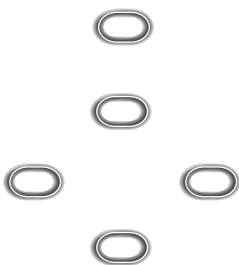


Front Panel Controls

When using the on-screen menus, the buttons on the front panel correspond to the remote control keys as follows:


VOLUME = Adjust Left/Right
CHANNEL = Select Up/Down

- 1** To access the menus, press the MENU button
- 2** Choose the function you wish to change using the CHANNEL UP/DOWN Select buttons. The Channel buttons act as a "Select" (Up/Down) function.
- 3** The VOLUME buttons act as an "adjustment" (Left/Right) function. Use the VOLUME buttons to make changes or adjustments.

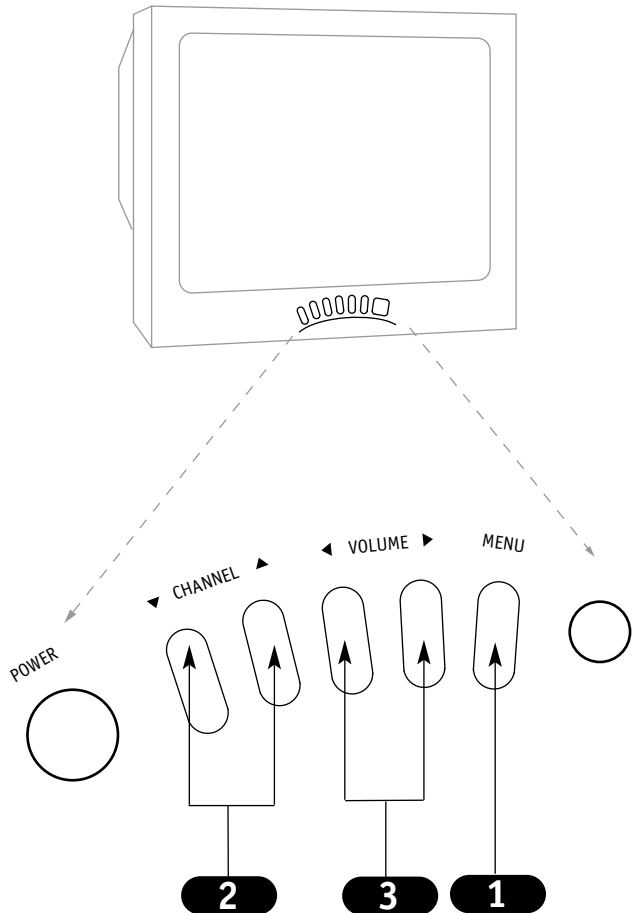

Typical TV Front Panel Controls

How to use
your six-
button panel
to operate
the menus.

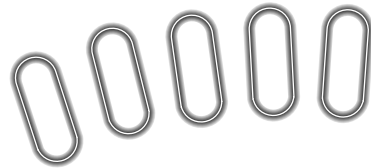


*Menus disappear after five seconds.
To get them back, push the MENU
button again. Your front panel
may differ from this one but its
functions are the same.*



*Lost remote? You'll want to get a
new remote; call 1-800-255-6790
to purchase a replacement.*

The Keys on Your Remote

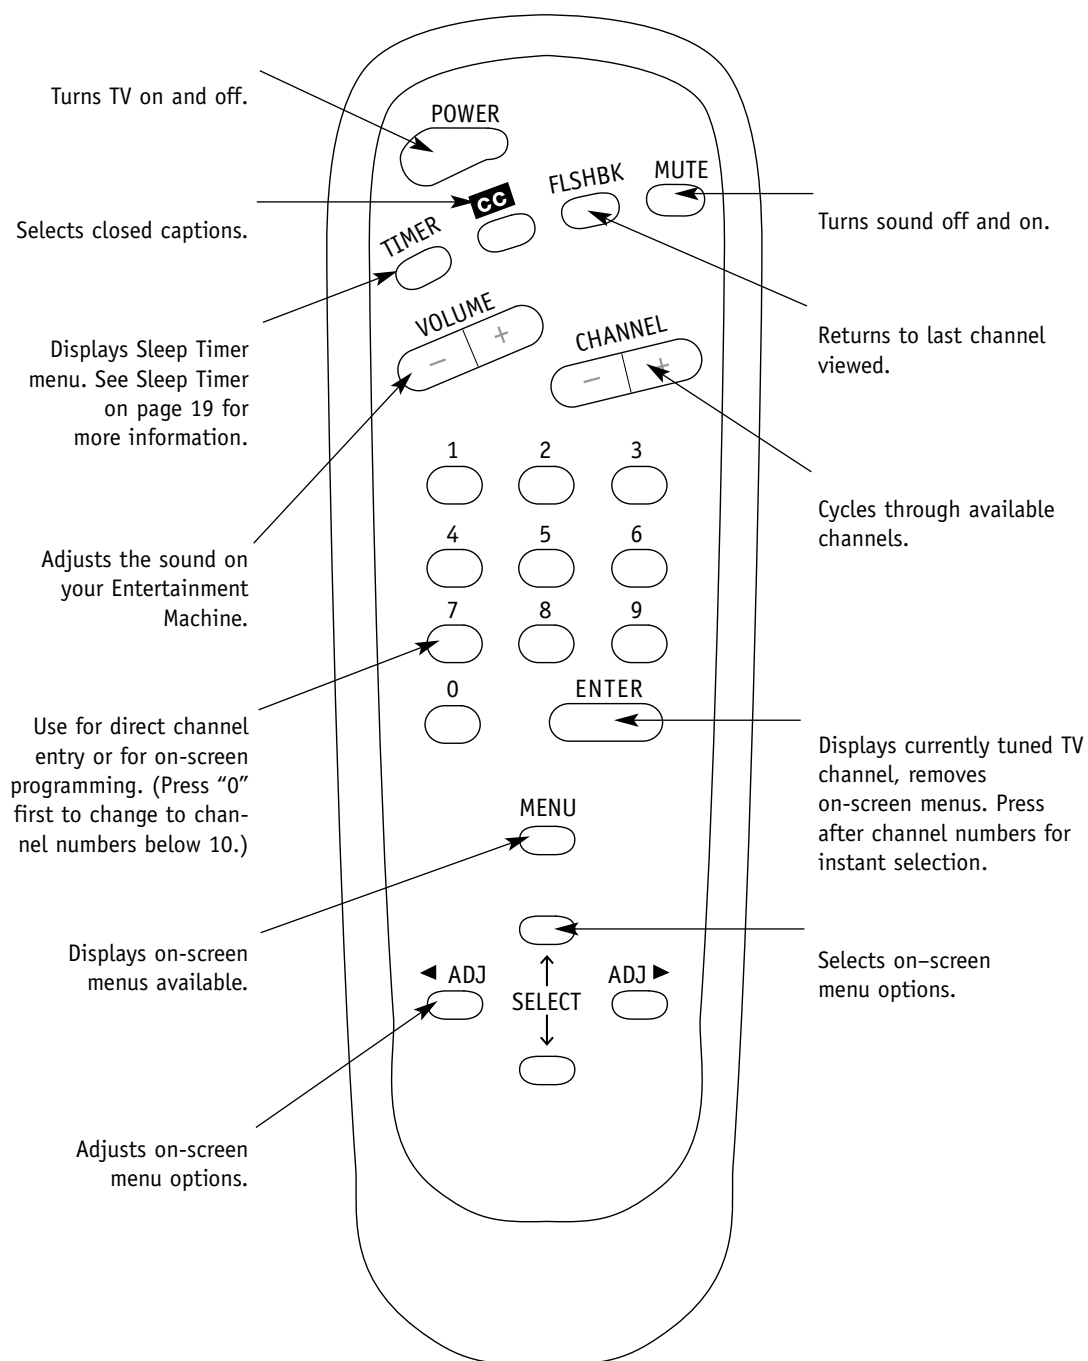

remote control part number

124-00213-16

A quick list
of the keys on
your remote
and what
they do.

Power

CC

Timer

Volume(Up/Down)

Number Key Pad

Menu

Adj Left/Right Arrows

 
Mute

Flashback


Channel(Up/Down)

Enter

Select Up/Down Arrows

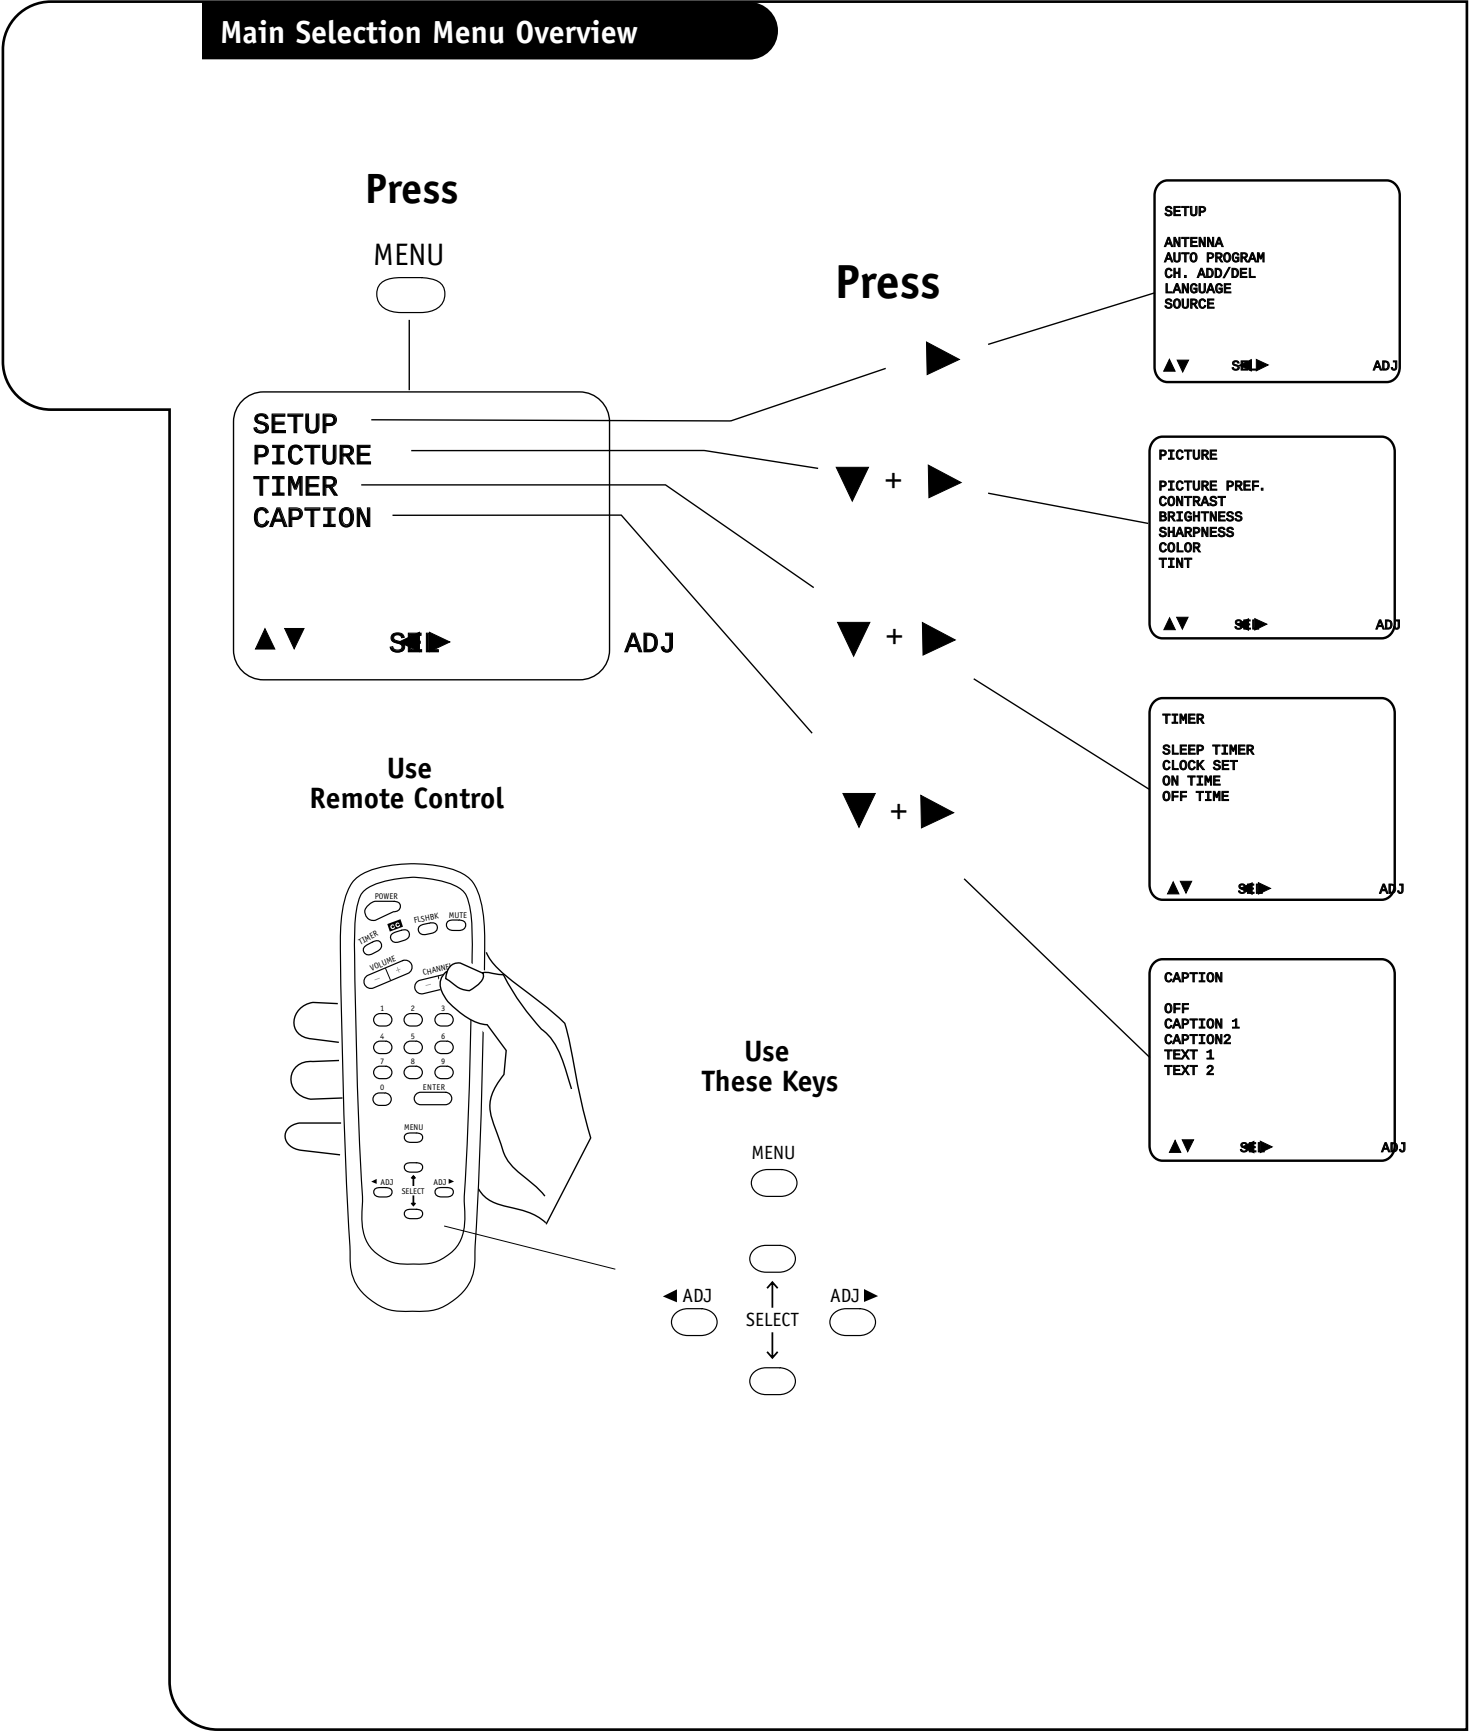

On-Screen
menu
operation
overview.

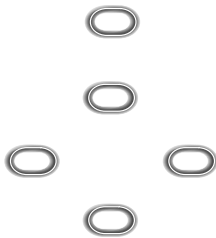 

Basic Television Operation

Channel/Time

Pressing the ENTER key will show the Channel display; the currently selected channel.

02

Channel or Video
(Indicates Source)

Channel Changing

CHANNEL UP/DOWN arrows: Use these arrows to change the channels. Auto Program will have found all channels available to you.

NUMBER Key Pad: To skip to any channel, enter the number of the channel using the NUMBER key pad, then press ENTER. Press "0" first for channel numbers under 10.


FLASHBACK: To instantly return to the last channel viewed, press FLASHBACK.

Audio

Volume Right/Left: To adjust the volume level, use the volume Right/Left arrows. To silence your TV instantly, press MUTE. To get the sound back, press MUTE again.

Source

Use the Source menu to choose either Ant/Cable or Video as the "Source" of the TV picture and sound.

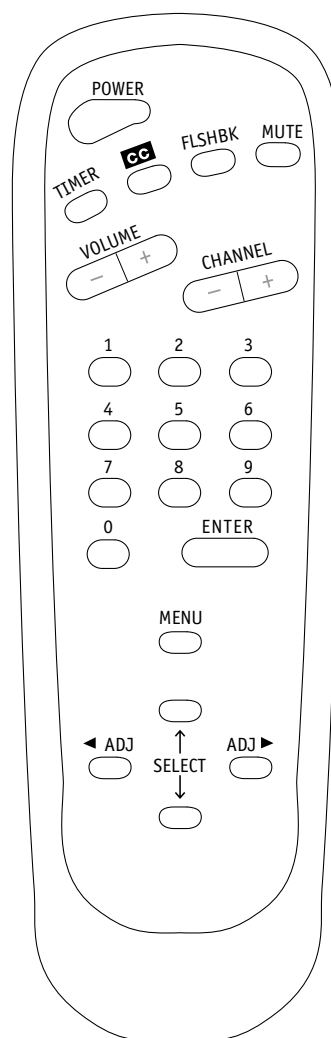

Introducing
you to the
basics of your
Entertainment
Machine.



To view the current input source, press ENTER on your remote. The Channel display should appear in the upper-right hand corner of the screen. If the display reads 'Video,' then the source is an A/V input. If the display reads a channel number, then the source is your Cable or Antenna.

On-Screen Menu Overview

Menu Name	Go to page
	Adjusts the basic characteristics of your Entertainment Machine.
Antenna	Choose Air, or Cable if you subscribe to cable service. 8
Auto Program	Automatically finds and stores active channels to flip through using Channel Up/Down. 9
Ch. Add/Del	Manually picks and chooses which active channels will appear when flipping through using Channel Up/Down. 15
Language	Picks the language you want your on-screen menus to appear in. 16
Source	Chooses from the available sources. 17
	Adjusts your picture for any viewing situation. Your options are: Picture Pref., Contrast, Brightness, Sharpness, Color, and Tint. Goes beyond basics and customizes your Entertainment Machine. 18
	Programs a time for your Entertainment Machine to turn itself on or off, or to turn itself off after a certain amount of time.
Sleep Timer	Automatically turns TV off after a specified period of time has past. 19
Clock Set	Sets the time. 20
On Time	Automatically turns TV on. 21
Off Time	Automatically turns TV off. 21
	Chooses the captioning or text options for your Entertainment Machine. Options are: Off, Caption1, Caption 2, Text 1, or Text 2. 22

Mini glossary

SETUP	Customizes the basic features of your Entertainment Machine.
PICTURE	Personalizes the picture image.
TIMER	Sets the clock and on/off options
CAPTION	Selects Caption and Text options.

Descriptions
of the menus
on your
Entertainment
Machine.

Using the Menu key, Select Up, and Down arrows, Adj (Adjust) Left, and Right arrows on your remote, you can access all the menus below.

SETUP


PICTURE

TIMER

CAPTION

Ch. Add/Del

- 1** Select a channel using the number keypad, or Channel Up/Down.
- 2** Press MENU to access the feature selection Menu.
- 3** Using the UP/DOWN Select arrows, choose Setup.
- 4** Press the RIGHT Adj arrow to access the Setup Menu.
- 5** Use a UP/DOWN Select arrow to choose Ch. Add/Del.
- 6** Press the RIGHT/LEFT Adj arrow to choose Added or Deleted.
- 7** Press ENTER to remove menu and return to TV viewing, or repeat steps 1 through 7 to Add/Delete other channels.

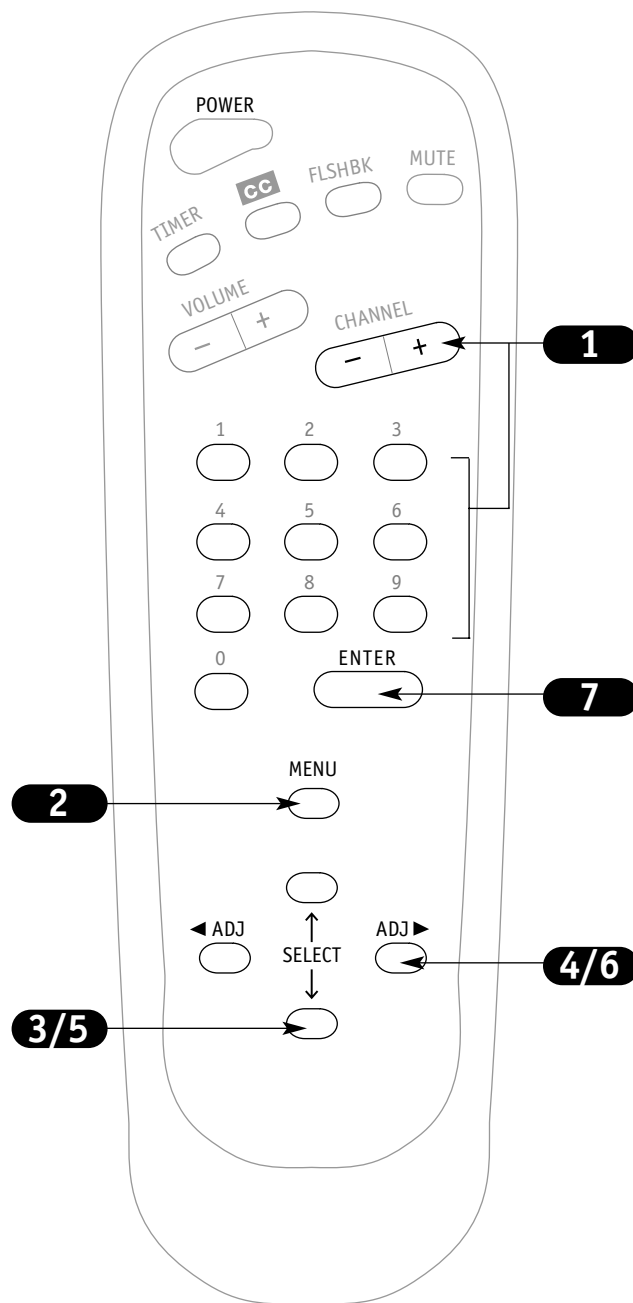

Mini glossary

- ADD** This function lets you add new channels to the list that you'll scroll through when using your remote.
- DELETE** This function lets you remove channels that you don't watch from the list you'll scroll through.


Customize
your channel
selection.



*You can add or delete a channel
without the remote control.
Please refer to page 10 on work-
ing the menus with the buttons
on the front of your
Entertainment Machine.*




*If you delete a channel, it isn't
gone for good. Just select it using
the NUMBER keypad on the
remote, or add it later.*

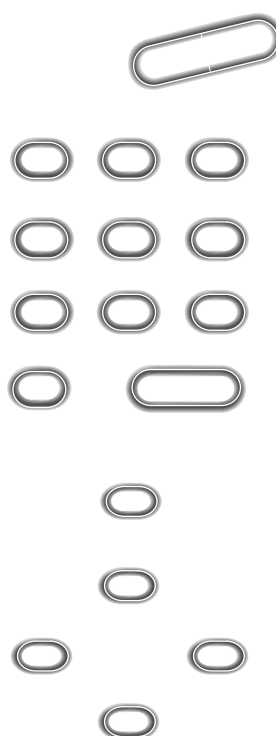


Language Menu

- 1** Press MENU to access the feature selection Menu.
- 2** Using the UP/DOWN Select arrows, choose Setup.
- 3** Press the RIGHT Adj arrow to access the Setup Menu.
- 4** Using the UP/DOWN Select arrows, choose Language.
- 5** Use the RIGHT Adj arrow to choose English, Spanish, or French.
- 6** Press ENTER to remove menu and return to TV viewing.

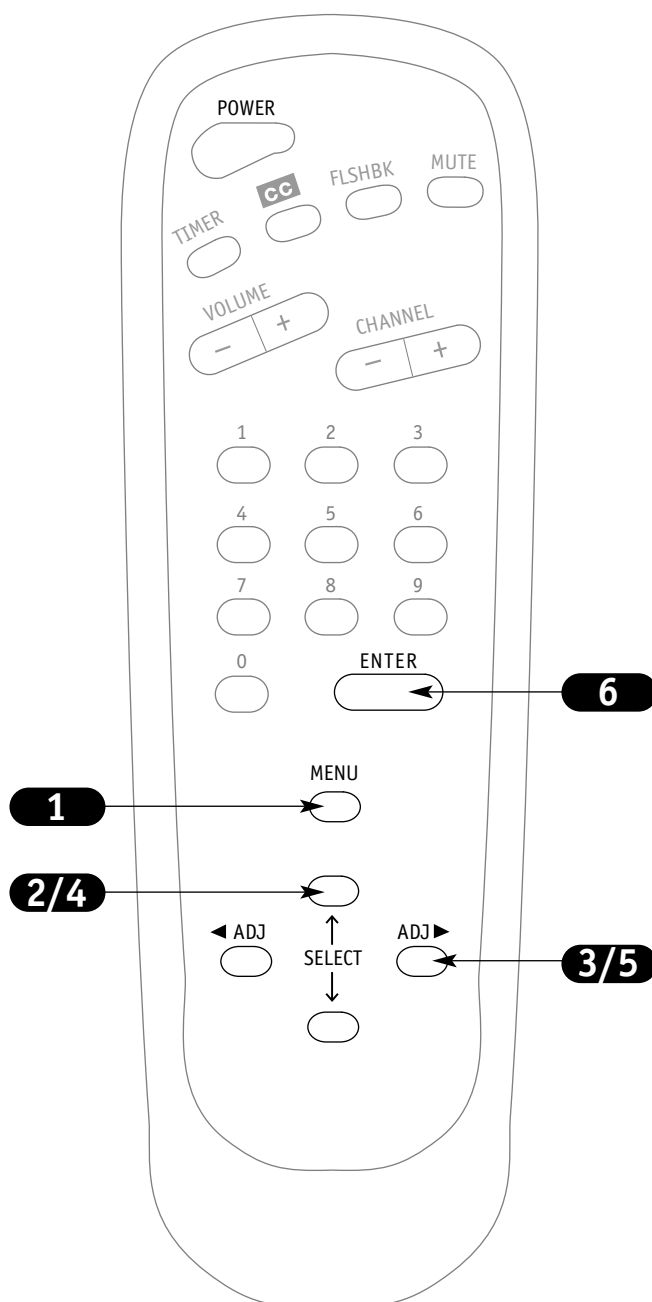


Choose the language you want all the menus to appear in.

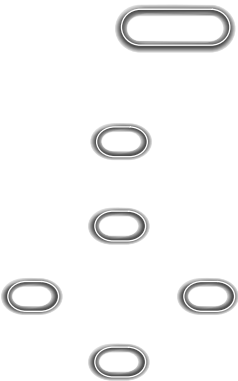

Source


- 1** Press MENU to access the feature selection Menu.
- 2** Using the UP/DOWN Select arrows, choose Setup.
- 3** Press the RIGHT Adj arrow to access the Setup Menu.
- 4** Using the UP/DOWN Select arrows, choose Source.
- 5** Press the RIGHT Adj arrow to choose Ant/Cable or Video.
- 6** Press ENTER to remove menu, and return to TV viewing.

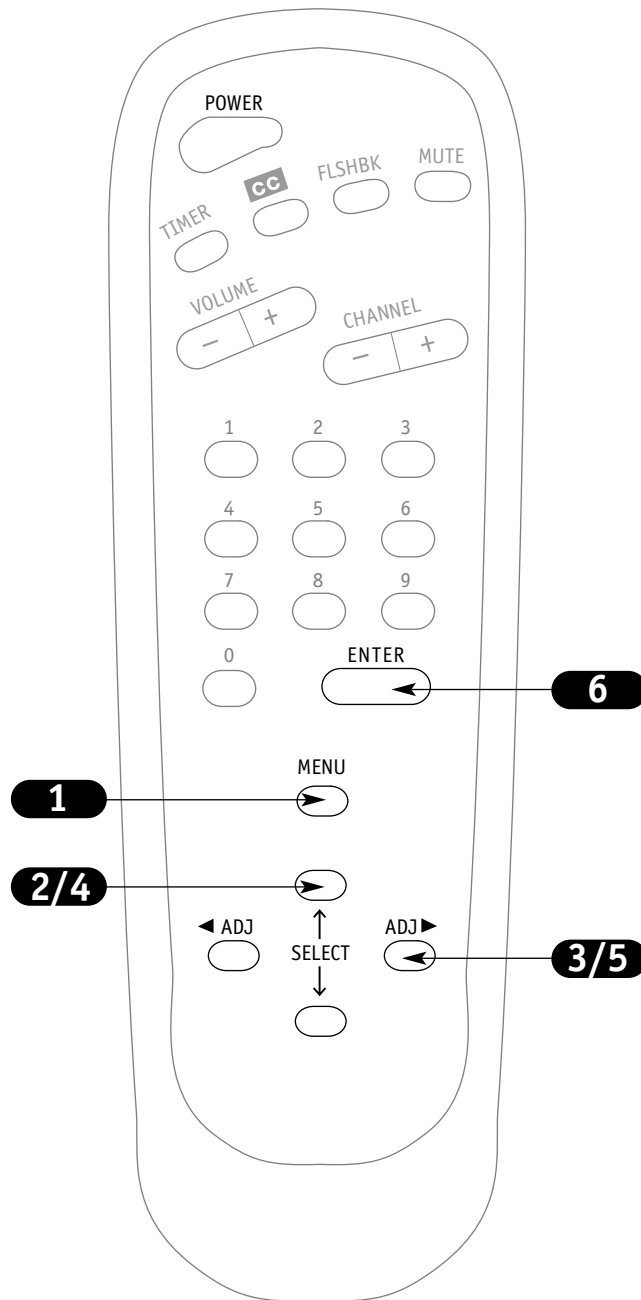

Select your
viewing
source.



*The video source's picture and
sound will not appear unless it is
connected and turned on.*

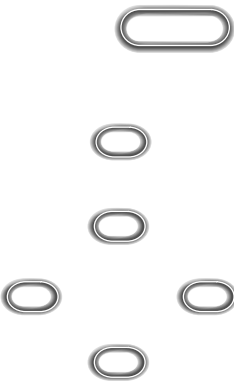

Picture

1

Press MENU, then use the DOWN Select arrow to choose Picture. Press the RIGHT Adj arrow to access the Picture Menu. Your options are:

- **Picture Preference:** Choose either Custom or Preset. Custom allows you to set the picture the way you want. Preset moves all the options back to their original, factory-set levels.
- **Contrast:** Adjusts the level of difference between white and black in the TV picture. The more contrast, the brighter the picture appears.
- **Brightness:** Increases or decreases amount of white in the TV picture.
- **Sharpness:** Raise or lower the definition of the TV picture. The lower the level, the softer the images will appear.
- **Color:** Adjusts levels of all colors in the TV picture.
- **Tint:** Balance between amount of red and green in the TV picture.

2


Using the UP/DOWN Select arrows on the remote control, choose a menu option and customize the picture.

3


Press and hold the RIGHT or LEFT Adj arrows to adjust the option to your preference.

4

Press ENTER to remove menu, or repeat steps two and three to adjust the other menu options.

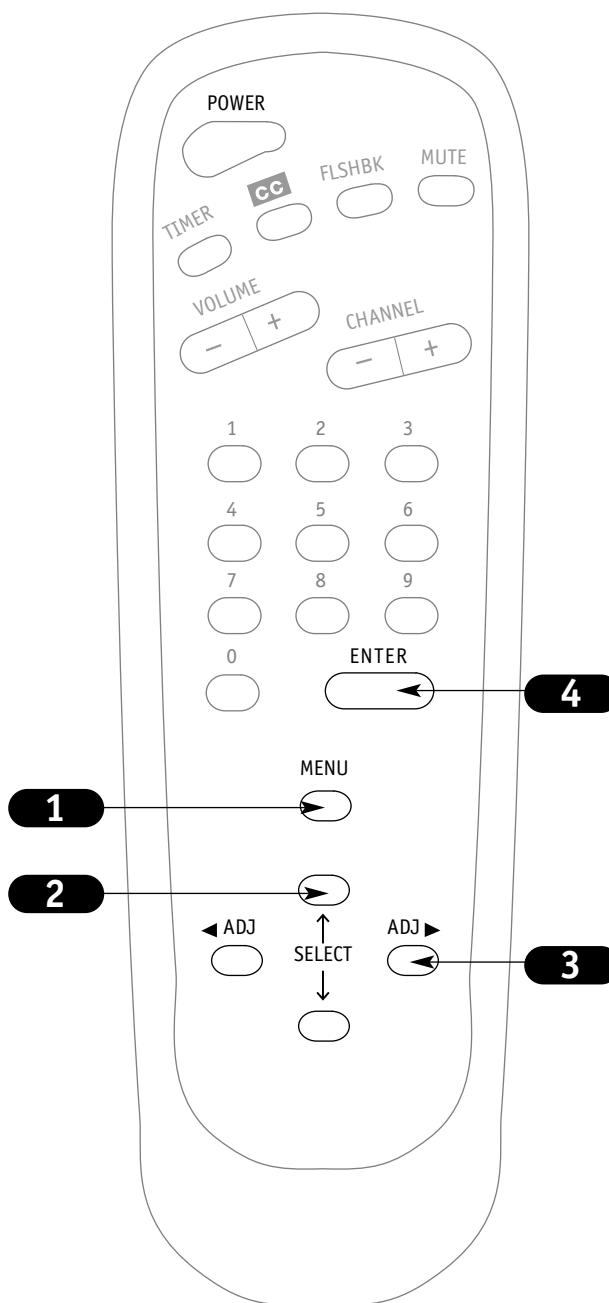

Customize the
way your
picture
looks using
the Picture
menu.

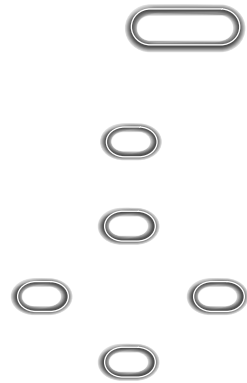


*Someone left the picture looking terrible?
Just choose the Preset option in Picture
Preference to quickly reset the levels.*


Sleep Timer

Press **TIMER** repeatedly to set the number of minutes before the TV turns itself off.
-- or --

- 1** Press MENU, then use the DOWN Select arrow to choose TIMER.
- 2** Press the RIGHT Adj arrow to access the Timer menu.
- 3** Use the DOWN Select arrow to choose Sleep Timer.
- 4** Press the RIGHT/LEFT Adj arrow repeatedly to choose the time that the TV will remain on.
- 5** Press ENTER to remove menu.

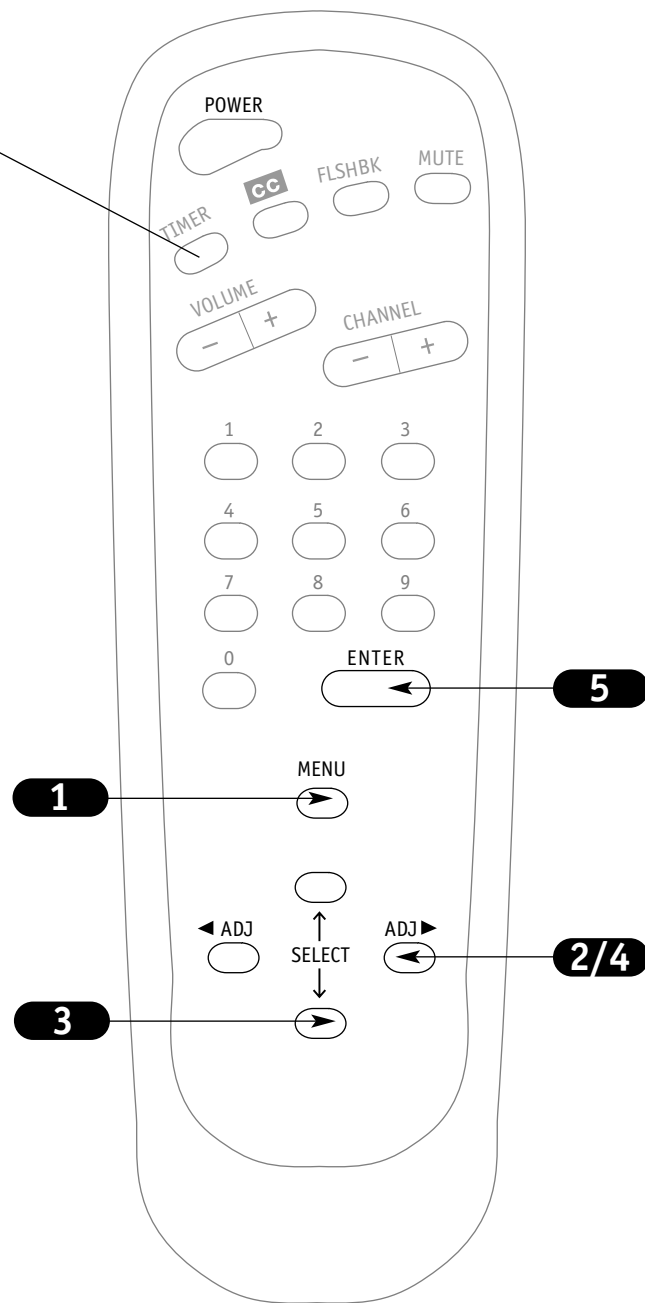

Automatically
turns your
Entertainment
Machine off.

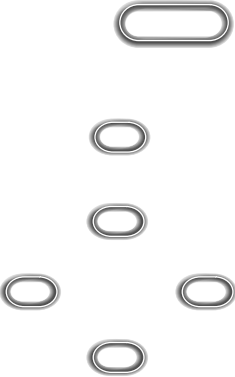

Clock Set

- 1

Press MENU.
- 2

Use the DOWN Select arrow to choose TIMER.
- 3


Press the RIGHT Adj arrow to access the Timer menu.
- 4

Use the DOWN Select arrow to choose Clock Set.
- 5

Press and hold down the LEFT ADJ arrow until the hours and AM or PM are selected.
- 6

Use the RIGHT arrow to set the minutes by pressing and holding it down until current minutes are selected.
- 7


Press ENTER to remove menu.

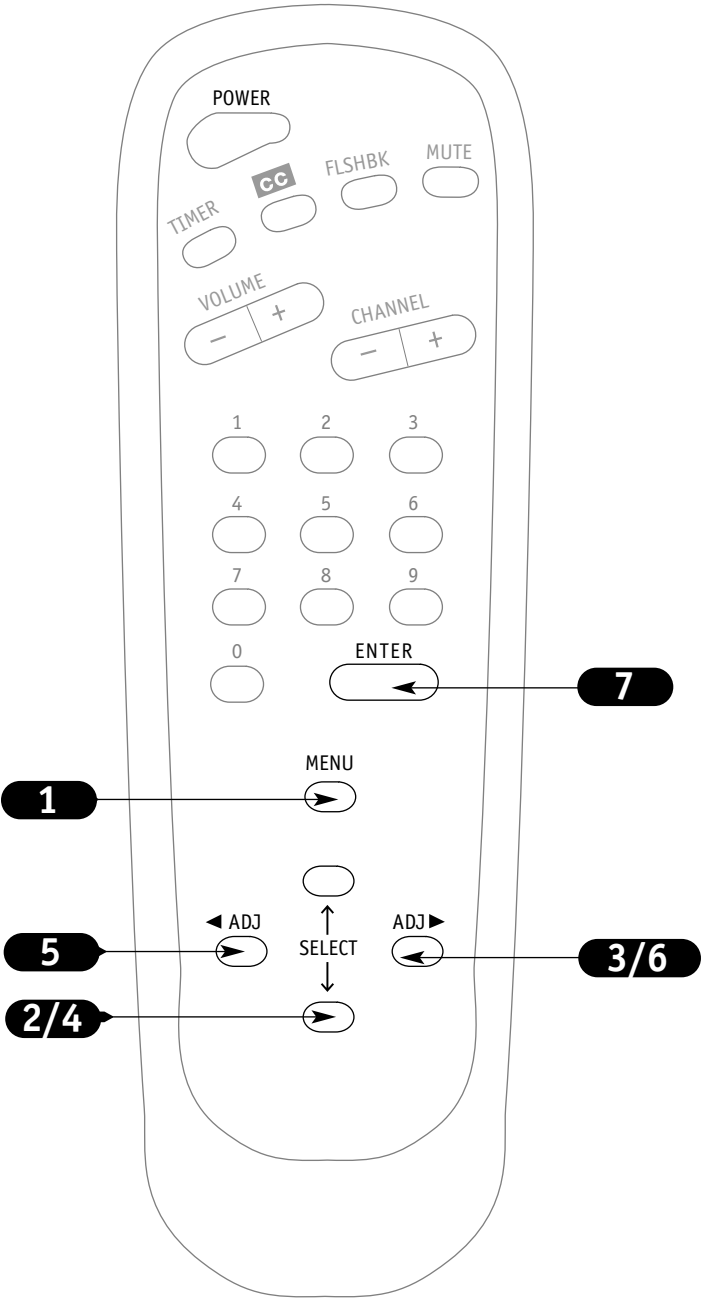

Set the clock
on your
Entertainment
Machine.




*You can use the NUMBER keypad to
simply type in the time (AM or
PM is still selected with the
Timer key).*

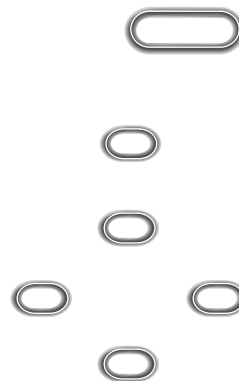

On/Off Timer

- 1** Press MENU.
- 2** Use the DOWN Select arrow to choose TIMER.
- 3** Press the RIGHT Adj arrow to access the Timer menu.
- 4** Use the DOWN Select arrow to choose On Time.
- 5** Press and hold down the LEFT Adj arrow to set the hours and AM or PM that the TV will turn on.
- 6** Press and hold down the RIGHT Adj arrow to set the minutes that the TV will turn on.

Repeat the above steps to choose Off time and set the time the TV will turn off.
- 7** Press ENTER to remove menu.

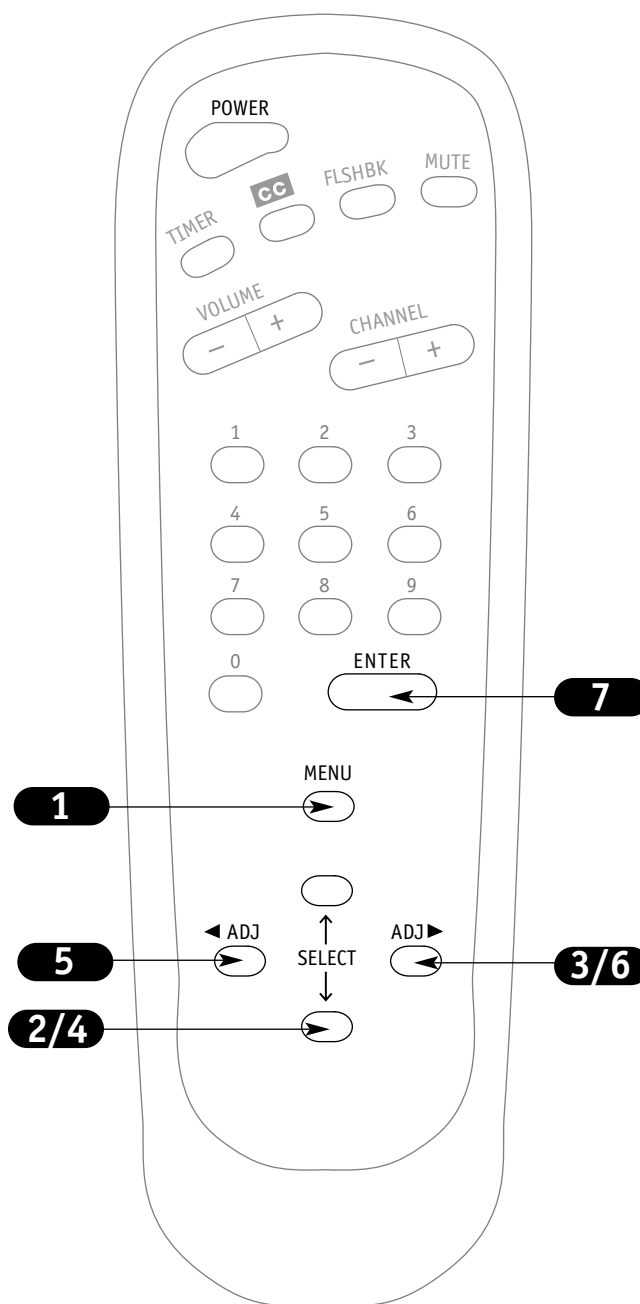

Mini glossary


ON TIME Time TV will automatically turn on.

OFF TIME Time TV will automatically turn off.

Set the time
your
Entertainment
machine will
automatically
turn on and
off.




*The On/Off timer will not work
until the Clock on your television
has been set.*

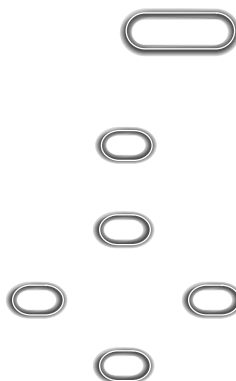

Captions and Text

Press **CC** repeatedly to choose your Captions option:
Off, Caption 1, Caption 2, Text 1, or Text 2.
-- or --

- 1** Press MENU.
- 2** Use the DOWN Select arrow to choose Caption.
- 3** Press the RIGHT Adj arrow to access the Caption menu.
- 4** Use the DOWN Select arrow to choose: Off, Caption 1, Caption 2, Text 1, or Text 2.
- 5** Press ENTER to remove menu.

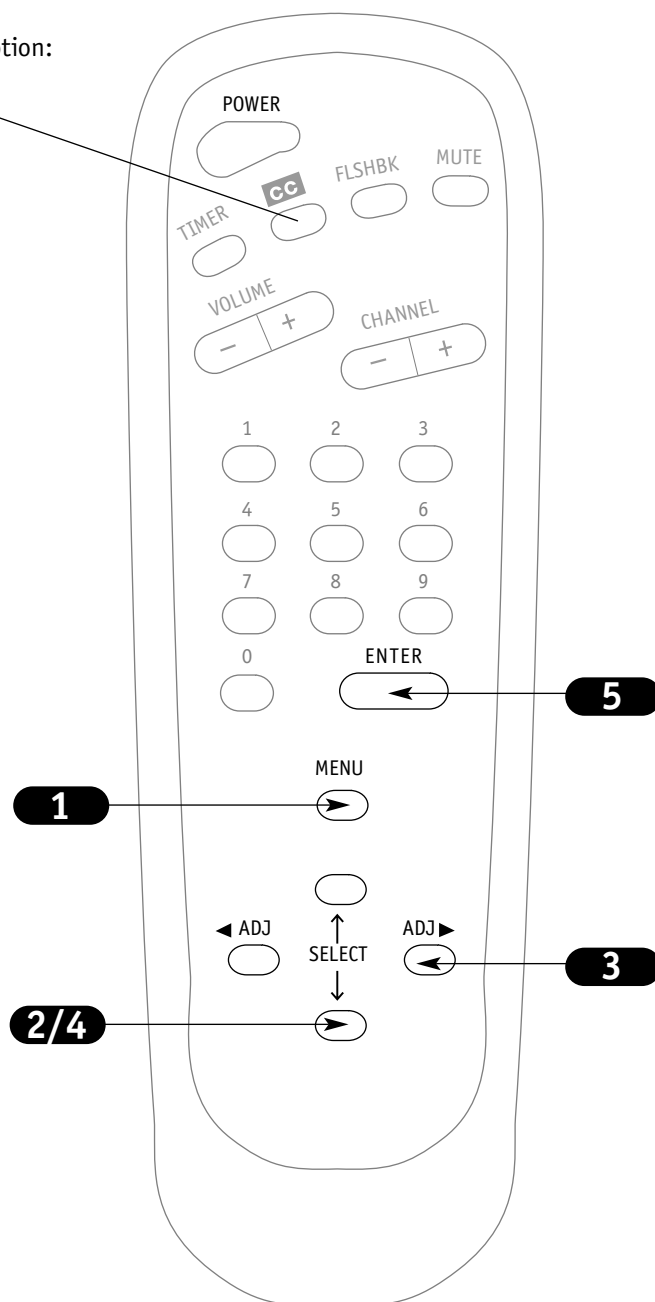

If available on broadcast, turns on closed captioning or text that appears at the bottom of your screen.




Captions come in handy when the television is on mute.



Standard Closed Captioning is available using the Caption 1 option.



Not all programming has closed captioning or text available.

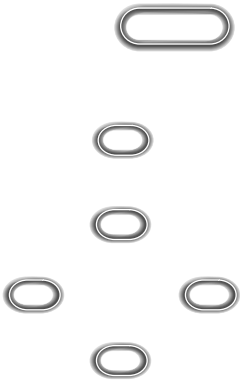

Maintenance

Screen Cleaning

1. Here's a great way to keep the dust off your screen for a while. Wet a soft cloth in a mixture of lukewarm water and a little fabric softener or dish washing detergent. Wring the cloth until it's almost dry, and then use it to wipe the screen.
2. Make sure the excess water is off the screen, and then let it air-dry before you turn on your Entertainment Machine.

Cabinet Cleaning

1. Use a soft cloth with a mild soap solution to wipe the cabinet (avoid using any cleaner that says "industrial strength" on the label).
2. Rinse the cloth and wipe the cabinet again.
3. Let the cabinet air-dry before turning the Entertainment Machine on.

Wood Cabinets

Use a quality wood cleaner and polish. This will protect the Entertainment Machine from dirt and dust, as well as keep the cabinet looking new.

Extended Absence

If you leave your Entertainment Machine dormant for a long time (such as a vacation), it's a good idea to unplug the power to protect against possible damage from lightning or power surges. If you use an off-air antenna, you may also want to disconnect it from the back of your TV before leaving.

**Caring
for your
Entertainment
Machine.**

Early malfunctions can be prevented. Careful and regular cleaning can extend the amount of time you will have with your new Entertainment Machine. Be sure to turn the power off and pull out the plug before you begin any cleaning.



If you unplug your Entertainment Machine, you may have to reset the clock using the Clock Set menu described earlier.

Troubleshooting

SYMPTOMS	SOLUTIONS
Snowy picture and poor sound.	• Check your antenna connection or location.
Multiple images or 'ghost shadows.'	• Check your antenna direction and/or location. • Make sure the wire from your antenna to your Entertainment Machine is properly connected.
Interference: Sharp lines across the screen and poor sound.	<i>The following may cause image problems or distortion: Electrical appliances, powerful lights, cars, trucks; Computers or portable phones; Medical equipment</i> • If possible increase the distance between your Entertainment Machine and the offending appliance. Or shut one of them off.
Normal picture but no sound.	• Check volume control. • Make sure the TV is not muted. • Try another channel. The problem may be the broadcast, not your Entertainment Machine. • Are the Audio A/V cables properly installed?
No picture and poor sound.	• Are you in TV or cable tuning mode (See Antenna/Auto Program on page 8, 9), and should be in the other? • Make sure output channels on all A/V equipment are on the same channel (3 or 4). • Check that all connections are tight.
No picture and no sound —	• Is the AC power plugged in? • Check that your AC power outlet works. (Test it by plugging in something else or try another outlet.) • Make sure your brightness and audio controls are set properly. • Try another channel. The problem may be with the broadcast.
No color, but the sound is O.K.	• Check the color control in the Picture menu. • Try another channel. The problem may be with the broadcast.
Picture has a big black box on it, but the sound is O.K.	• The CC (closed caption) option may be in Text mode. Select OFF in the Captions/Text menu (see page 22).
Picture has two horizontal black bars, one on top and one on bottom.	• Your program is in letterbox. This means that the shape of your TV is a square, but the program is a rectangle. Think of the bars as empty space the program doesn't fill; not picture that's blocked out. Because this format is a direct representation of film as you see it in the movies, you are actually seeing MORE of the program when you see those bars. Trust us.
Remote control doesn't work.	• Make sure the batteries are fresh and installed properly; matching + with + and - with - in the battery compartment.
Menu options won't change.	• Try unplugging the TV, waiting about five minutes, and then plugging it back in and trying again.

Some quick
and easy
tips to fixing
problems
yourself



If all else fails unplug the TV for 5 minutes. If that doesn't work, call 1.847.391.8752, extension 5, between 8:30 am and 4:30 pm Central Standard Time.

Glossary

75 OHM RF CABLE	The wire that comes from an off-air antenna or cable service provider. The end looks like a hex-shaped nut with a wire sticking through the middle. It screws onto the threaded jack on the back of your TV.
300 TO 75 OHM ADAPTER	A small device that connects a two-wire 300 ohm antenna to a 75 ohm RF jack. They are usually about an inch long with two screws on one end and a round opening with a wire sticking out on the other end.
A/V CABLES	Audio/Video cables. Two cables —audio and video. A/V cables are used for higher quality picture and sound from other A/V devices.
A/V DEVICE	Any device that produces video or sound (VCR, DVD, cable box, or television).
ADD	This function lets you add new channels to list that you'll scroll through when using your remote.
AMPLIFIER	An external machine that amplifies sound from a television, CD player, VCR, DVD or other A/V device.
ANTENNA	The physical receiver of television signals sent over the air. A large metal piece of equipment does not always have to be visible for your home to be using an antenna.
AUTO PROGRAM	Auto Program has your TV automatically find all the channels available in your area.
DELETE	This function lets you remove channels that you don't watch from the list you'll scroll through using your remote.
INPUT	Refers to the jack that receives a signal from a TV, VCR or other A/V device.
JACK	A connection on the back of a TV, VCR, or any other A/V device.
MONO SOUND	Mono (monaural) sound is one channel of sound. On more than one speaker, all the speakers play the same audio.
OUTPUT	Refers to the jack that sends a signal out of a VCR, DVD, or other A/V device.
SIGNAL	Picture and sound traveling through cable, or on the air, to your television screen.
TUNER	Device that picks up the signal and turns them into picture and sound. The television, VCR, or cable box that you choose to change channels with.

A list of
definitions
for words
found in
this guide.

Index

Antenna	4, 6, 8
Auto Program	8, 9
Audio	6, 7, 11, 13
Basic Television Operation	13
Batteries	4-7
Button Functions	10, 11
Cable/Cable Box Hook-ups	5, 7
Captions and Text Menu	22
Ch. (Channel) Add/Del.	15
Clock Set	20
Front Panel Controls	10
Glossary	25
Hook-Up Directory for VCRs, Cable Service and Accessories	3
Language Menu	16
Maintenance	23
Menus Overview	14
Picture Menu	18
Remote Control Key Functions	11
Safety Information	2
Serial Number	2
Setup Menu	8, 9, 15, 16, 17
Timer Menu	19, 20, 21
Troubleshooting	24
VCR Hook-ups	6, 7
Video Menu	18
Warranty	28

Find what you
want quickly.

FEATURE. PAGE

Recommended Audio/Video Accessories



STEREO SURROUND SOUND SPEAKERS

For use with any Surround Sound compatible TV. These speakers create a sound so real, it's as if you were part of the action. The convenient, space-saving shelf design make these speakers an ideal addition to any Home Theater System. The contemporary black finish complements any room.

CV5000 ONLY \$224.95 PLUS \$17.95 SHIPPING & HANDLING

REPLACEMENT REMOTE

Broken or lost remote? Perhaps you would just like the convenience of having a second remote on hand. Order your replacement remote control direct from Zenith! To ensure that you receive the correct remote, have your television's model number ready when you call.

ONLY \$39.95 PLUS \$4.95 SHIPPING & HANDLING



**ORDER TODAY!
CALL TOLL-FREE
1.800.255.6790**

zenith



Use Your Visa or MasterCard to Order

PLEASE ALLOW 3 - 4 WEEKS FOR DELIVERY

Your Zenith Warranty

Direct-View Color TV Welcome to the Zenith family! We believe that you will be pleased with your new Zenith Entertainment Machine. Please read this warranty carefully, it is a "LIMITED WARRANTY" as defined under Federal Law. This warranty gives you specific legal rights, and you may also have other rights that vary from state to state within the U.S.A.

Service Labor During a period of 90 days from effective warranty date, Zenith will provide service labor by a Zenith authorized service center when needed, as determined by the Zenith service center, as a result of manufacturing defects.

Parts New or remanufactured replacements for factory-defective parts will be supplied by a Zenith authorized service center for one year from effective warranty date (color picture tube — two years). Such replacement parts are warranted for the remaining portion of the original warranty period.

Home Service Warranty service for 21" diagonal (U.S.A.) or larger screen size models is provided in the home in most cases. (Some repairs may require the unit to be taken by the servicer to the repair facility and returned, at no additional charge.)

Not Covered This warranty covers manufacturing defects and does not cover installation, adjustment of customer controls in the home, installation or repair of home antenna systems, cable converters or cable company-supplied equipment; it also does not cover damage due to misuse, abuse, negligence, acts of God or other causes beyond the control of Zenith. Any alteration of the product after manufacture voids this warranty in its entirety.

THIS WARRANTY IS IN LIEU OF ANY OTHER WARRANTY, EXPRESSED OR IMPLIED, INCLUDING WITHOUT LIMITATION, ANY WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE, AND ZENITH SHALL NOT BE LIABLE FOR ANY CONSEQUENTIAL, INDIRECT, OR INCIDENTAL DAMAGES OF ANY KIND, INCLUDING LOST REVENUES OR PROFITS IN CONNECTION WITH THIS PRODUCT.

Effective Warranty Date Warranty begins on the date of original consumer purchase. For your convenience, keep the dealer's dated bill of sale or delivery ticket as evidence of the purchase date.

Operating Guide Read your Operating Guide carefully so that you will understand the operation of your set and how to adjust the customer controls.

Carry-In Service Models under 21" diagonal (U.S.A.) screen size must be taken to a Zenith authorized service center for warranty service and must be picked up by the owner.

Antenna Reception problems caused by inadequate home antenna or faulty antenna connections are the owner's responsibility.

Important Product Registration—Please fill out and mail your Product Registration Card. It is imperative that Zenith know how to reach you promptly if we should discover a safety problem that could affect you.

Warranty Service For warranty service information, contact any Zenith authorized service center. Parts and service labor that are Zenith's responsibility (see above) will be provided without charge. Other service is at the owner's expense. If you have any problem in obtaining satisfactory warranty service, call or write the Zenith Response Center. You must provide the model number, serial number and date of purchase or date of original installation. Before you ask for warranty service, read "Maintenance And Troubleshooting" in your operating guide. You might avoid a service call.

ZENITH CONSUMER SERVICES

Factory Owned Service Center
Home & Carry-in Service
Television/VCR
Parts and Accessories
PTV/Computer
Service Contracts Hours:
M-F 8-6, Sat 9-2
801 E. Roosevelt Rd
Lombard, IL 630-705-2830

ZENITH ELECTRONICS CORPORATION

Zenith Response Center
1000 Milwaukee Avenue
Glenview, IL 60025-2493
Telephone (847)391-8752
Mon-Fri, 7:00 a.m.-8:00 p.m. CST
Sat, 8:00 a.m.-5:00 p.m. CST

IN CANADA, WRITE OR CALL US AT:

LG Electronics
235 Superior Blvd.
Mississauga, Ontario, Canada L5T-2L6
tel: (905)795-6240,
fax:(905) 670-2379

IN MEXICO, WRITE OR CALL US

LG Electronics
Av. San Andres Atoto, No 8
Col. San Andres Atoto, Naucalpan
Estado de Mexico,
C.P. 53500
tel: 01 (800) 50 481
y en el D.F. 359 43 55
fax 01 (800) 50 733
y en el D.F. 357 17 56

Additional Zenith Picture Tube Protection Plan Available

Zenith offers you the opportunity to obtain additional long-term protection against failure of the picture tube in your new television. Our Picture Tube Protection Plan enables you to avoid any unexpected picture tube repair expenses and keep your television in top condition. It guarantees you a genuine Zenith replacement picture tube and service from a Zenith authorized service center.

ZENITH RESPONSIBILITY

OWNER'S RESPONSIBILITY



Be sure to send in the Product Registration Card. We will send you an application for the Protection Plan near the expiration of the two-year manufacturer's warranty on the picture tube. For additional information call (847) 391-8757.