

 
Kusini

Make Delectable Memories

ELECTRIC S'MORES MAKER



Scanned + Archived
By:
FindMyManual.org

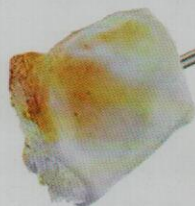


INSTRUCTIONS AND RECIPES


Before using: Read these instructions before using this unit

PARTS & ASSEMBLY

 
What includes

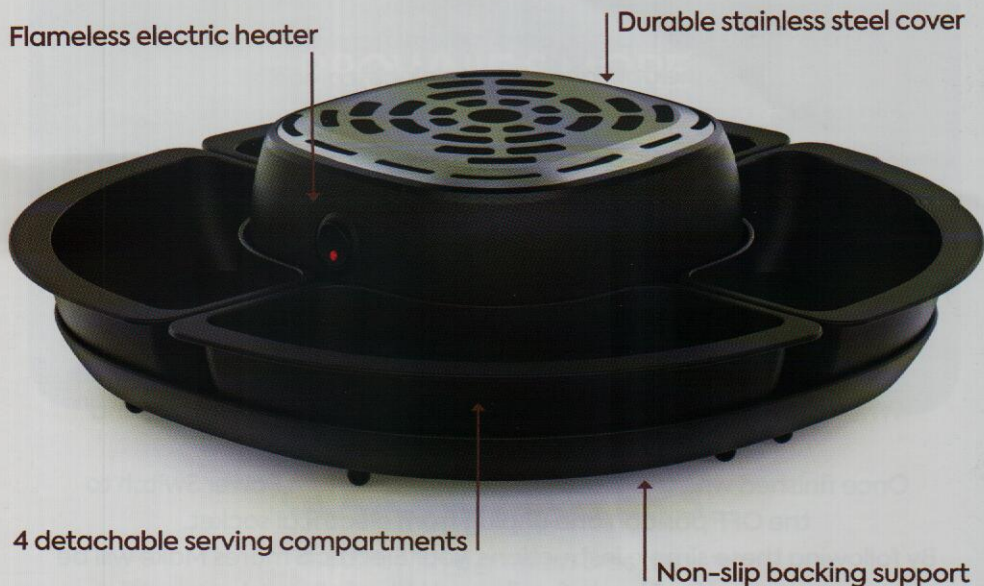

Assembly

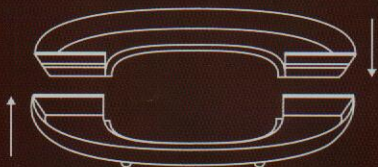

1. Put together the trays by clicking the 2 sides together.

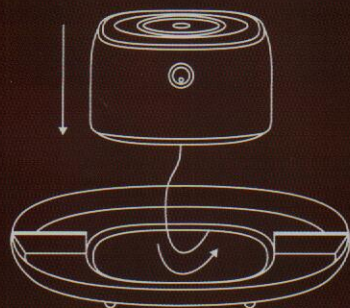

2. Thread the plug of the Electric S'mores Maker through the hole in the center of the tray.

3. Place the Electric S'mores Maker in the center of the tray.

How to operate

Place the Electric S'mores Maker on a flat, stable surface near an electrical outlet before starting.

Always make sure that the cord is away from any water source.

Plug the appliance into an electrical socket.

Fill the food compartments with marshmallows, graham crackers, chocolate, or other desired food items. **See recipes for existing ideas!**

Turn the Power Switch on the Electric S'mores Maker to "ON" position, Red light should turn on.

NOTE: After a period of time, the Heater and Top Cover may glow red hot. Push marshmallow into the tines (prongs) of the Roasting Fork provided. Hold the handle of the Roasting Fork and hold above the Heater; rotate frequently to ensure even heating.

When the marshmallow has been roasted to the desired color and doneness, it is ready to serve.

Once finished with the Electric S'mores Maker, turn Power Switch to the OFF position and unplug from electrical socket.

By following these simple instructions, your Electric S'mores Maker will be fun for friends, family, and kids of all ages!

Cleaning & Maintaining

Make sure the unit is unplugged before cleaning. Allow all parts to become COOL to the touch, especially the Heater and Top Cover.

To prolong the life of your Electric S'mores Maker, please follow these simple instructions for maintenance.

Turn Power Switch to OFF; position, unplug unit from the electrical socket before cleaning. Allow unit to cool for at least 20 minutes before cleaning. Top Cover will be hot to the touch.

Once appliance has cooled, remove the Top Cover from the Electric S'mores Maker. Clean with a soft, damp cloth, or wash in warm, soapy water and rinse.

Dry Electric S'mores Maker, and Top Cover, and Roasting Forks thoroughly before storage. Make sure the appliance has completely cooled and is dry before storing.

Never use abrasive cleaners on the unit.

Never place the "Heater" in a dishwasher. The Tray and Compartments are dishwasher safe.

NOTE : Do not submerge the heating part in water, as it is an electrical unit.

Try these fun recipes

BROWNIE S'MORE

1. Start with a Graham Cracker .
2. Add a Brownie next.
3. Squish your Marshmallow over the brownie.
4. Top it off with a second Graham Cracker.

COCONUT LOVER'S

 
1. Start with a graham cracker.
2. Place a Mounds Bar over it!
3. Add your marshmallow.
4. Sprinkle shredded coconut over top.
5. Finish it off with a second graham cracker.

THE KING


1. Start with a graham cracker.
2. Spread peanut butter over the cracker.
3. Layer slices of banana over top.
4. Add your marshmallow.
5. Finish your masterpiece with a second graham cracker!

PARTS & ASSEMBLY

What includes

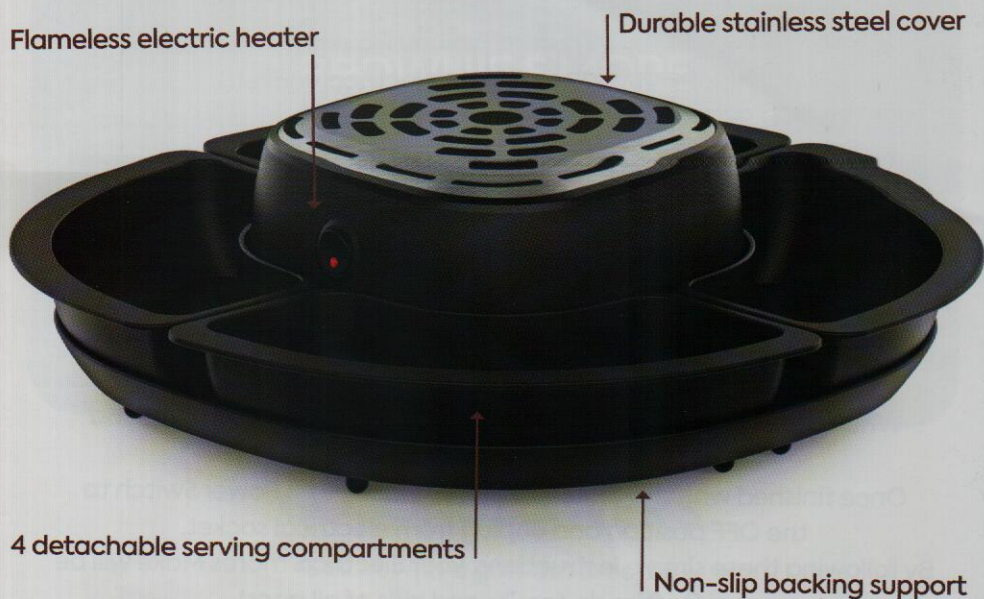


Assembly

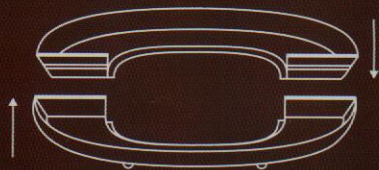 

1. Put together the trays by clicking the 2 sides together.



 2. Thread the plug of the Electric S'mores Maker through the hole in the center of the tray.

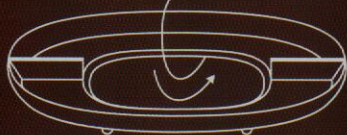

3. Place the Electric S'mores Maker in the center of the tray.



Kusini

Make Delectable Memories

THANK YOU FOR YOUR PURCHASE

Tag us with your unique
s'mores creations
#kusini #kusini_us



We would love to hear from you
Scan for easy feedback



Feel free to reach out with any
comments or questions.
We'd love to hear from you!

cs@kusinius.com
1(631) 316-8370