 




INSTRUCTION MANUAL

CAPSULE COFFEE MACHINE

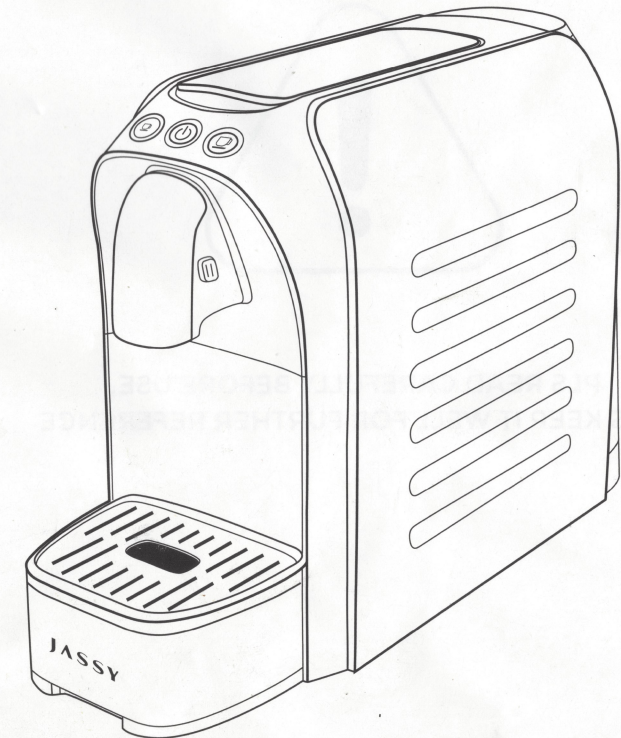

JASSY HOLDINGS (HONGKONG) LIMITED

Room B,19/F, Tower 3, China-Hong Kong City, 33 Canton Road,
Tsim Sha Tsui, Kowloon, Hong Kong, China

JS-200



PLS READ CAREFULLY BEFORE USE.
*PLS KEEP IT WELL FOR FURTHER REFERENCE

CONGRATULATIONS!

DEAR CUSTOMER:

We are delighted that you have chosen this Capsule coffee machine. If you have any questions about the device and about spare parts / accessories, contact the customer service department via our website: support@jassy-coffee.com. We will serve you whole heartedly.

MAIN PARAMETERS


MODLE NUMBER JS-200	PRODUCT NUMBER CJ-278B
TECHNICAL RATINGS 120V 60HZ 1255W	WATER TANK 700 ML
NET WEIGHT 3.14 KG	PRODUCT SIZE 12.6*4.7*9.1 INCH

SAFETY INFORMATION


- Do not place near flammable materials, gases or explosives.
- Make sure to assemble the machine correctly and then turn on the power.
- When disconnecting the power, turn the switch to "OFF", and then unplug.
- Do not pull the plug by pulling the power cord or machine.
- Please clean the machine regularly according to the prompts, otherwise it may adversely affect the machine life and may lead to dangerous situations.
- Make sure to keep a safe distance between hands and face during operation,as steam may overflow from the outlet or any other openings.
- Do not fill water over the "MAX" mark.
- Do not spill any liquid on the power cord.
- Use only the parts included with the machine.
- Do not move the machine during use.

- Please cool down the machine before moving it.
- Do not open the handle during brewing coffee.
- Read all the safety and operating instructions carefully and retain them for future reference.
- To ensure your children's safety, please keep all packaging (Plastic bags, boxes, polystyrene etc.) out of their reach.
- This appliance is intended to be used in household.
- Keep the appliance and its cord out of reach of children aged less than 8 year-old.
- This appliance can be used by children aged from 8 year-old and above if they have been given supervision or instruction concerning use of the appliance in a safe way and if they understand the hazards involved.
- When storing, repairing, or replacing parts, the machine must be disconnected from the power source.
- Please cool down the machine before replacing parts or cleaning the machine.
- In process of using, the surface of the machine may become hot.
- To avoid burns, do not touch the surface of the machine other than the handle.
- Do not operate the machine without supervision.
- Never leave the operating machine unattended.

 UNIT DRAWINGS

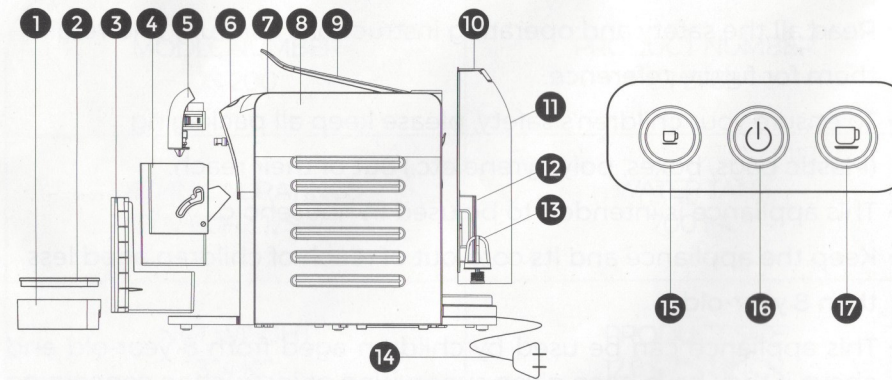

- | | | |
|------------------------|----------------------|---------------------|
| 1. Drip tray | 7. Hand pad | 13. Filter |
| 2. Drip tray cover | 8. Right/Left pannle | 14. Power cord |
| 3. Drip tray box | 9. Handle | 15. Espresso button |
| 4. Capsule box bracket | 10. Water tank cover | 16. ON/OFF button |
| 5. Coffee outlet | 11. Water tank | 17. Lungo button |
| 6. Control button | 12. Bobber | |

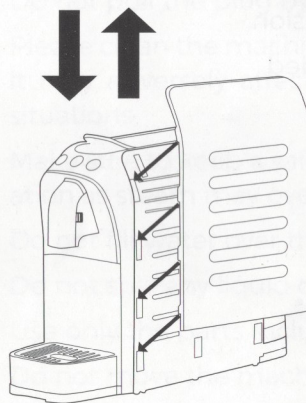 

HOW TO ASSEMBLE SIDE PANELS

1. By default, the machine has white and black panels that can be replaced.
2. Assemble: The clips on the panel aligned with the holes on the machine, and insert it downward.
3. Disassemble: Hold the panel with both hands and lift the panel upwards to remove it.

FIRST USE NOTES

Do not pour other liquids into the water tank, only ever use cool fresh pure water to make coffee.

1. Check that all the parts of the machine are complete, and the machine is not damaged.
2. Place the machine on a solid, level surface which is water-and heat-resistant.
3. Fill the water tank with fresh, cold pure water at least up to the MIN marking and at most up to the MAX marking.
4. Check the used capsule container is pushed in as far as will go and that the tray drip is in place.
5. Insert the power plug into an easy-to-use wall outlet.
6. Press the ON/OFF button to turn on the machine, the machine starts to pre-heating, two coffee buttons start flashing.
7. Two coffee buttons stop flashing, you will hear two buzzing sounds and indicator "blue" lights mean machine is ready now.
8. Refer to READY FOR BREWING COFFEE.

READY FOR BREWING COFFEE


NOTE

Before you make coffee, please press any of coffee button to brew one cup of water WITHOUT fill in capsules. This helps to clean the machine and raise the temperature of the coffee you brew next.

Capsule recommendation: USE ORIGINAL NS CAPSULES*

*NS CAPSULES refer to Nespresso** Original capsules and compatibles. Note that some non Original capsules might not work well with our machines.

1. Open the handle and put your favorite capsule into the brewing chamber.
2. Close the handle and place a cup under the coffee outlet.
3. Press the coffee button start to brew coffee, " ☐ " means espresso 40-60ml, " ☐ " means lungo 80-100ml base on NS original capsule. (To stop the coffee flow or top up your coffee, press again.)
4. Complete the brewing, please lift and close the handle to eject the capsule into the used capsule container.
5. Suggestion: Please press the coffee button let the water to clean machine after each use.

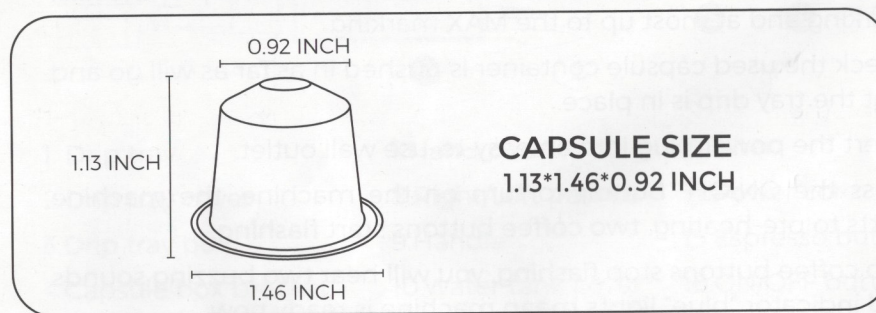

CUSTOMIZE COFFEE QUANTITIES

By default, espresso is 40-60ml and lungo is 80-100ml base on NS original capsule, machine can customize coffee quantities to suit your own taste.

***The set quantities are saved until a new quantity is set.**

1. Switch on the machine and wait for the machine to pre-heating.
2. Open the handle and put your favorite capsule into the brewing chamber.
3. Close the handle and place a cup under the coffee outlet.
4. Long Press the Espresso/Lungo button you need to customize, you will hear one sound buzzing, it means the machine has entered customize mode.
5. Hold the button until reach the volume you need, then release it.

*** Automatically activated when one brewing button is continuously pushed for more than 2 second, it will return default vale if less than 5s.**

1. The setting is NOT successful: when the time is $\leq 5S$ or $\geq 2mins$, 1 beep starts and 3 beeps stop.
2. The setting is successful: when the time is $\geq 5S$ or $\leq 2mins$, 1 beep starts and 5 beeps stop.

DESCALING

WHEN WILL NEED TO DESCALE?

When the Espresso button and Lungo button light flashes orange, the machine needs to be descaled. It is recommended to regularly descale the machine once a month.

Regular descaling can ensure the stable operation and extend the life of the unit.

HOW TO DESCALE?

1. Fill the water tank with fresh, cold pure water to MAX marking. Water tank needs to be filled with water twice during descaling program.
2. Closing the handle, turn off the machine.
3. Keep pressing Espresso button and ON/Off button.
4. Turn ON and then release the buttons, ON/OFF button red and yellow LED is flashed; The blue lights of the Espresso button and the Lungo button is keeping on; It means the machine went into Descaling program.
5. Place a cup (capacity is not less than 10oz) under the coffee outlet.

FIRST STAGE

- Press ON/OFF button to star descaling at the 1st stage cycle, The yellow and red LED s of the ON/OFF button flash once alternately.

- The machine pumps descaling solution into the pipes several times at 5-minute intervals. Each times about 125 ml is dispensed into the container. (Repeat 5 times and go to end stage 1)
- At the end of first stage the buzzer beeps once and go into 2nd stage cycle.

Tip: The process takes approx.50mimutes.

SECOND STAGE

- The two coffee buttons will flash blue light for pre-heating.
(If there is no water in the water tank, the two coffee buttons will flash yellow light; you should pour enough water into the water tank)
- Press ON/OFF button to star descaling at the 2nd stage cycle, The yellow and red LED s of the ON/OFF button flash once alternately.
- The machine has a buzzing sound and the two coffee buttons will flash blue light for preheating at the end .

Tips: Pour out the dispensed water in drip tray each time to ensure that it’s not overflow.

CLEANING AND MAINTENANCE

Unplug the unit and wait for it to cool down before cleaning.
Do not immerse the power cord, plug or machine in water or other liquids to avoid the risk of electric shock.
Be sure to unplug the unit after each use.

NOTE:

Pour out the coffee capsule and clean the capsule box with water. Or use a softer tool such as silica gel to assist in cleaning, and then rinse it off with water.
Use a little mild detergent and water to clean the accessories, and then dry them.

Do not use any toxic or abrasive cleaners or sponges to clean the unit to prevent damage to the surface.
Please press the coffee button let the water to clean machine after each use.

NOTE: Accessories cannot be put in the dishwasher.

Q&A

PROBLEMS	POSSIBLE CAUSES	SOLUTIONS
Coffee come out slow or no coffee	Capsule is not suitable for the machine	Suggests you use the NS original capsule
Coffee capacity too little or too much		Refer to “CUSTOMIZE COFFEE QUANTITIES”
Coffee not hot enough		Brew one cup of water before brewing your coffee
Two-coffee buttons flash yellow light and have 6 times buzzing	Water tank is empty	Fill water into water tank
Two-coffee buttons flash yellow light	Machine needs to be descaled	Refer to “DESCALING” procedure