


# QUICKSTART GUIDE

Kodak  
DC25 Digital Camera

## 1 Take A Picture

- 1 Install Batteries

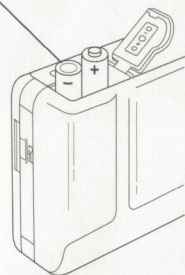


Bottom view of camera

- 2 Press Power Button


Resolution Button  
(Standard or High)

Erase Button

- 3 Press Shutter Button

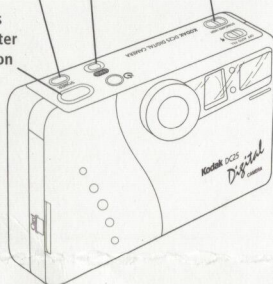

## 2 Review Pictures On LCD Display

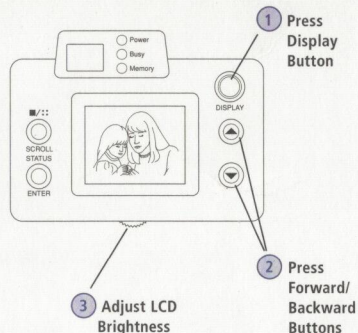

1. Press the **display** button when camera is turned on. The LCD displays last picture taken.
2. Press the **forward/backward** buttons to view the next or previous picture.
3. Adjust LCD brightness to view pictures.

### Other Functions:

Enter erase mode by pressing **erase** button on top of camera while LCD is on. Use **scroll** button to select options. Press **enter** button to make selection.

Press the **status/enter** button to verify pictures remaining.


To exit, press the **display** button again to turn off the LCD. Use of LCD significantly reduces battery life.

Memory light comes on when camera is full or optional picture card is full.

## 3 Connect Camera To Computer


- 1 Select Cable

PC: Cable in clear bag  
MAC: Cable in yellow bag

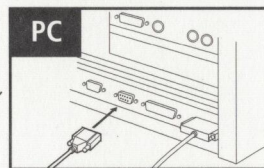


PC: Connect the camera to the computer via the COM port. PC may require a 25-pin adapter (sold separately).

- 2 Connect Cable To Computer

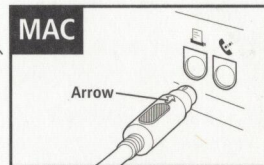

MAC: Connect the camera to the computer via the printer or modem port. Ensure that arrow on connector is facing up.

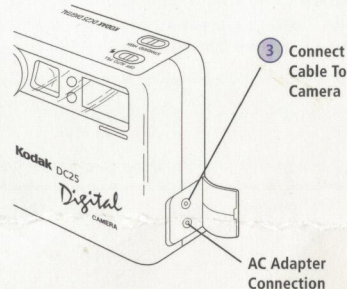

- 3 Connect Cable To Camera

AC Adapter Connection

## 4 Select Software



1. Locate and open your DC25 software packet.
2. Select between "Easy" software on diskettes or "Advanced" software on CD.

"Easy" software (Picture Easy) allows you to simply view, print and save your pictures.

"Advanced" software (PHOTOENHANCER) allows you to enhance the pictures or create cards, calendars and flyers, as well as view, print, and save your pictures.



## 5 Load Software

### Easy Software:

1. Insert the WINDOWS or MAC diskette.
2. Begin installation:
  - **Windows 95** — from the Start menu, choose Run. Type **A:\Setup**, click OK.
  - **Windows 3.1** — from the Program Manager, choose File, Run. Type **A:\Setup**, click OK.
  - **Macintosh** — Double-click on the **Picture Easy Installer** icon.
3. Follow the instructions on screen.
4. Go to section 6a.




### Advanced Software:

1. Begin installation:
  - **Windows 95** — Installation begins automatically.
  - **Windows 3.1** — from Program Manager, choose File, Run. Type **D:\Setup.exe**, click OK.
  - **Macintosh** — Click on **DC25 Installer** icon.
3. Follow the instructions on the screen.
4. Start PhotoEnhancer software:
  - **Windows 95** — from Start menu select **Programs, KODAK DC25, PhotoEnhancer Special Fun Edition**.
  - **Windows 3.1** — from Program Manager, double-click on the **KODAK DC25, PhotoEnhancer Special Fun Edition**.
  - **Macintosh** — from folder containing PhotoEnhancer software, double-click on the **PhotoEnhancer Special...** application icon.
5. Go to section 6b.




## 6a Get Pictures From Camera (Easy)

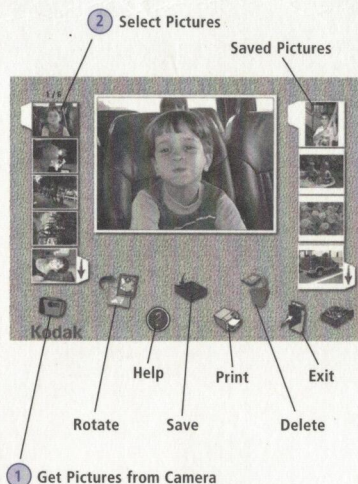

1. Start Picture Easy software:
  - **Windows 95** — from Start menu select **Programs, KODAK Picture Easy Software**.
  - **Windows 3.1** — from Program Manager, double-click on the **Programs/Picture Easy** icon.
  - **Macintosh** — from folder containing Picture Easy software, double-click on the **Picture Easy** icon.
2. Click on camera icon to view thumbnail pictures in camera or optional picture card.
3. Click on desired thumbnail image to view in center screen.
4. Click on various icons shown to save, print or exit.

Refer to chapter 4 of User's Guide for more information.

## 6b Get Pictures From Camera (Advanced)

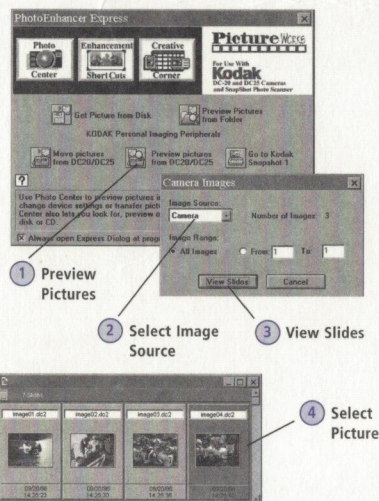


1. Ensure DC25 camera power is on.
2. Click on **Preview Pictures** from DC20/DC25.
3. Select your **Image Source** (camera or optional camera card).
4. Click on **View Slides** button.
5. To select picture, double-click on picture (Multiple select by holding down shift key).
6. To print, save or exit, select appropriate command under file menu.

Refer to chapter 5 of User's Guide for more information.


## 7 Other SW Available (WIN 95, MAC 7.5 & at least 68040 CPU)

### GOO IT!

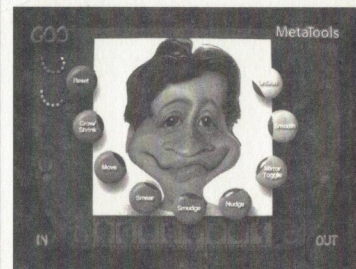

Create caricatures and other special effects with METATOOLS KAI'S POWER GOO Software (Reference guide included in back of manual).

### SEND A PICTURE POSTCARD!

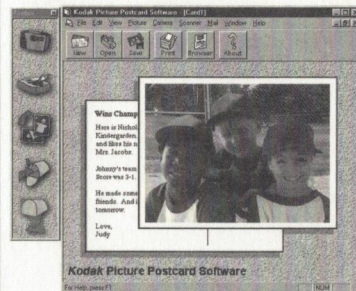

E-mail your pictures to friends and relatives with KODAK Picture Postcard Software available **FREE** from Kodak on the Internet at the following address:  
<http://www.kodak.com/daiHome/postcard/>

Refer to chapter 6 of User's Guide for more information.

Note: If computer does not recognize camera, try reviewing "Technical Tips" (trouble.txt) on the CD in your language folder.

P/N - 683159



©Eastman Kodak Company, 1996.  
Kodak is a trademark.

*Have fun sharing pictures!*