

KINYO COMPANY INC.
14235 Lomitas Ave.
La Puente, CA 91746
Attention: Service Department
Phone: (818) 333-3711

THIS WARRANTY IS ONLY VALID IN THE UNITED STATES OF AMERICA

ONE YEAR LIMITED WARRANTY CERTIFICATE

Name _____

Address _____

City _____ State _____ Zip _____

Phone () _____ Store _____

Model No. _____ Serial No. _____

Signature _____



ONE - WAY


VHS CASSETTE REWINDER

AC POWER
CORD

TRANSPARENT
WINDOW

TOP COVER

"STOP/EJECT"
BUTTON

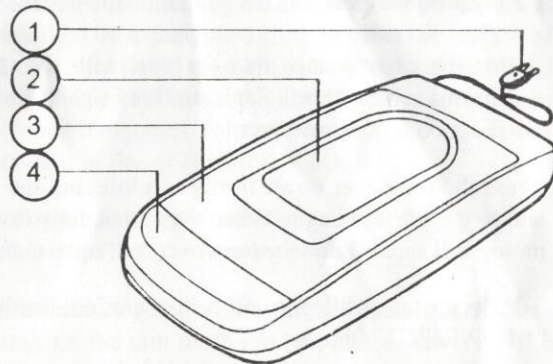

Kinyo Co., Ltd.

C 12300200

OPERATING INSTRUCTIONS

1. The unit must be plugged into the correct voltage power supply before the cassette tape is inserted. Otherwise, the unit will not function properly.
2. Firmly push the "STOP/EJECT" button to open the top cover.
3. Insert the cassette tape into the unit with the spools face downward and the tape's flap side faces right as indicated by the diagram on the top cover.
4. Press the top cover down firmly to close and the automatic winding cycle will begin. When the tape is fully rewound, the motor will shut off and the top cover will open automatically.
5. To stop the tape while the unit is in operation, firmly press the "STOP/EJECT" button.
6. When the unit is not in use, keep the top cover closed.

IMPORTANT SAFETY INSTRUCTIONS

Read and follow all safety and operating instructions carefully before operate this unit. Retain this safety and operating manual for future reference.

1. When cleaning the unit, unplug the unit from the power outlet before cleaning. Use a dampened cloth to clean the surface of the unit. Do not use liquid cleaners or aerosol cleaner. Never insert object of any kind into the unit through its openings as they may touch dangerous voltage points or short out parts that could result in fire or electrical shock.
2. Never use this product near water. For example, near bath tub, wash bowl, kitchen sink, swimming pool and that alike.
3. To prevent overheating and ensure reliable operation, the slots and openings on the unit must not be block or covered. The unit should not be placed in a confined installation such as a

bookcase or rack unless proper ventilation is provided. Never place the unit near or over radiator or heat register.

4. The unit should only be operated from the type of power source indicated on the marking label that is on the unit. If you are not sure of the type of power supply to your home, consult your local power company.
5. The power supply cords should be routed so that they are not likely to be walked on or pinched by items placed upon or against them. Do not overload wall outlets and extension cords as this can result in risk of fire or electrical shock.
6. Do not attempt to service this product yourself as opening or removal the covers may expose you to dangerous electrical shock and other hazards. If you suspect the unit is not functioning properly, adjust only those controls that are covered in the operating manual. When the unit exhibits a distinct change in performance or does not function properly refer servicing only to qualified service personnel.

7. When replacement parts are required, use only parts that are specified by the manufacturer. Unauthorized substitutions may result in fire, electrical shock and other hazards.
8. Adhere all warning and safety instructions on the unit and in the instruction manual.

SYMBOL EXPLANATION



WARNING

TO REDUCE THE RISK OF FIRE OR ELECTRIC SHOCK, DO NOT EXPOSE THIS APPLIANCE TO RAIN OR MOISTURE.

CAUTION

PILOT LAMP SOLDERED IN PLACE. TO REDUCE THE RISK OF ELECTRIC SHOCK, REFER TO QUALIFIED SERVICE PERSONNEL.



Attention, presence of dangerous voltage located within enclosure.



Attention, consult instruction manual for important operating and maintenance (servicing) instructions.

WARNING - MOVE WITH CARE

THIS CART/APPLIANCE COMBINATION SHOULD NOT BE MOVED BY CHILDREN WITHOUT PROPER GUIDANCE FROM AN ADULT



LIMITED WARRANTY

Kinyo Company Inc. (KINYO) warrants this product to the original purchaser against defects in material and workmanship for a period of one year from the date of purchase. KINYO will, at its option, repair or replace the defective product at no cost to you during the warranty period.

The warranty will not apply if the unit has been subject to accident, misuse, abuse, disassembly, alteration or operated contrary to the instructions contained in the accompanying manual.

To obtain warranty service, proof of purchase in the form of retailer's bill of sale or invoice must be presented as evidence that the unit is within the warranty period. The product must be packaged either in its original packaging or in such a way as to reasonably protect it from shipping damage. Properly fill out the warranty card with description of the problem. Send the product freight prepaid or deliver to: