

FAQ

Why doesn't he talk or respond?

a. He is in sleep mode.

Solution: Tap his tail, turn him upside down, or move the power button to the 'off' and then 'on' position again.

b. The batteries are running out.

Solution: Replace the batteries with new ones.

Caring for your Jack-O-Lantern

Jack-O-Lantern likes his ornaments very much, so please keep him clean by keeping him away from foods and drinks. If you need to clean Jack-O-Lantern's fur, please use a damp cloth. Do not put him into water or any liquid.

DY MORAL REGION HOLDINGS LTD.

Factory Address: Liyatang Industrial Area No. 48,
Lin Village, Tangxia Town, Dongguan, GD P.R. China
Tel. +86-769-82621606
Email : info@moralregion.com
Fax : +86-769-87810726
Website : www.moralregion.com



Model No.: DE6888 (BAT), DE6889 (PUMPKIN) Made in China.




WARNING

Choking hazards - small parts
Not suitable for Children under 36 months.

- Please keep this user manual for reference purposes.

Battery Information

To replace batteries, loosen the screw then remove the battery cover, install 3x 1.5v AAA batteries. Place the battery cover back and tighten the screw.

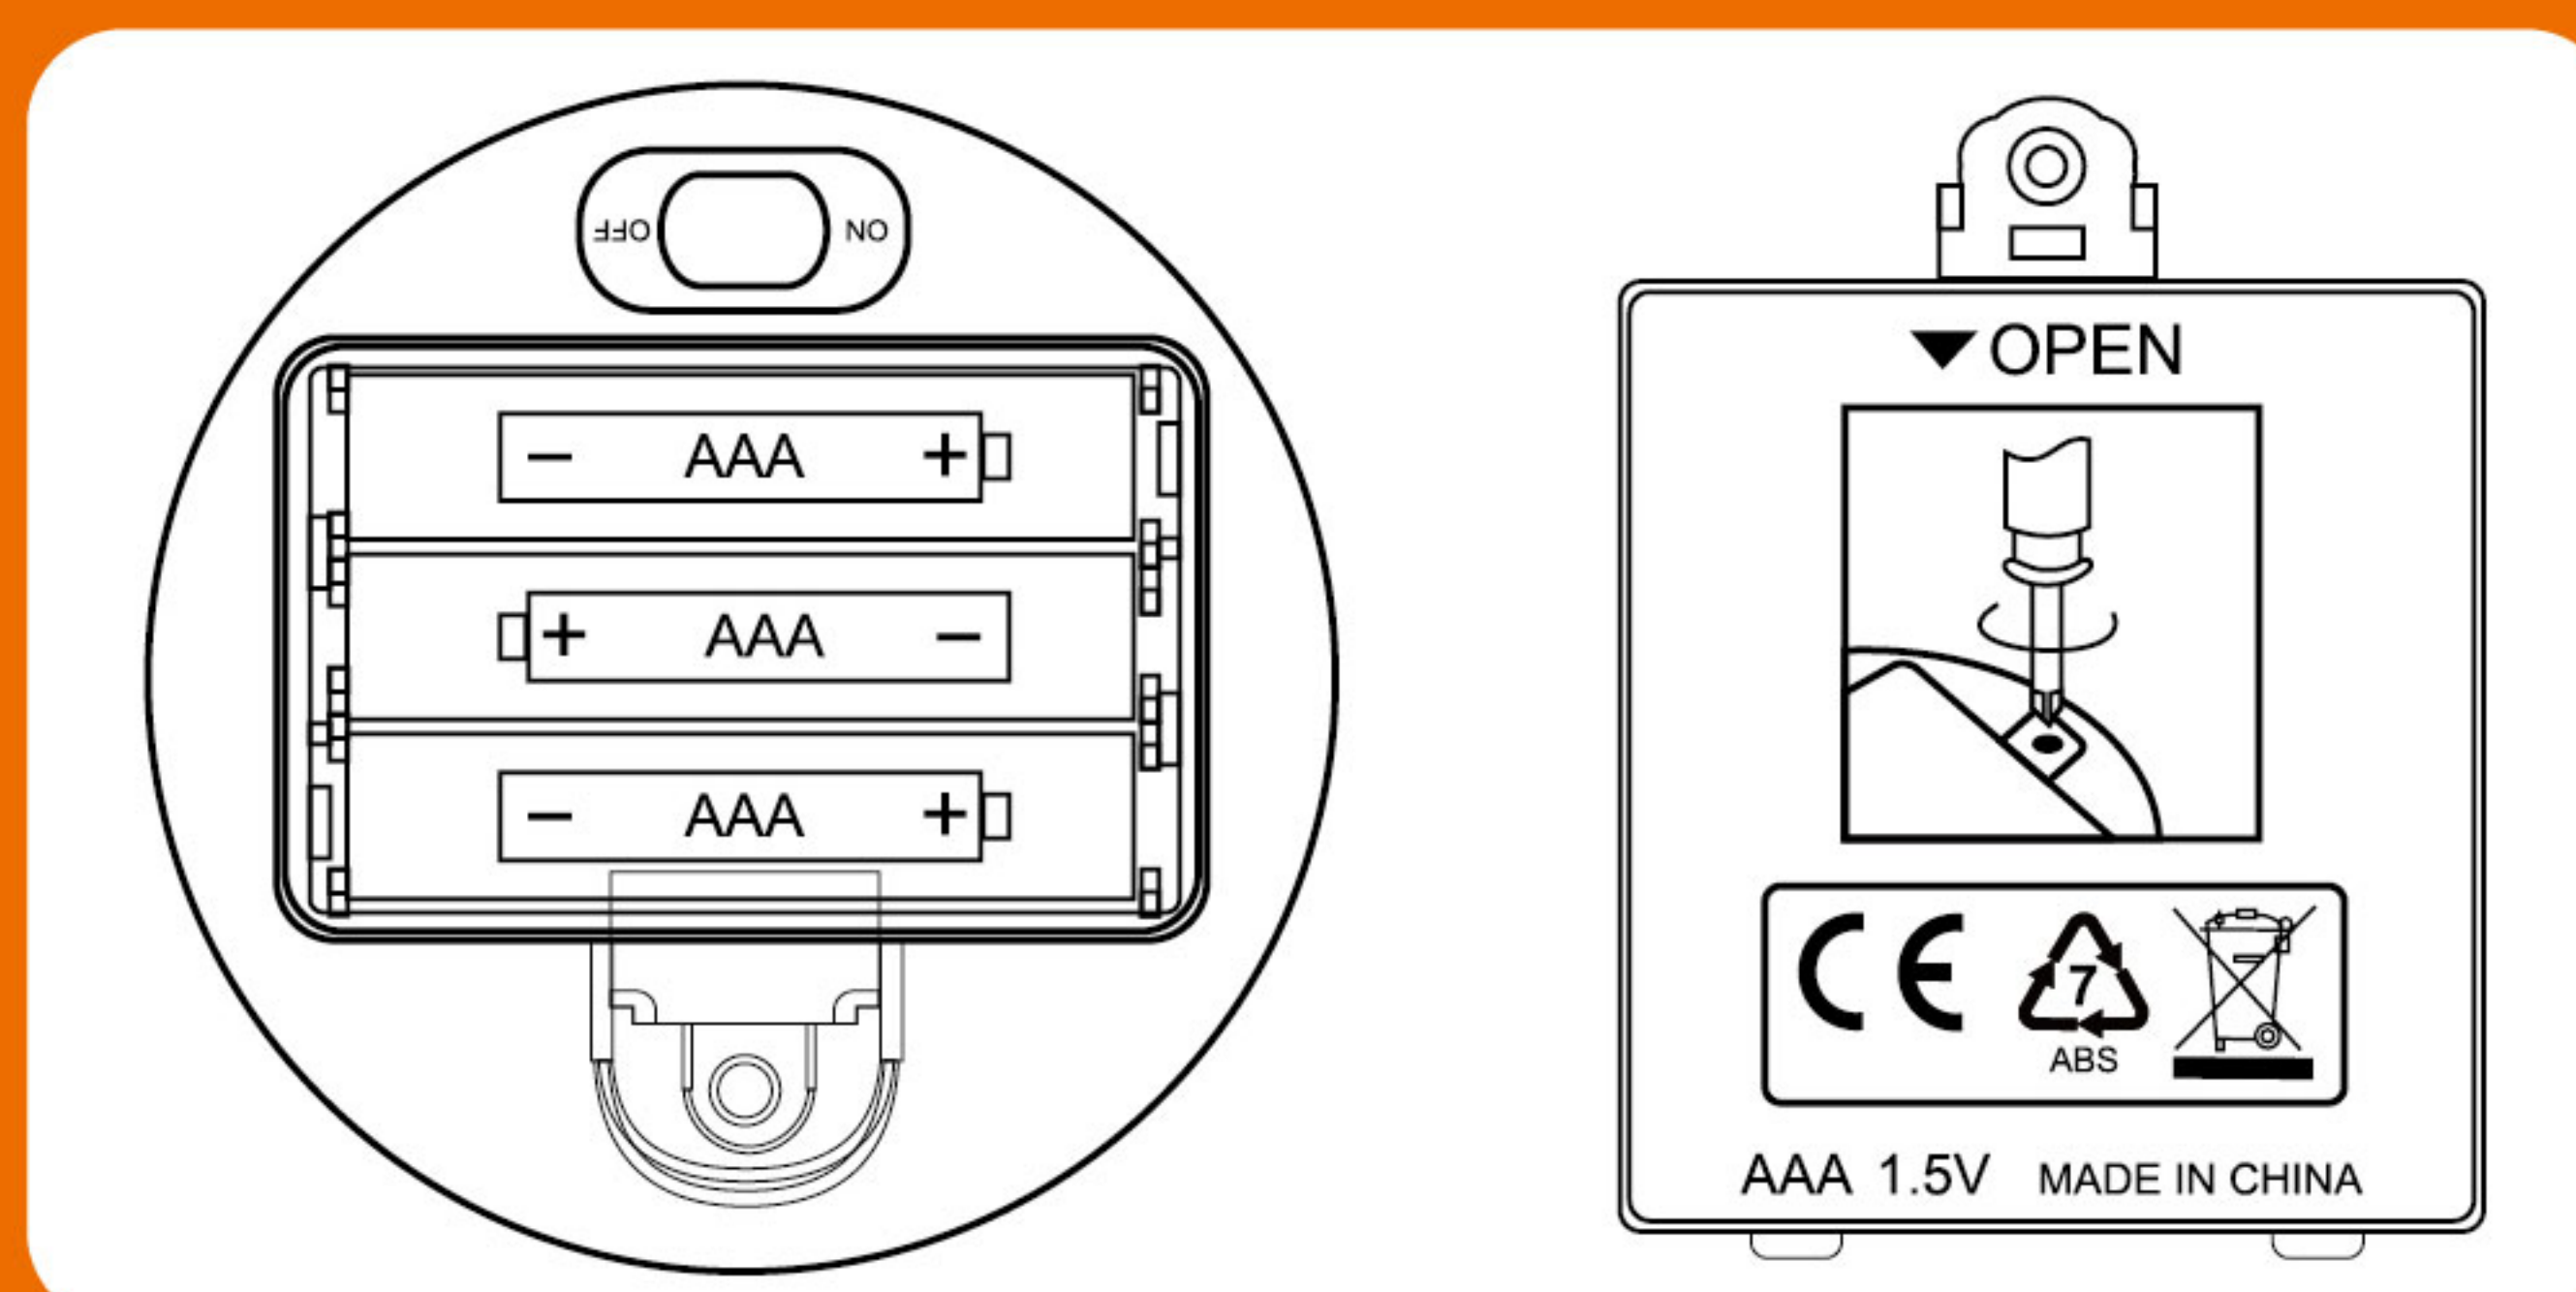

- To avoid battery leakage:
 - Please install the specified batteries according to the user manual. Pay attention to the "+/-" signs.
 - Please don't use old batteries with new batteries, or alkaline batteries with other types.
 - Please replace the batteries when they are flat.
 - Please replace batteries if they haven't been used for a long time.
 - When using rechargeable batteries, do not mix them with non-rechargeable batteries. Take the batteries out of the toy when charging rechargeable batteries. It is recommended that battery charging is done under the guidance and supervision of an adult.
- If there is electromagnetic interference, please take the toy away from the source of the interference. If necessary, the toy can be reset by switching the toy off or taking out the batteries.
- Please replace the batteries when the sound quality gets degraded.

Jack-O-Lantern My Dark Companion

User Guide

My name is Jack, Jack-O-Lantern! Come on an adventure with me... if you can dare. Happy Halloween!

Power Button

ON Turn On

OFF Turn Off



Interactive Conversation



Touch my tummy and I will repeat what you said.



Shake my wings or right/left side and I will sing a song or tell a story.



Talk to me and I will reply.



Please do not turn me upside down or I will feel dizzy.



Jack-O-Lantern will respond to these key words and phrases with his scary voice:

1. Hello!
2. Where are you from?
3. Tell me a joke!
4. Tell me a story!
5. Sing me a song!
6. You are so cool!

Jack-O-Lantern's Touch Commands

1. Touch his head, he will vibrate and scream horribly, then tell jokes.
2. Touch his right wing, he will vibrate and scream horribly, then sing songs.
3. Touch his left wing, he will vibrate and scream horribly, then tell stories.
4. Touch his tummy, he will vibrate and scream horribly, then repeat what you said.
5. Turn him upside down, he will respond by saying "I'm not comfortable."
6. Tap his tail, he will enter standby mode. (only for bat)



Jack-O-Lantern's Secrets

1. Jack-O-Lantern doesn't like noise and can't hear you very well in noisy surroundings. When talking to Jack-O-Lantern, make sure you are in a quiet place away from your television.
2. Jack-O-Lantern will not understand you if you speak too fast or too loud. Do not shout, just speak slowly and make sure you pronounce your words clearly.
3. Jack-O-Lantern likes to talk face to face and will not hear you if you speak from too far away. When talking to Jack-O-Lantern, make sure you are within one foot distance from him.
4. Jack-O-Lantern does not like water. Please do not place Jack-O-Lantern into water or any liquid.
5. Jack-O-Lantern does not like fire, his beautiful ornaments will be burnt up in fire, so please keep him far away from fire.

Jack-O-Lantern's Sleep Functions

If you don't touch him, talk to him or shake him for 3 minutes, he will feel sleepy and ask where you are every 20 seconds for 3 times. If you still keep ignoring him, he will say "goodbye" to you and then fall asleep. To wake him up: tap his tail, turn him upside down; or move the power button to the 'off' and then 'on' position again.

