

PetSafe® 

 
Get Started!




Scanned + Archived
By:
FindMyManual.org



5 Meal Pet Feeder

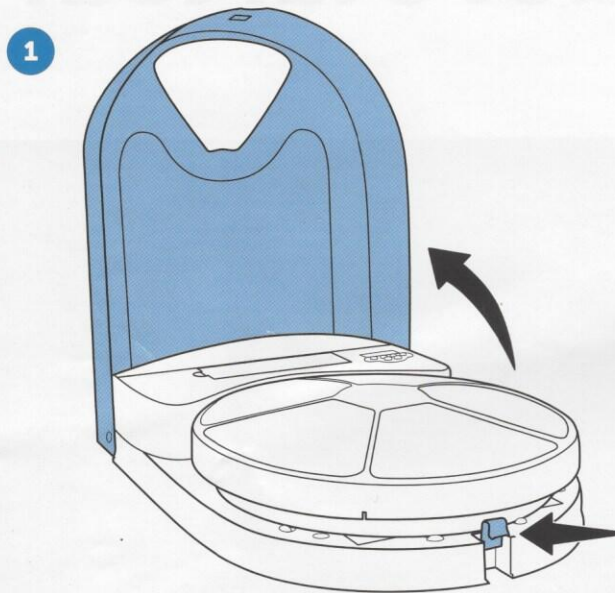

 Press the latch on the front of the feeder and open the lid.

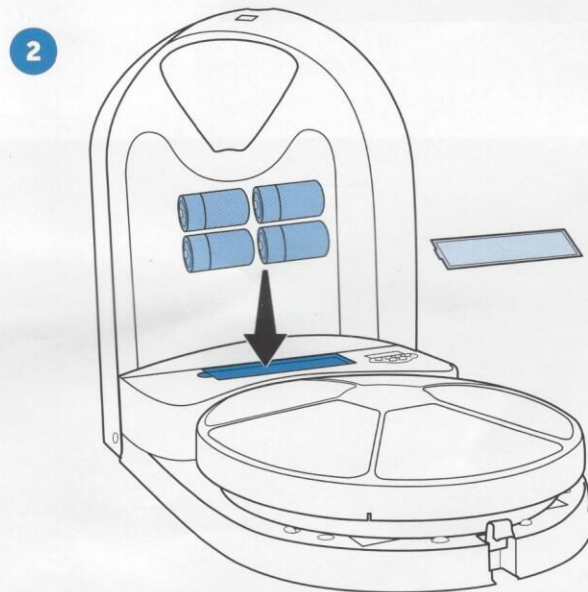


Pull up on the battery door to remove it.

Insert 4 D-cell alkaline batteries (not included) as shown on the label inside the battery compartment. Replace the battery door.

All meal prep should be this easy.

3

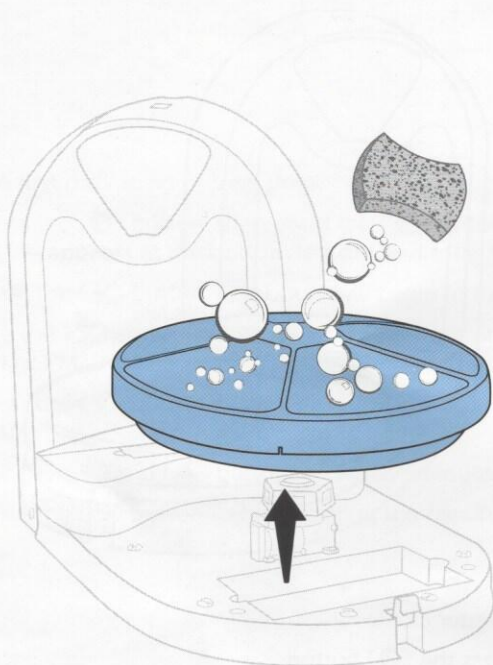


If you want, clean the feeder before use.

Remove the food tray and wash it by hand or in the dishwasher. Wipe the feeder base with a non-abrasive cloth; do not submerge it in water.

Make sure the food tray is completely dry before replacing it on the feeder base.



4

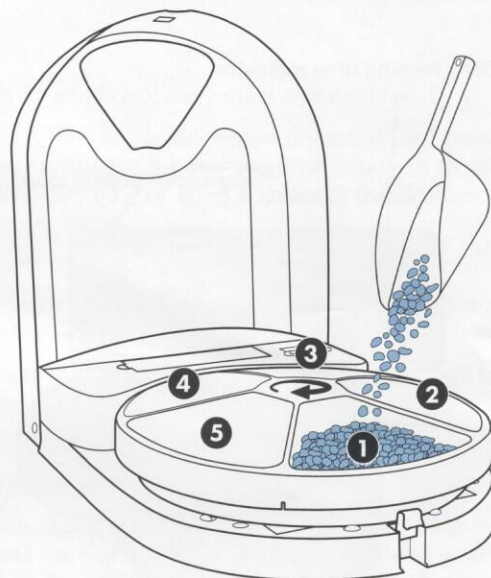

The food tray rotates clockwise. Slot 1 will be available to your pet immediately. Slot 2 feeds the first scheduled meal time, slot 3 feeds the second scheduled meal time, and so forth.

Keeping this in mind, fill the needed slots with up to 1 cup of dry or semi-moist food or treats. Level the food in each slot and do not overfill — if the feeder is too full it may not work properly.

5

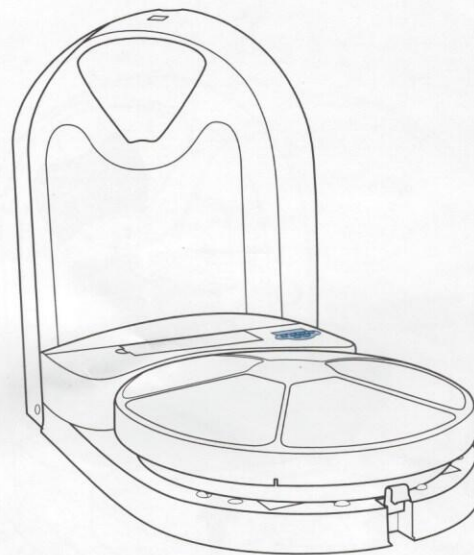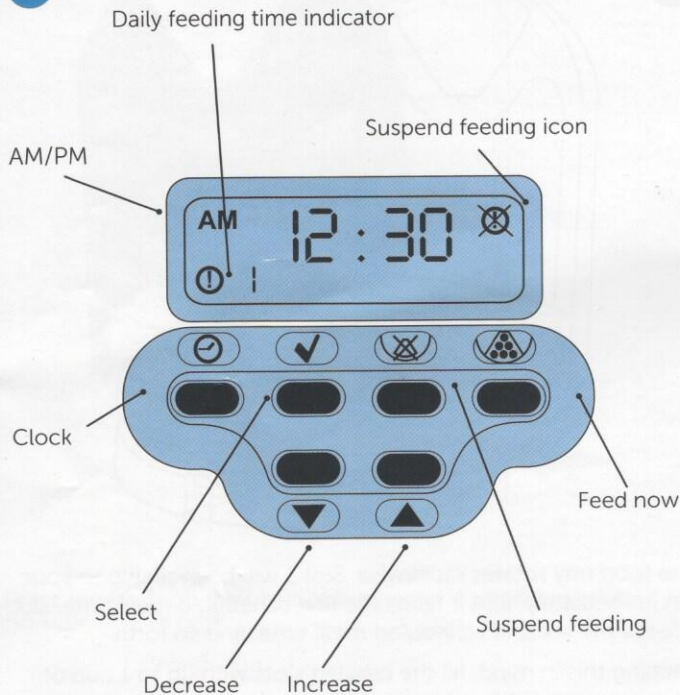

Set the feeder clock:

- Press the button.
- Press the button. The hours will begin to flash.
- Use the and buttons to set the hour and select AM or PM.
- Press the button again. The minutes will begin to flash.
- Use the and buttons to set the minutes.
- Press the button to finish setting the clock.

The clock must be set correctly for the feeder to dispense meals or treats at the desired times. To switch between a 12-hour and a 24-hour clock, press the button for 15 seconds.

6

Set up the first daily meal or treat time:


- a. Press the  button, then press the  button until 01:-- appears at the bottom left of the display panel.
- b. Press the  button. The hours will begin to flash.
- c. Use the  and  buttons to set the hour and select AM or PM.
- d. Press the  button again. The minutes will begin to flash.
- e. Use the  and  buttons to set the minutes.
- f. Press the  button to finish setting the feeding time.

7

To set up an additional daily meal or treat time:

- a. Press the  button, then press the  button until the number of the feeding time you wish to set (for example, 02 or 03) appears at the bottom left of the display panel.
- b. Press the  button. The hours will begin to flash.
- c. Use the  and  buttons to set the hour and select AM or PM.
- d. Press the  button again. The minutes will begin to flash.
- e. Use the  and  buttons to set the minutes.
- f. Press the  button to finish setting the feeding time.

Repeat the above steps for each daily meal or treat time you want to set up. For example, if you want to feed your pet two meals each day, set up feeding times 1 and 2. If you want to feed your pet two meals and one treat each day, set up feeding times 1, 2 and 3.

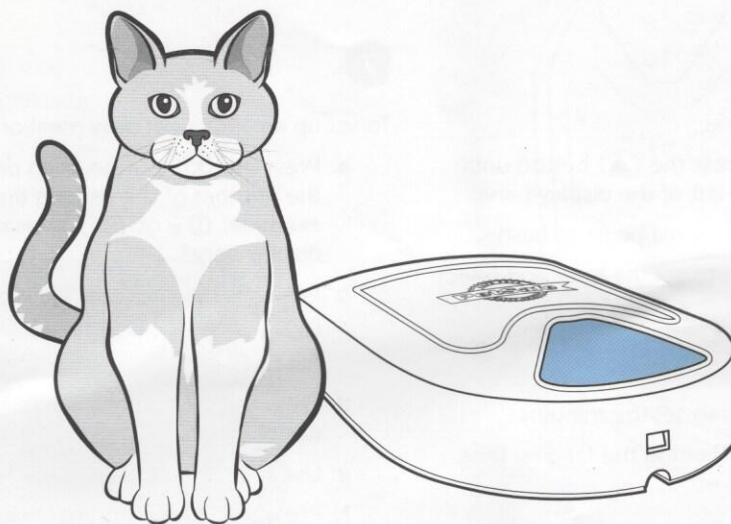

Make sure the desired food tray slot is in position at the front of the feeder. To rotate the food tray, press the  button.

Close the lid and place the feeder in the desired location. The feeder is ready to use and will automatically feed your pet daily at the times you have set up.

To remove a set feeding time, press the  button, then press the  button until the feeding time you want to remove appears at the bottom left of the display panel (for example,  2 or  3). Press the  button. The feeding time will reset to --:-- . Press the  button to finish removing the feeding time.

To suspend feeding without losing your settings, press and hold the  button for 7 seconds (or wait for the ":" in the feeder clock to blink 7 times), then release the button. The suspend feeding icon () will appear at the top right of the display. To resume feeding at the set times, press and release the clock  button. The suspend feeding icon will disappear.

Dinner is served.

5 Meal Pet Feeder



We're here to help!

For questions or additional tips:
support.petsafe.com

1-Year Limited Warranty | ©2024 Radio Systems Corporation | Model: PFD11-13707 | L400-2617
For important safety instructions, please see the customer care guide.