

TWO YEAR LIMITED WARRANTY

Toastmaster Inc. warrants this product, to original purchaser, for two years from purchase date to be free of defects in material and workmanship.

This warranty is the only written or express warranty given by Toastmaster Inc. This warranty gives you specific legal rights. You may have other rights which vary from state to state. ANY OTHER RIGHT WHICH YOU MAY HAVE, INCLUDING ANY IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE IS LIMITED IN DURATION TO THE DURATION OF THIS WARRANTY.

Defective product may be brought or sent (freight prepaid) to an authorized service center listed in the phone book, or to Service Department, Toastmaster Inc., 200 Vine Street, Boonville, Mo. 65233, for free repair or replacement at our option.

Your remedy does not include: cost of inconvenience, damage due to product failure, transportation damages, misuse, abuse, accident or the like, or commercial use. IN NO EVENT SHALL TOASTMASTER INC. BE LIABLE FOR INCIDENTAL OR CONSEQUENTIAL DAMAGES.

Some states do not allow limitations on how long an implied warranty lasts, or allow the exclusion or limitation of incidental or consequential damages, so the above limitations or exclusions may not apply to you.

For information, write Consumer Claims Manager, at the Boonville address. Send name, address, zip, model, serial number, and purchase date.

KEEP DATED SALES RECEIPT FOR WARRANTY SERVICE.

Keep this booklet. Record the following for reference:

Date purchased _____

Model number _____

Toastmaster Inc.

National Service Center
200 Vine Street
Boonville, Missouri 65233
Telephone

Consumer Service 1-800-947-3744
Parts 1-800-947-3745
M-F 8 a.m. - 4:30 p.m. CST

This symbol on the product's nameplate
means it is Listed by
UNDERWRITERS LABORATORIES INC.



PART NO. 27363A12

READ AND SAVE THESE INSTRUCTIONS

 **Toastmaster®**

Waffle Baker



Scanned + Archived
By:
FindMyManual.org



Use and Care Guide Model 281

WARNING: A risk of fire and electrical shock exists in all electrical appliances and may cause personal injury or death. Please follow all safety instructions.

IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed to reduce the risk of fire, electric shock and injury to persons, including the following:

- Read all instructions before using appliance.
- Do not touch hot surfaces. Use handles with care. Hot pads or oven mitts are recommended.
- Do not place this appliance or electric cord in water or other liquid. See instructions for cleaning.
- This appliance not for use by children. Close supervision is necessary when this appliance is used near children.
- Do not use appliance unattended.
- Unplug from outlet when not in use. Unplug before cleaning. Allow to cool before putting on or taking off parts, and before cleaning the appliance.
- Do not operate any damaged appliance. Do not operate with a damaged cord or plug or after the appliance malfunctions, or has been damaged in any manner. Return appliance to the nearest authorized service center for examination, repair or adjustment.
- When using this appliance, provide 4 to 6 inches air space on all sides for air circulation. Do not use on surfaces where heat may cause a problem.
- Use accessory attachments only if recommended by Toastmaster Inc.
- Do not use outdoors or while standing in a damp area.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near hot gas or electric burner, or in a heated oven.

- Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.
- Do not use appliance except as intended.

SAVE THESE INSTRUCTIONS

THIS PRODUCT FOR HOUSEHOLD USE ONLY

Caution: A short power supply cord is provided to reduce the risk of personal injury resulting from becoming entangled in or tripping over a longer cord. Extension cords are available from local hardware stores and may be used if care is exercised in their use. If an extension cord is required, special care and caution is necessary. Also the cord must be: (1) marked with an electrical rating at least 13 A., 125 V., 1625 W., and (2) the cord should be arranged so that it will not drape over the countertop or tabletop where it can be pulled on by children or tripped over accidentally.

ELECTRIC POWER: If electric circuit is overloaded with other appliances, your waffle baker may not operate properly. Waffle baker should be operated on a separate electric circuit from other operating appliances.

USING YOUR APPLIANCE

CAUTION: NEVER PLACE ANY PART OF APPLIANCE IN WATER OR OTHER LIQUIDS.

1. Before the first use, clean cooking surfaces with a warm sudsy sponge or cloth. Rinse with a fresh damp sponge or cloth and wipe dry.
2. Now, and before each use, "condition" the non-stick surface by lightly coating with cooking oil or vegetable shortening. The unit is now ready for use.
3. Plug into any 120 volt outlet, close the lid and let preheat for 5 minutes. Initially some smoking may occur. This is normal for new appliances and will not recur after the first few uses.

CAUTION: APPLIANCE SURFACES ARE HOT DURING USE.

4. After the 5 minute preheat period, raise lid and pour approximately $\frac{1}{2}$ cup of batter across the middle of the lower grid from edge to edge. The amount of batter may vary with recipe or brand of mix.
5. Let cook for approximately 3 minutes and lift lid to check for doneness. If the lid shows resistance to lifting, the waffle may not be quite done. Close top and allow to cook for another 30 seconds before checking again. If you prefer a darker, crisper waffle, let it cook approximately 4 minutes before removing.
6. Remove waffle when done. To protect the premium quality non-stick surfaces, use only plastic nylon or wooden utensils. Carefully follow suggested cleaning procedures. After time, if waffles show signs of sticking, recondition your unit.
7. When finished baking, unplug and let cool before cleaning.

RECIPES

WAFFLES

- | | |
|-----------------------------|---------------------------------|
| 1 $\frac{3}{4}$ cups flour | 3 egg yolks, beaten |
| 2 teaspoons baking powder | $\frac{1}{3}$ cup vegetable oil |
| 3 teaspoons sugar | 1 $\frac{1}{2}$ cups milk |
| $\frac{1}{2}$ teaspoon salt | 3 egg whites, beaten stiff |

Measure dry ingredients into mixing bowl. Blend. Combine egg yolks and milk. Stir into dry ingredients. Stir in cooking oil. Carefully fold in egg whites. Do not overmix. Pour approximately 1 cup batter onto the preheated grid. Close and bake. Make approximately 6 waffles.

CARROT WAFFLES

- 1 box carrot cake mix

Mix according to package directions for a standard cake. Pour $\frac{2}{3}$ cup batter onto a conditioned preheated grid. Close and bake. One 18 ounce box of carrot cake mix makes approximately 8 waffles.

GINGERBREAD WAFFLES

- 1 box gingerbread cake and cookie mix.

Mix according to package directions adding 1 tablespoon of oil. Pour $\frac{1}{2}$ cup batter onto a conditioned preheated grid. Close and bake. One 15 ounce box of gingerbread mix makes approximately 7 waffles.

CORN WAFFLES

- 2 (8 ounce) boxes corn muffin mix
2 eggs
 $\frac{1}{4}$ cup melted shortening
1 $\frac{1}{3}$ cups milk

Mix all ingredients together, batter will be slightly lumpy. Pour $\frac{1}{2}$ cup batter onto a conditioned preheated grid. Close and bake. Two 8 ounce boxes of corn muffin mix makes approximately 8 waffles.

APPLESAUCE WAFFLES

To each cup of pancake/waffle mix prepared according to package directions, add ½ cup applesauce.

CINNAMON WAFFLES

To each cup of pancake/waffle mix prepared according to package directions, add 2 teaspoons cinnamon.

PINEAPPLE WAFFLES

To each cup of pancake/waffle mix prepared according to package directions, add 8 ounces crushed pineapple, drained.

TO CLEAN

CAUTION: UNPLUG APPLIANCE AND ALLOW TO COOL BEFORE CLEANING. NEVER PLACE ANY PART OF APPLIANCE IN WATER OR OTHER LIQUIDS.

- While grids are still warm, but not hot, brush with clean, soft pastry brush or cloth.
- Do not use steel wool or coarse scouring pads. Remove stubborn stains with a plastic mesh puff or pad. For best results, use only products with directions stating safe for cleaning non-stick surfaces.
- The exterior finish should be cleaned with a non-abrasive cleaner and a soft, damp cloth.

Any servicing requiring disassembly should be performed at an Authorized Service Center.

SERVICE INFORMATION

Please refer to warranty statement to determine if in-warranty service applies.

This appliance should be serviced by properly trained appliance repair technicians. Consult your local phone directory yellow pages under "Appliances-Household-Small-Service and Repair" for your nearest Toastmaster Authorized Service Center.

If an Authorized Service Center is not available locally, your appliance may be returned postage prepaid to our National Service Center at the address shown on the back of this book.

Products must be adequately protected to avoid shipping damage for repair or replacement at our option. Please include a note explaining the problem you have experienced—it helps us to properly service your product and speed its return to you. Product must be returned postage prepaid. We suggest you insure your appliance.