

IF KETTLE BOILS DRY OR IS PLUGGED IN EMPTY

This kettle has a thermostat designed to disconnect the heating element if the kettle is accidentally plugged in empty or allowed to boil dry. When this occurs, allow the kettle to cool for a few minutes and then add some cold water to bring the temperature back to normal. The kettle is ready for use again.

As with any electrical device, it is simply good practice to supervise operation to avoid possible fire hazards that could result from failure of the thermostat.

LIME DEPOSITS

Can form a thick coating over the element which will cause the kettle to take longer to boil and thereby waste electricity. This happens because water contains quantities of minerals that deposit in the form of scale when the water is boiled. If this happens it can be removed quickly by using one (1) part vinegar, four (4) parts water. Boil solution for 10 minutes. Repeat procedure if necessary.

LIMITED WARRANTY

Russell Hobbs warrants this product to be free of manufacturing defects for a one-year period from date of purchase. This warranty does not include damage to the product resulting from accident, misuse or abuse, lack of reasonable care, or subjecting the product to any but the specified voltage. If any malfunction occurs, Russell Hobbs will repair or replace it at no charge to you, including return postage. Simply return the appliance to place of purchase.

Be certain that the appliance is wrapped carefully when shipping. To assure prompt service, please include a letter indicating the specific cause for returning. Repairs not covered by this warranty will be performed at current costs for parts and labor, plus return postage. This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

Russell Housewares, Ltd.
933 Route 23
Pompton Plains, N.J. 07444



Made and Printed in Canada



Operating Instructions


for



Electric Kettles



Scanned + Archived
By:
FindMyManual.org

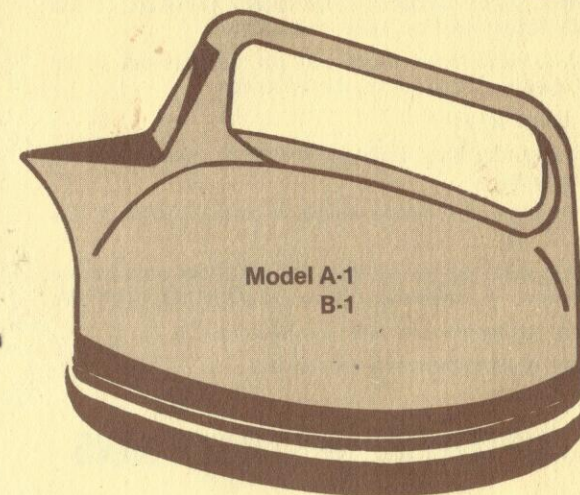

IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed including the following:

1. Read all instructions.
2. Do not touch hot surfaces. Use handles or knobs.
3. To protect against electrical hazards do not immerse cord, plugs, or this kettle in water or other liquid.
4. Close supervision is necessary when any appliance is used by or near children.
5. Unplug from outlet when not in use and before cleaning. Allow to cool before cleaning.
6. Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions, or has been damaged in any manner. Return appliance to the nearest authorized service facility for examination, repair, or adjustment.
7. The use of accessory attachment not recommended by the appliance manufacturer may cause hazards.
8. Do not use outdoors.
9. Do not let cord hang over edge of table or counter, or touch hot surfaces.
10. Do not place on or near a hot gas or electric burner, or in a heated oven.
11. Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, remove plug from wall outlet first.
12. Do not use appliance for other than intended use.
13. Always place kettle on level, dry surface.

SAVE THESE INSTRUCTIONS

- This appliance is for household use only.
- Any servicing should be done by an authorized service representative.
- A short power-supply cord is provided to reduce the hazards resulting from becoming entangled in or tripping over a longer cord. If a longer cord is required, extension cords are available from local hardware stores and may be used if care is exercised in their use. If an extension cord is used (1) the marked electrical rating of the extension cord should be at least as great as the electrical rating of the appliance, (2) the longer cord should be arranged so that it will not drape over the counter top or table top where it can be pulled on by children or tripped over accidentally.

INSTRUCTIONS FOR THE PROPER USE OF YOUR ELECTRIC KETTLE

Electricity and electric appliances can be dangerous if improperly handled and used. IT IS EXTREMELY IMPORTANT THAT THESE INSTRUCTIONS BE FULLY AND CAREFULLY READ, AND FOLLOWED, BEFORE USING THE KETTLE FOR THE FIRST TIME, IN ORDER TO ENJOY THE MAXIMUM SAFETY AND BENEFIT FROM YOUR ELECTRIC KETTLE.

PRE-CLEANING BEFORE FIRST USE: Before using your new kettle, ensure that it is THOROUGHLY CLEAN by carrying out the following procedure:

- (a) Fill the kettle with water, plug the kettle into an electrical outlet, allow the water to come to a boil and to continue to boil for approximately 10 minutes.

DO NOT PERMIT THE KETTLE TO BOIL DRY

- (b) Empty the kettle and discard the water
- (c) Refill the kettle with fresh water and repeat procedures (a) and (b).

FILLING

Kettle should always be unplugged when filling or adding water.

Pour in the required amount of water. **ALWAYS COVER THE ELEMENT** but do not fill above the maximum level mark in the spout. **WARNING:** If the kettle is overfilled there is a risk that boiling water may be ejected. Over filling can cause spillage and pouring problems. The maximum level mark indicates 1.0 and 2.0 quarts for models A-1 and B-1 respectively. **DO NOT FILL ABOVE THE BASE OF THE SPOUT.**

Place the kettle on a firm level surface, and plug into any 120 volt 60Hz outlet. **CAUTION -** The kettle is a high wattage appliance and no other appliance should be plugged into the same outlet or electric circuit at the same time. Overloading circuits can cause fuse problems and fire hazards.

POURING

Unplug before pouring. This reduces turbulence and improves pouring characteristics. Your kettle has a large handle with excellent handling characteristics. When only a small amount of water has been heated (or when pouring the last half of the total water capacity) grasp the rear of the handle. Well away from the spout. This improves balance and keeps the hand away from hot steam.