 


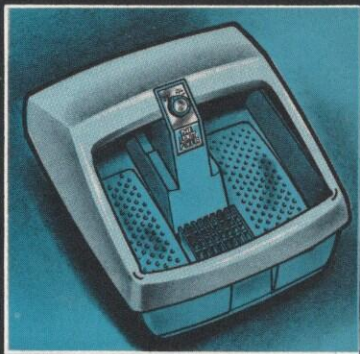

Scanned + Archived
By:
FindMyManual.org

THE FOOT FIXER[®]

by clairol

superior foot care system

use and care book

IMPORTANT SAFEGUARDS

Read All Instructions Before Using This Appliance.

When using The Foot Fixer, basic safety precautions should always be followed, including the following:

1. DO NOT use this appliance with a damaged cord or plug, or after the appliance malfunctions or has been dropped or damaged in any manner. Return to the nearest authorized service center for examination and repair (see service and warranty section for service center locations).
2. DO NOT pull this appliance by the supply cord and DO NOT use the cord as a handle.
3. DO NOT leave the appliance unattended when it is operating.
4. DO NOT stand on the unit. Use only when seated.

5. Always unplug the unit from the outlet when not in use, and when filling or cleaning. Fill with tap water only.

6. Use product only on ordinary household current (110-120 volt 60 cycle AC).

7. This appliance is not intended for commercial use. Use only for the intended purposes as described in this manual.

8. Use indoors, on flat level surface only.

9. Always use close supervision when this electrical product is used by or near children or invalids.

10. Discontinue use of this appliance if discomfort, irritation or pain results. DO NOT use on swollen or inflamed feet, or feet with skin eruptions. Consult your physician.

11. Never immerse the unit in water.

SAVE THESE INSTRUCTIONS

THE FOOT FIXER®

a superior system designed with professional-type features to soothe tired, aching feet.

unique thermostatically controlled heater lets you maintain the temperature of the water you add in The Foot Fixer for as long as you want. If you add 95°-100° water, that temperature will be maintained. Enjoy the soothing heated water alone, or accompanied by a comforting massage. (Note—Unit will *not* raise water temperature.)

easy-to-use 4-way control dial gives you the flexibility of selecting a variety of operations with just a twist of the wrist: Massage without Heat... Massage with Heat... and Heat without Massage, and of course, Off.

massaging arch rests with 322 Vibra-Fingers™ stimulate local foot zones with an invigorating action that leaves your feet tingling with pleasure. The special vibratory water massage relaxes and refreshes tired, tense feet.

massages with or without water as you prefer.

cord compartment
holds 6 foot cord

built-in storage stand
compact, space saver

durable design
lightweight, easy to clean

4-way control dial
off, massage,
heat & massage, heat

water line
proper water level

 
massaging arch rests
stimulates feet

thermostatically controlled heat
maintains water temperature

322 Vibra-Fingers™
stimulates local foot zones

drain spouts
convenient, easy

sure grip handles
easy to carry

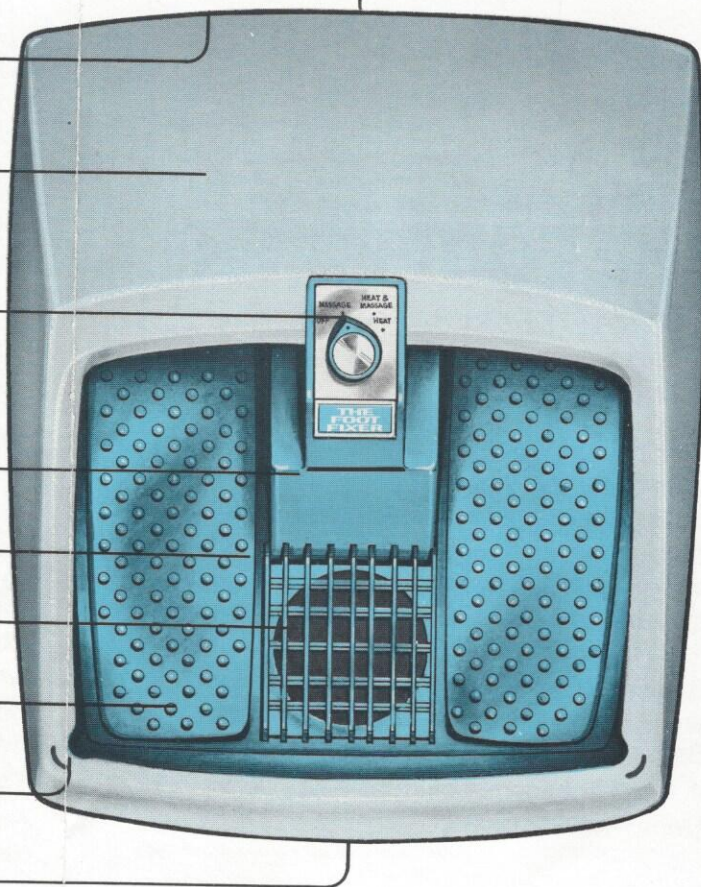

how to operate **THE FOOT FIXER[®]**

The Foot Fixer has been designed for operating ease and convenience. Simply follow these easy steps.

1. Fill The Foot Fixer to the water line indicator with warm water. (If you prefer, you may use the unit without water, for massaging action only.)
2. Place The Foot Fixer on the floor in front of your favorite chair. Non-skid rubber feet on the bottom of the unit will prevent slipping or marking of the floor surface.
3. Remove the cord from the cord compartment and plug it into any convenient 110-120 AC outlet. Be sure to keep the cord out of your way.
4. To start The Foot Fixer, turn the 4-Way Control Dial to the desired setting:

Massage when you want massaging action alone—with or without water. This setting causes the arch rests to start their vibrating motion.



Heat And Massage to add warmth to your vibratory water massage. The setting assures that the thermostatically controlled heater will continuously maintain the temperature of the water you add. (Note—Unit will not raise the temperature of the water you add.)


Heat if you prefer heated water without massage. This setting is ideal for soaking the feet in comforting warm water. The heater will maintain the proper water temperature eliminating the need to keep adding hot water. (Heat only with water.)

Off turns all the actions off. Be sure to switch to this setting before unplugging or emptying The Foot Fixer of water (if any) and putting the unit away.


5. Sit down and place your feet on the Massaging Arch Rests. (Notice how these arch rests are specially shaped to follow the natural curve of the foot.)

Press lightly on the arch rests to increase the intensity of the massaging action.

6. Relax and enjoy the soothing, stimulating action of The Foot Fixer. (If you like, you may add your favorite bath salt.)

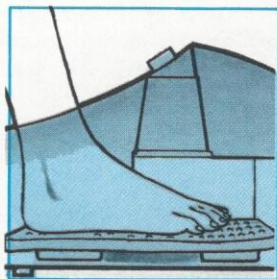

7. After relaxing and refreshing the feet, turn the dial to OFF. Unplug the cord and push it back into the cord compartment.

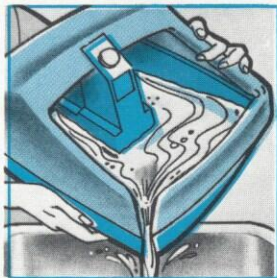

8. To empty the water, tip The Foot Fixer toward either of the dual drain spouts.

9. After using the product, simply rinse out with water. If you wish, from time to time, clean The Foot Fixer with a mild detergent and water. No additional maintenance is required.

10. Store The Foot Fixer in a closet or bathroom cabinet by standing it end up on its built-in space-saving storage stand.

Full One Year Warranty

The Foot Fixer® by Clairol is warranted against defects for one year from date of purchase.

If any malfunction occurs, do not use The Foot Fixer. Clairol Inc. will repair or replace it at no charge to you. Simply mail The Foot Fixer postage paid to the below location most convenient to you. Be certain that your Foot Fixer is wrapped carefully when mailing.

Your warranty will be void if malfunction resulted from damage or unreasonable use while in your possession. To assure prompt service, please include a letter indicating the specific cause for returning the unit to one of the following addresses:

Clairol Appliance Service Center
83 Harvard Avenue.
Stamford, Connecticut 06902

Clairol Appliance Service Center
907 Flower Street
Glendale, California 91201

Or, if these locations are not convenient for you, call this special toll free number to locate the service center nearest you: 800-447-4700. In Illinois: 800-322-4400.

This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

Model # FF-1

**U.S. Pat. 4.057.053, Des. Pat. 250, 206. Underwriters Laboratories Listed
Made and Printed in U.S.A.**

0680

PUT
STAMP
HERE

Clairol Inc.
P.O. Box 10520
Stamford, CT 06902

THE FOOT FIXER[®]

by Clairol
Model No. FF-1

IMPORTANT SAFETY NOTICE

Because product safety and consumer protection have always been, and continue to be, concerns of Clairol, we urge you to fill out and mail the attached ownership registration card at once. If a product defect should be discovered, your returned ownership registration card will enable us to contact you immediately.

FULL ONE YEAR WARRANTY

The Foot Fixer® is warranted against defects for one year from date of purchase.

If any malfunction occurs, do not use The Foot Fixer. Clairol Inc. will repair or replace it at no charge to you. Simply mail The Foot Fixer postage paid to the location most convenient to you. Be certain that The Foot Fixer is wrapped carefully when mailing.

Your warranty will be void if malfunction was caused by damage or unreasonable use while in your possession. To assure prompt service, please include a letter indicating the specific cause for returning the unit to one of the following addresses:

Clairol Appliance Service Center 83 Harvard Ave. Stamford, CT 06902	Clairol Appliance Service Center 907 Flower Street Glendale, CA 91201
--	--

Or, if these locations are not convenient to you, call this special toll-free number to locate the service center nearest you: (800) 447-4700. In Illinois: (800) 322-4400.

This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

IMPORTANT: Please fill out the attached ownership registration card and send it to Clairol.

© 1976-80 Clairol Inc., Stamford, CT 06902
U.L. Listed

THE FOOT FIXER®

by Clairol

Model No. FF-1

Ownership Registration Card

Please register your name and address by mailing in this card immediately. Although registration is optional and won't affect your warranty, it will enable us to contact you in the event a product defect is discovered. Also, to help us better serve you, we would appreciate your completing the short questionnaire below. Questions 1 through 6 are optional.

Name _____

Address _____

City _____ State _____

Zip Code _____ Telephone Number _____

Date of Purchase _____

1. Was this Clairol appliance a gift _____ or self-purchase _____? (Check one)

2. If a gift, for what occasion?

☐ Christmas ☐ Mother's Day
☐ Birthday ☐ Other

3. If a gift, did you specifically request by name?

☐ Yes ☐ No

4. Your approximate age is:

☐ 16-19 ☐ 30-34 ☐ 45-49
☐ 20-24 ☐ 35-39 ☐ 50-54
☐ 25-29 ☐ 40-44 ☐ Over 54

5. Please indicate your sex:

☐ Male ☐ Female

6. What was the approximate price of your appliance? \$ _____