

Contact Us

WE ARE READY TO HELP

oneisall offers a standard **2-year** warranty. If you have any issues with your oneisall product, please do not hesitate to contact us. Be sure to include your proof of purchase, model number, and any relevant photos or videos in your message to expedite the process. Our oneisall support team is available 7 days a week and will respond to your inquiry within **24 hours**. Thank you for choosing oneisall.

Please note that the oneisall warranty does not apply to used products or purchases made from unauthorized sellers. It's important to be aware that the warranty also does not cover consumable parts such as blades, guards, filters, brushes, and similar items. These parts may require regular replacement or maintenance.

✉ support@oneisall.com

☎ +1 877-522-8578 (US) **Mon-Fri** 8am-5pm(PST)

🌐 Web: www.oneisall.com



Guide video



@Oneisall Official

Made in China

oneisall
TRANSFORM HOW YOU PET

Scanned + Archived
By:
FindMyManual.org

Pet Grooming Kit

Model: X2



Any problems you have, please contact us:
support@oneisall.com

ON-D73

Contents

Each Part Name	EN-1
LCD	EN-2
Fixed Length Function	EN-3
Blade Removal & installation	EN-4
Cleaning&Maintenance	EN-5
Precautions For Use	EN-6
Q&A	EN-7
GPSR Product information	EN-8

Safety Instructions

1.Read Before Use: Before using the clippers, read all safety and operating instructions.

2.Electrical Safety: Ensure that the voltage indicated on the rating label matches your electrical outlet. Do not immerse the appliance in water or any other liquids to avoid electric shock.

WARNING: Keep the appliance dry.

3.Supervision: This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.

4.Regular Checks: Periodically check the clippers for damage. If the appliance or power cord shows any sign of damage, do not use it. Contact the service center for repair or replacement.

5.Regular Maintenance: Disconnect the clippers from the power source before cleaning, changing accessories, or performing any maintenance. Keep the blades clean and well-oiled to avoid overheating and ensure optimal performance. Replace blades as needed.

WARNING : Cutting blades may become hot after prolonged use.

 
6.Storage: After use, unplug and store the clipper in a dry place, away from pets and children.

7.Handling: Avoid touching the blades directly with your fingers. Always switch off the appliance when not in active use.

8.Use for Intended Purpose: These clippers are designed for trimming pet hair only. Do not use them for any other purpose.

9.Disposal: Dispose of the clipper and its accessories according to local regulations for electronic waste.

Each Part Name

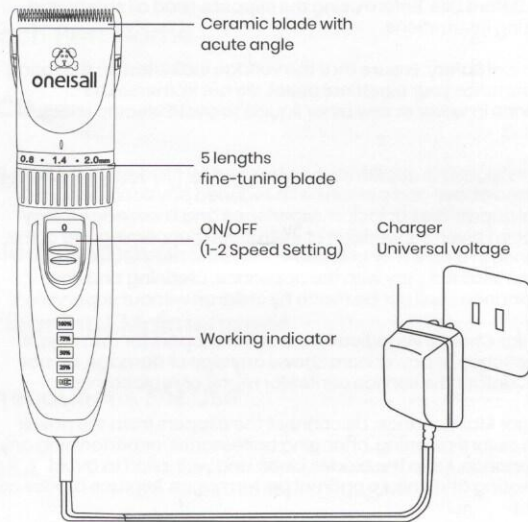

Limited comb 3-6-9-12-15-18mm



Cleaning brush



Universal voltage charger



Scissors



Comb

EN-1

2000mAh high performance lithium battery

Professional Hair Clipper	Motor	Operating voltage:3.7V
		Centering material:anti-wear brass
	Battery	high-performance environment-friendly battery
		Charging time:about 3H
		Operating time with full charge:about 240 min

Specific Adapter	Input: 110V - 240V50/60Hz
	Output:DC 5V === 1 A

LED

1>Charging status indicator

Remaining Battery performance	Battery indicator	20%	40%	60%	80%	100%
< 20%	✓	Flashing light	X	X	X	X
< 40%	✓	✓	Flashing light	X	X	X
< 65%	✓	✓	✓	Flashing light	X	X
< 80%	✓	✓	✓	✓	Flashing light	X
< 100%	✓	✓	✓	✓	✓	✓

2>Operating status display

Remaining Battery performance	Battery indicator	20%	40%	60%	80%	100%
< 100%	X	✓	✓	✓	✓	Flashing light
< 80%	X	✓	✓	✓	Flashing light	X
< 60%	X	✓	✓	Flashing light	X	X
< 40%	X	✓	Flashing light	X	X	X
< 20%	X	Flashing light	X	X	X	X
< 5%	Flashing light	X	X	X	X	X

 
EN-2

Fixed Length Function


A: Guide function trim for crew cut or the side hair Special long : (3,6,9,12,15,18 mm) 6 kinds of length adjustment to control the length of hair.

B: Blade limit regulator: 5 kinds of length adjustment from 0.8mm-2.0mm.

1. Determine the need hair length.
2. Select the appropriate limit comb.



 3. Fine tune the blade.

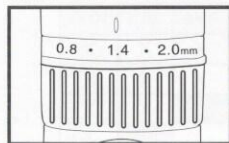

Moving the button left and right to adjust the blade(0.8mm-2.0mm)

Guide Comb installation:

Like the picture, hold both sides and push when butting the button positions. (Notes: the comb should not be loose or easy to fall off after being butted.)

Guide Comb installation:

Remove the butted positions with hands on its both sides and then remove the comb.



EN-3

Blade Removal & Installation

Blade Removal

 


- Like the picture, press down the moving blade with the thumb and then remove the blade.




- Please hold with the other hand to avoid the blade falling off.

Blade Installation



 - Adjust the adjusting ring to 2.0mm before installing the blade



- Direct the blade (B) at the hair clipper's slot (A) and plug in



- Push the blade down until it clicks

 
EN-4

Cleaning & Maintenance


Taper Blade Cleaning



1. Clear up the blade with cleaning brush.

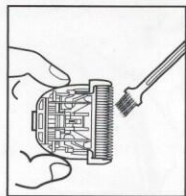


 2. The blade can be removed out for cleaning.

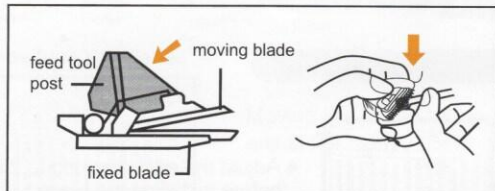

The moving blade can be turned back, and then cleaning the hair between the moving blade and the fixed blade.

 
Taper Blade Maintenance

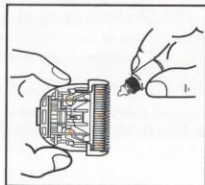



Before or after use, maintain the blade by dripping some oil on the red point places like the left picture. (oil included)

EN-5

 Precautions For Use

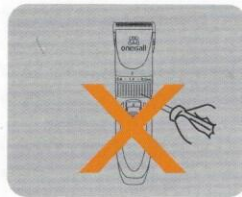

  1. Please do not disassemble the product.
2. The hair clipper can not be washed.
Please keep it away from wet conditions.

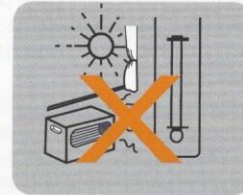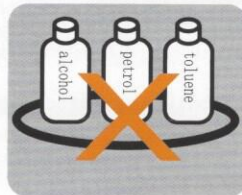

3. The product can only be cleaned by cloth with little water or mild soap solution.
4. Do not charge the product under environment above 104°F or below 32°F.
 - ※ The product can produce little heat during using or charging, which is normal.
 - ※ Please remove the battery safely and return it to the specified places when the battery runs out. Never discard it casually.

EN-6

Q & A

Q1. Any suggestions before using the clipper?

A1. Firstly, you should wash and dry the pet.

Secondly, if your pet's hair is too long, you should trim your pet's hair with scissors first, comb the hair smoothly, then use clippers to trim your pet.

Thirdly, before and after using the clipper, a little oil should be dripped on the blade for lubrication and maintenance.

Q2. What does the guide comb 3mm, 6mm, 9mm, 12mm mean? How to use it?

A2. The size of the blade and the guide combs means the length of the hair that can be left on your pet after a grooming.

For example, if you use the blade with 1.0(mm) and the 12mm guide comb together, that it will leave 1.0mm + 12mm = 13mm long hair on your pet.

If you use the blade with 1.0 (mm) and don't use a guide comb that the hair will be shortened to 1.0mm only.

Q3. What should I do if the battery cannot be charged or turned on?

A3. The battery life depends on the frequency of use and the time of use. If it is not used for a long time, it is recommended to charge the hair clipper at least once every three months to ensure battery life.

GPSR Product information

UK REP

Name: APEX CE SPECIALISTS LIMITED

Add: 8f East Union Street, Manchester, England, M16 9AE

Contact: Wells

Tel: +441616371080

E-Mail: Info@apex-ce.com

EC REP

Name: Apex CE Specialists GmbH

Add: Grafenberger Allee 277-287, 40237 Düsseldorf, DE

Contact Person: Wells Yan

Tel: +353212066339

E-Mail: Info@apex-ce.de

GPSR-Manufacturer info:

Business Name: chuzhouguanyidianzishangwuyouxiangongsi

Manufacturer Address: CN,239200,anhui,chuzhoushi,laianxian,xinanzhenqingliuxi-

lu,taixinxiangzhangyuan1dong1danyuan2403shi

E-Mail: oneisallofficial@hotmail.com

Product Name: Pet Clippers

Brand: oneisall

Product Model: X2

Input: 5V = 1A



Made in China