

Dear Parent,

We at LeapFrog know that you are your child's most important teacher. Our goal is to help you build an environment for your child that is rich in experiences—one that encourages discovery and fosters learning success.

The LeapPad® Plus Writing platform helps teach your child reading, plus writing and math! This system works with an exclusive library of books, and is also compatible with an ever-growing LeapPad Library of 50+ interactive books. LeapPad books are designed to grow with your child through each stage of reading, from reading readiness to reading fluency. From early discovery of letters and sounds to the more advanced concepts of sentence construction and story comprehension, the LeapPad learning system combines creative play with a proven educational curriculum that makes learning effective and fun.

LeapFrog® learning toys are designed to grow alongside your child through each stage of development. All are made with the same playful spirit that promotes a lifelong passion for learning. For additional information on how to make learning fun and effective, visit our Web site (www.leapfrog.com), where you'll find tips from parents and educators. We hope you'll join us there.

Sincerely,

Mike Wood

Mike Wood
President
LeapFrog Enterprises, Inc.



LeapPad Plus Writing
LEARNING SYSTEM

Scanned + Archived
By:
FindMyManual.org



Helps Teach Your Child Reading,
Plus Writing and Math!

Parent Guide & Instructions

This guide contains important information.
Please keep it for future reference.

www.leapfrog.com

LeapPad® Library

Over **50** book library grows with your child, so the fun never ends!

Plus, over **16** Quantum Pad™ books work with the LeapPad Learning System.*

LeapFrog® LEAP-START
Preschool-K • Up to Age 5

Pre-Reading, Pre-Math and Essential Subjects
Picture Books and Activity Books

12 BOOKS

LeapFrog® Phonics PROGRAM
Preschool-Grade 2 • Ages 4-7

A step-by-step program that helps your child learn to read.

14 BOOKS

LeapFrog® LEAP-1
Preschool-Grade 1 • Ages 4-6

Reading, Math and Essential Subjects
Storybooks and Activity Books

13 BOOKS

LeapFrog® LEAP-2
Grades 1-3 • Ages 6-8


Reading Comprehension and Reading to Learn
First Chapter Books and Subject-Based Books

11 BOOKS

LeapPad Plus Writing Library

Pre-K

Learn early reading, writing and math skills.

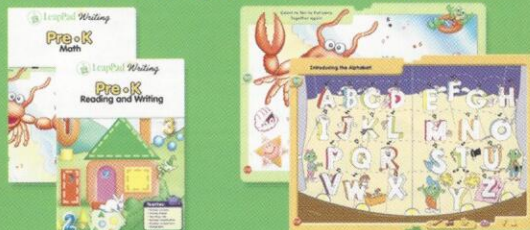


Kindergarten

Prepare for success in school! Learn letter-writing basics, beginning reading and math.



1st Grade

Learn essential skills for 1st grade! Read, spell, add, subtract and much more!

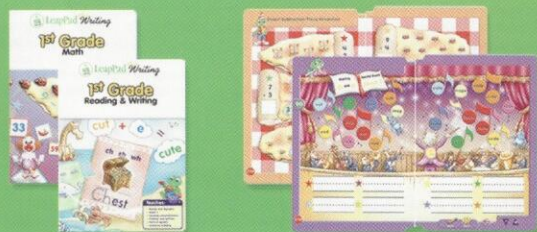

*All books not available in all markets.

INSTRUCTIONS FOR PLAY

Before using your LEAPPAD Plus Writing platform, please refer to the "Magic Pencil Reference Card."

- Insert the cartridge and place the LEAPPAD book into the LEAPPAD Plus Writing player. (You will not need a cartridge for the green LEAPPAD included book, "A Collection from the LEAPPAD Library.")
- Press the ON/OFF button to begin play.
- Use the LEAPPAD Plus Writing pencil attached to the player to touch the **GO** on the edge of the page. (You will only need to switch your pencil to Writing Mode for the writing activities in the LEAPPAD Plus Writing Books. All regular LEAPPAD Library books require the pencil to be in non-writing mode. Please see the "Magic Pencil Reference Card" for more information.)
- Now use your LEAPPAD Plus Writing pencil to touch words and pictures to make them come to life! Remember, you must touch the **GO** every time you turn the page. *

Your LEAPPAD Library book may contain the following features:

Say It

- Touch the  to hear the entire page read aloud.
- Touch the  in Phonics, LEAP™ 1 and LEAP™ 2 books with the LEAPPAD pencil, then touch any word on the page to hear it spoken.

Sound It

- Explore letters (or groups of letters) and their sounds.
- Touch the  in Phonics books with the LEAPPAD pencil to hear phonetic sounds.
- Try touching each letter in a word (left to right) or lightly drag the LEAPPAD Plus Writing pencil across a word to hear it sounded out.
- Certain letter combinations, or letter groups, are highlighted in yellow. These letters make phonetic sounds that are different from the phonetic sounds of each letter. Touch a letter group to hear the sound it makes.

Spell It

- Learn how to spell words by touching the  in Phonics, LEAP 1 and LEAP 2 books with the LEAPPAD Plus Writing pencil, then touching any word on the page.

Define It

- Learn the definition and hear the proper pronunciation of words in bold in LEAPPAD Plus Writing reading books. Touch a word in bold once for pronunciation, twice for the definition.

Play a Fun Learning Game

Look for the game icon at the bottom of the page to play a fun learning game. When you see one of these icons, touch it with the LEAPPAD® Plus Writing pencil to shift into game mode. The icon for each book will be unique, but will always be located at the bottom of the page.



- Touch the game icon at the bottom of the page with the LEAPPAD Plus Writing pencil, and then follow the instructions.
- Try keeping track of correct answers so you can play against yourself and friends!
- Look for other special icons at the bottom of the page that feature fun activities such as music mode and language mode.  

Interact with Pictures on the Page

Touch any of the characters or pictures with the LEAPPAD Plus Writing pencil to hear them magically come alive. Touch them again, and they may surprise you with more fun sounds and phrases!

Stop an Activity

You can stop any activity, story or sound by touching the LEAPPAD Plus Writing pencil to .

Volume Control

Touch the LEAPPAD Plus Writing pencil to the volume controls to adjust the audio volume on your LEAPPAD Plus Writing learning system.

Automatic Shut-off

When you are done playing with the LEAPPAD Plus Writing learning system, press the ON/OFF button with your finger. Otherwise, the LEAPPAD Plus Writing player will turn off automatically if it hasn't been used for a few minutes.

Headphone Jack

For quiet play, there is a jack for use with your personal headphones (or speakers) located on the back of the LEAPPAD Plus Writing learning system base. Consult the headphone or speaker manufacturer's operating instructions. Headphones are not included.

Warning:

- Headphone wires can be dangerous to small children. Headphones should only be used under adult supervision.
- This product may temporarily cease to function if subjected to electrostatic disturbance. To resume play, it may be necessary to turn the power off and back on or to remove and reinstall batteries.
- This product may function incorrectly if subjected to radio-frequency interference (R.F.I.). To resume play, the source of R.F.I. must be removed, and it may be necessary to turn the power off and back on or to remove and reinstall the batteries.

Care and Maintenance:

- Caring for your LEAPPAD Plus Writing learning system and LEAPPAD books:
- Keep away from food and beverages
- To clean, use a slightly damp cloth and mild soap. Air dry only
- Never use in water, or submerge in water
- Avoid bending, fraying, or biting LEAPPAD books
- Remove batteries during prolonged storage
- Avoid extreme temperatures

TROUBLESHOOTING	
Symptom:	Try This:
Toy does not turn on or does not respond	• Make sure batteries are correctly installed • Remove batteries and put them back in • Make sure battery cover is correctly secured • Clean battery contacts with rubbing alcohol • Install new batteries
Toy makes strange sounds or behaves erratically	• Install new batteries • Clean battery contacts with rubbing alcohol
Toy makes improper responses	• Install new batteries • Clean battery contacts with rubbing alcohol

Battery Safety:

Batteries are small objects. Replacement of batteries must be done by adults. Follow the polarity (+/-) diagram in the battery compartment. Promptly remove dead batteries from the toy. Dispose of used batteries properly. Only batteries of the same or equivalent type as recommended are to be used. DO NOT incinerate used batteries. DO NOT dispose of batteries in fire, as batteries may explode or leak. DO NOT mix old and new batteries or types of batteries (i.e. alkaline/standard). DO NOT use rechargeable batteries. DO NOT recharge non-rechargeable batteries. DO NOT short-circuit the supply terminals.

Battery Installation:

1. Requires 4 AA (called LR6 in some countries) alkaline batteries—not included.
2. Open the battery door with a screwdriver.
3. Install new batteries as shown in the polarity diagram (+/-) inside the battery compartment.
4. Replace battery door securely.

U.S. Consumer Service Contact:

Please visit our U.S./Canada Consumer Support Web site at <http://www.leapfrog.com/support>, 24 hours a day. You can search for frequently asked questions, or submit a question to our support staff via e-mail.

U.S./Canada Office:

Telephone: (800) 701-LEAP (5327)
Hours: Monday through Friday, 5:00 AM to 7:00 PM and Saturday 7:00 AM to 4:00 PM, Pacific time.

U.K. Consumer Service Contact:

Please visit our U.K. Consumer Support Web site at <http://leapfroguk.custhelp.com>, 24 hours a day. You can search for frequently asked questions, or submit a question to our support staff via e-mail.

U.K. Office:

Tel: 0800 169 5435
Eire: 00 44 1702 200244
Hours: Monday through Friday, 9:00 AM to 5:00 PM.

IMPORTANT: Please notify the LeapFrog Consumer Service department of any difficulties before returning this product for any reason. Returns must have a Return Authorization number (RA#) in order to be processed. If the service representative is unable to solve the problem, you will be given instructions on how to replace the product.

WARNING: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note:

This device complies with Part 15 of the FCC rules. Operation is subject to the following two conditions:

- 1) This device may not cause harmful interference, and
- 2) This device must accept any interference received, including interference that may cause undesired operation.

This equipment has been tested and found to comply with the limits for a Class B digital device pursuant to Part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference to radio communications. Because this toy generates, uses, and can radiate radio frequency energy, there can be no guarantee that interference will not occur. If this toy does cause interference to radio or television reception (you can check this by turning the toy off and on while listening for the interference), one or more of the following measures may be useful:

- Reorient or relocate the receiving antenna
- Increase the separation between the toy and the radio or the TV
- Consult the dealer or an experienced TV-radio technician for help

Warranty Information

This LeapFrog product is warranted only to the original purchaser for a period of 3 months from the original purchase date, under normal use and service, against defective workmanship and material. This warranty is void if the product has been damaged by accident or unreasonable use, immersion in water, neglect, abuse, battery leakage or improper installation, improper service, or other causes not arising out of defects in workmanship or materials. Repair or replacement as provided under this warranty is the exclusive remedy of the purchaser. LeapFrog shall not be liable for any incidental or consequential damages for failure of any express warranty on this product. Any implied warranty of merchantability or fitness for a particular purpose on this product is limited to the duration of this warranty. Some states do not allow the exclusion or limitation of incidental or consequential damages, or limitation on how long an implied warranty lasts, so the above limitations or exclusions may not apply to you. This warranty gives you specific legal rights and you may also have other rights, which vary from state to state.

During the warranty period, your product will either be repaired or replaced at LeapFrog's option, when returned, shipping prepaid and with proof of purchase date as instructed by a LeapFrog service representative. In the event that your product is replaced, the replacement will be covered under the original warranty or for 30 days, whichever is longer.

Canada: In addition to the above-referenced warranty, the hardware component shall be free from defects in material and workmanship for 12 months. The above express warranty and any applicable implied warranties are limited in duration to the warranty periods described above. Some provinces do not allow limitations on how long an implied warranty lasts, or the exclusion of incidental or consequential damages, so the above limitations do not apply to you. You may also have other rights, which vary from province to province.

U.K.: In addition to the above-referenced warranty, this LeapFrog product shall be free from defects in material and workmanship for 12 months where the 3-month warranty period is not valid. The above express warranty and any applicable implied warranties are limited in duration to the warranty periods described above. Some provinces do not allow limitations on how long an implied warranty lasts, or the exclusion of incidental or consequential damages, so the above limitations do not apply to you. You may also have other rights under U.K. law, which this warranty does not limit.

LEAPFROG, the LeapFrog logo, LEAPPAD, LEAP, LEAPSTART and QUANTUM PAD are trademarks or registered trademarks of LeapFrog Enterprises, Inc. © 2003 LeapFrog Enterprises, Inc. All Rights Reserved. U.S. Patent Number 5,686,705. Patents Pending.

TICONDEROGA and the Green Pencil Band are registered trademarks of the Dixon Ticonderoga Company, used with permission.

MADE IN CHINA

Visit our fun-filled Web site at: www.leapfrog.com

For ages 4-8

Part No. 600-02910