 
 


Model H-4525-0

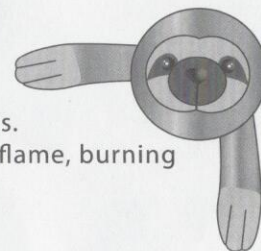

Scanned + Archived
By:
FindMyManual.org

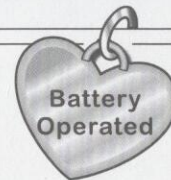

 
Read and save these instructions

Warning

- Please consult your physician if you have serious muscle or joint aches prior to use.
- The massager should not be used on swollen and inflamed body parts.
- Please exercise supervision when a disabled or ill individual operates the unit.
- Pregnant women or someone who is wearing a pacemaker is not recommended to operate this unit.
- Do not apply the unit to one spot for more than 15 minutes.
- Do not place the unit near the water or drop it in the sink.
- Discontinue to use if pain or discomfort results.
- Do not use the unit with liniments, balms, cream, oil, or lotions.
- DO NOT mix old and new batteries.
- DO NOT mix alkaline, standard (carbon-zinc) or rechargeable (ni-cad, ni-mh, etc) batteries.
- DO NOT leave message motor ON when not in use.
- DO NOT place or store this massager where it can fall or be pulled into a tub or sink.
- This massager is NOT A TOY.
- Close supervision is necessary when this massager is used near infants, babies, children and disabled persons.
- DO NOT use this massager if it has been damaged, if fabric is torn, or if it has been dropped in water.

Caution

- Beware of possible suffocation. Keep this massager away from infants, babies, children and disabled persons.

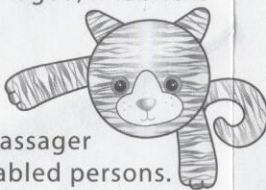

- Keep massager away from sharp objects.
- DO NOT expose this massager to open flame, burning cigarettes or excessive heat.

Care and Maintenance

- DO NOT machine wash or dry clean.
- DO NOT clean while massager is ON.
- DO NOT leave massager in direct sunlight or in a damp place.
- Spot clean with a damp cloth.

Battery Installation

- Two "AA" batteries (not included) are required for operation.
- To install, open the velcro on the massager. Take out the battery box and screw out the cover of battery box. Position the batteries corresponding to the polarities of the battery compartment. Screw the cover of the battery box securely and put back into the massager.
- To turn massager on, press power button on.
- To turn massager off, press power button again.
- Remove batteries from battery compartment when not in use for extended period of time.

