

Quick Setup & Internet Connectivity Guide

LHB336

Network 3D Blu-ray Home Theater

Use this guide for basic setup. Check the user's guide for detailed product information.
For additional information and support, check these links and help lines:

Product Information:

www.lg.com/us/bluray

Product Support:

www.lg.com/us/support
1-800-243-0000

Netflix Subscription:

www.netflix.com/LG

Netflix Support

 
www.netflix.com/help
1-866-579-7113

Supplied accessories:

Composite Video Cable



AM/ FM Antenna



Owner's Manual &
PC Software CD




Color-Coded Speaker Cable




x 6


Remote Control

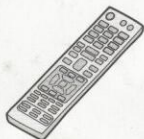

AAA Batteries (x2)

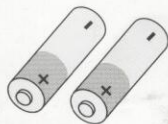


iPod Cradle

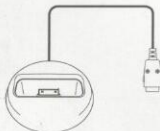


Connect the System to Your TV

Connect to your TV with option A,B or C. Find other connection options in the user's guide.

Option A Best quality – HDMI connection (includes audio and video)

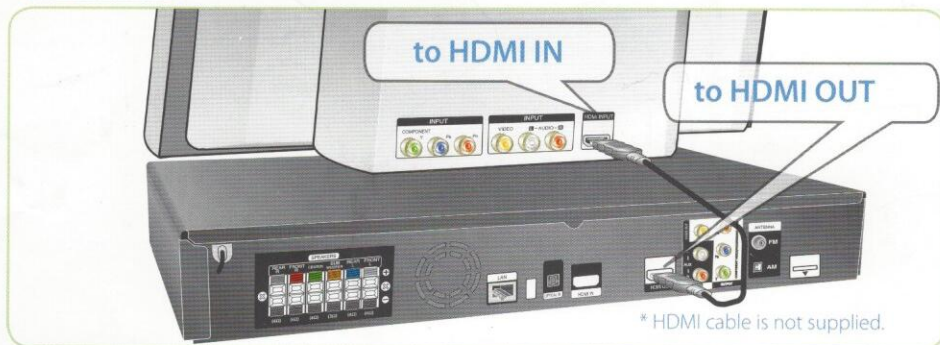


Option B Excellent quality – Component video

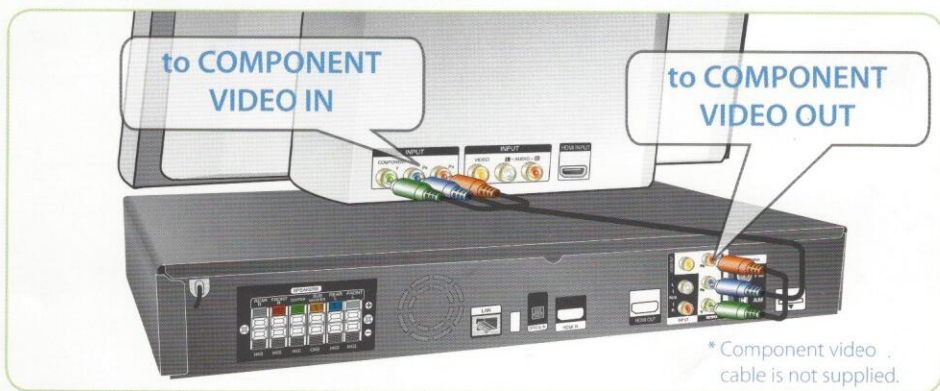

Option C Good quality – Composite video




Connect the Speakers and Radio Antennas

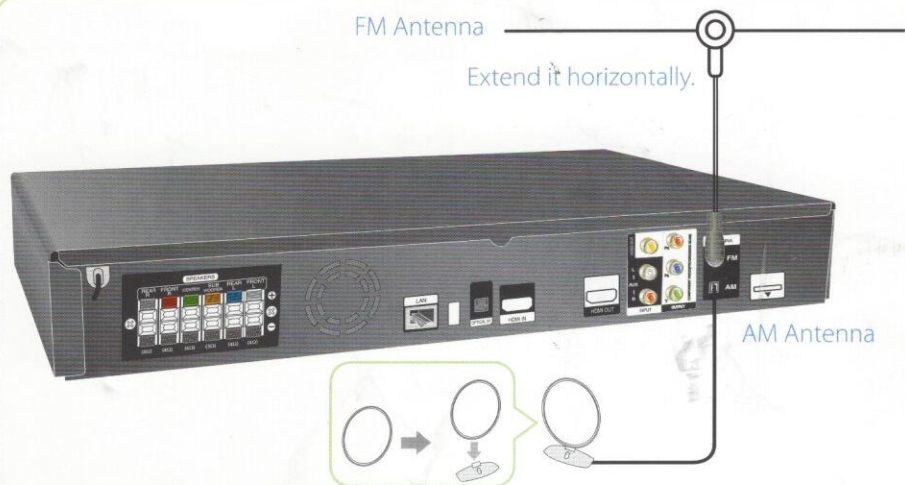

1. Connect Speaker Wires to the Main Unit.


Each speaker wire is color-coded. Use matching color wires for corresponding speakers.

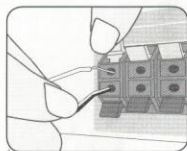

Color	Speaker	Position
Grey	Rear	Rear right
Blue	Rear	Rear left
Green	Center	Center
Orange	Sub Woofer	Any front position
Red	Front	Front right
White	Front	Front left

- Make sure the wire marked black goes in to the terminal marked "-" (minus) and the other wire goes in to the terminal marked "+" (plus).

Positioning the system

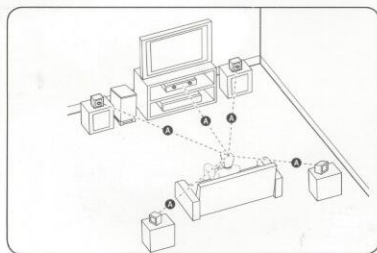


For the best possible surround sound, all the speakers other than the subwoofer should be placed at the same distance from the listening position (A).

Connect to the Internet

To take advantage of the many network-enhanced features, connect your player to the internet through your broadband home network.

Option A Wired Connection (Ethernet / LAN Cable)

For the highest quality internet connection, the best option is to connect an Ethernet cable from your player directly to your home network's router or cable / DSL modem.

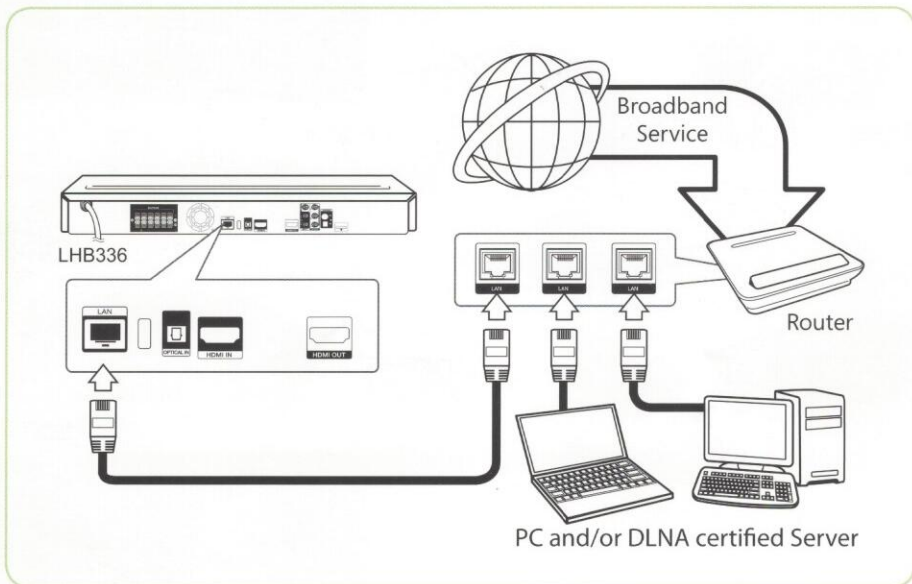

- 1 Connect the Ethernet cable to a network port in the wall or a network router.
- 2 On the player, connect the Ethernet cable to the Ethernet port.

TIP: If your router or cable / DSL modem is far away from your player, Ethernet cables are available at many stores in lengths of 50 feet and longer.


Option B Wireless Connection

If a wired connection is not possible, use a wireless network adaptor to connect to your existing wireless home network.

If you want to set the wireless network connection, a USB typed wireless network adaptor must be connected to the USB port on the rear panel.

The compatible wireless network adaptor can be purchased from the dealer that you have purchased this player or nearest LG service center.

Compatible Wireless Network Adaptor Model Name : AN-WF100

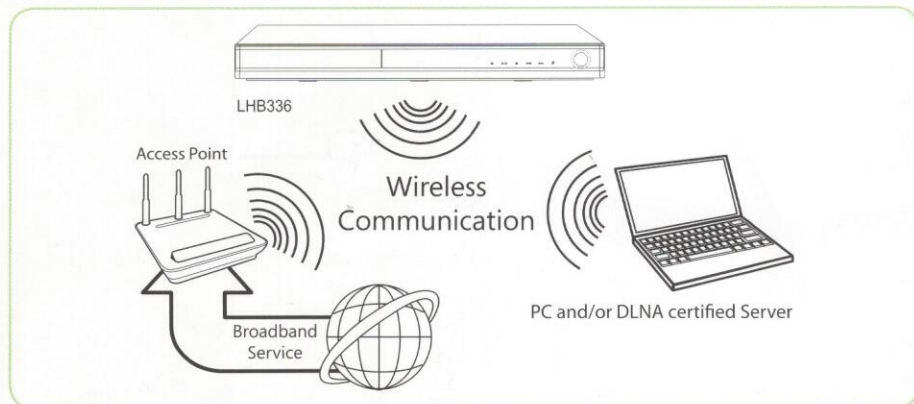


For the wireless network connection, the player needs to be set up for network communication. This adjustment can be done from the [Setup] menu. Adjust the [NETWORK] setting as follow.

Preparations:


- Connect the wireless network adaptor to the USB port on the rear panel.
- An access point or wireless router are needed to connect the player to your home network wirelessly.
- Setting up the access point or the wireless router is required before connecting the player to the network.
- Check the setting information (SSID, security setting) of your access point or wireless router through your computer.

- 1 Press HOME and use </> to select the [Setup] then press ENTER.
- 2 Select [NETWORK], then press ENTER.
- 3 Select [Connection Setting], then press ENTER.

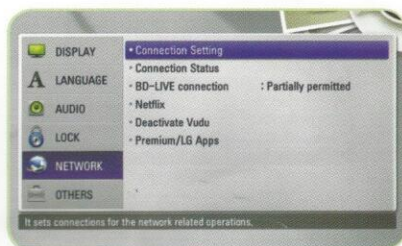


Continued in the back ►

4 Use $\wedge$ / $\vee$ to select the [Wireless] and press ENTER.

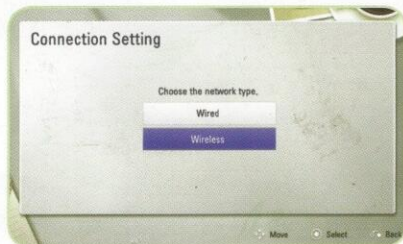

5 Selects [Yes] and press ENTER to continue. The new connection settings resets the current network settings.

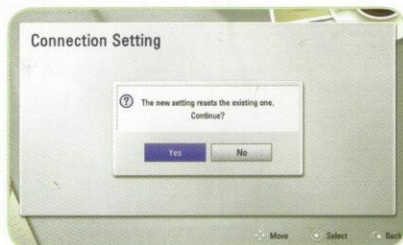


6 Select the name of your home's wireless network, then press ENTER, then use $\leftarrow$ / $\rightarrow$ to select [OK] and press ENTER. If your wireless home network has a security setting, does not broadcast its name, or requires a static IP setting, see "Wireless Network Setup" in the owner's manual for advanced setup instructions.



7 The player will then ask you test the connection. Select [Test] and press ENTER.

Network status can also be checked by following below steps:
Home > Setup > Network > Connection Status

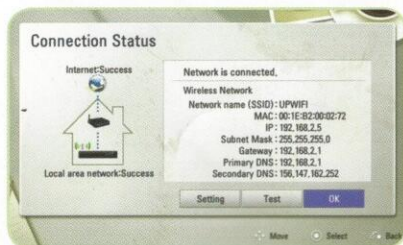

Tip:


For best wireless network performance with streaming video services, a wireless router with 802.11n or at least 802.11g is best. Make sure that the player and wireless router are placed as close together as possible within the home and that both units are placed well above floor level for maximum reception.

LG TV Apps

STEP 1 Sign up with LG TV Apps

(If you are already a member, skip to step 2)

- 1 Press HOME and use </> to select [LG Apps], then press ENTER.
- 2 Press red (R) colored button to sign in.
- 3 Press red (R) colored button again to register.
- 4 Fill [ID], [Password] and [Re-enter Password] fields using virtual keyboard. Select [OK] then press ENTER (⊙) to register your account

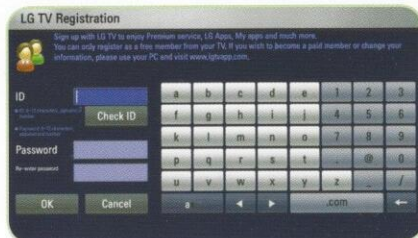

To install a paid application, you need to be a paid member.
Visit www.lgtvapp.com for more information.

STEP 2 Install and excute an application

- 1 Press HOME and use </> to select [LG Apps], then press ENTER (⊙).
- 2 Use </>/^/v to select an application, and press ENTER (⊙) to display the information.
- 3 Press ENTER (⊙) while [Install] icon is highlighted. The application will be installed to the player. To install an application to the player, user needs to sign in.
- 4 Press yellow (Y) colored button on the [LG Apps] screen to display the [My Apps] screen
- 5 Select the installed application and press ENTER (⊙) to excute it.



<LG Apps>



<My Apps>

Instant Streaming from Netflix

STEP 1 Subscribe to Netflix / Start Free Trial (See Terms of Use)

(If you are already a Netflix member, skip to step 2)

Start your free trial through your computer by visiting:

www.netflix.com/LG

STEP 2 Activate your player for instant streaming

- 1 Press HOME and use $\langle / \rangle$ to select [Premium], then press ENTER.
- 2 Select [Netflix], then press ENTER.
- 3 Use $\langle / \rangle$ to select [yes], then press ENTER. Wait a moment for an activation code to appear on your screen. Note the activation code number.
- 4 At your computer, go to www.netflix.com/activate and enter the code displayed on your TV screen.



Network Software Updates

From time to time, new enhancements to your product may be made available through software updates. You can easily access new software enhancements if your player is connected to your broadband home network.

Preparations:

Before updating, remove any disc and USB Flash Drive from the player, turn off the player and then turn it on again.


Caution:

The software update process may take a few minutes. During the update process, do not turn off the player, do not disconnect the power and do not press any buttons.


- 1 Press HOME and use $\langle / \rangle$ to select the [Setup] then press ENTER.




- 2 Select [Software] option on the [OTHERS] menu then press $\rangle$ or ENTER. Select [Update] option and press ENTER to check for the newest update.

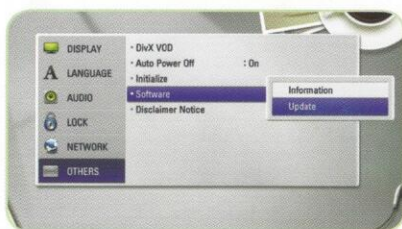

- 3 If newer version exists, the message "A new update was found. Do you want to update?" appears. Select [OK] then press ENTER to start updating.

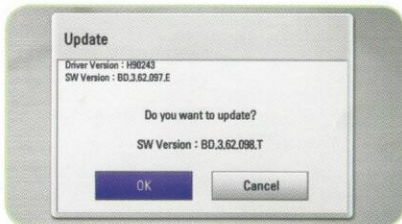

- 4 When update is completed, the message, "Update is complete." will appear, and the power will turn off automatically after 5 seconds.

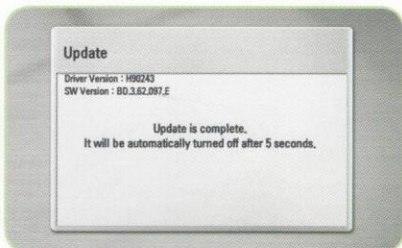

- 5 Turn the power back on. The system now operates with the new version.



LG

Life's Good