

Electric Pet Trimmer

Scanned + Archived
By:
FindMyManual.org



User Manual

The head and accessories are subject to actual purchase
Applicable model: YP-7116

 
Thank you for buying our product. Please read this manual carefully before you use this product. After that, just keep it in the place where you will find it easily. All pictures only for your reference, actual product is subject to real article.

■ Product introduction

1. Technical Parameter

Product name: Electric Pet Trimmer	input: 5V ---1A
Charging time: about 1.5 hours	Using time: about 80 minutes
Battery type: Lithium battery	
Weight: Standard size trimmer: 138.6g	Narrow size trimmer: 131g
	Nail grinder: 139g
Size: Standard size trimmer: 161 x 43 x 34.5 mm	
	Narrow size trimmer: 176 x 33 x 32.5 mm
	Nail grinder: 165 x 33 x 30 mm

Accessories (Subject to actual purchase):



Four guide combs for Standard size trimmer



a guide comb for Narrow size trimmer



Blade Oil



Cleaning brush



USB cable



User Manual

2. Technical Highlights

Safety Replaceable Heads

Special cutter head in R-shaped round corner protects the skin from scratching.

100% Waterproof

Safe to use in the shower, and easily cleaned under running water.

A variety of replaceable tool heads (Subject to actual purchase)

Standard size trimmer, Narrow size trimmer, Nail grinder, meet the pruning requirements of different parts

Being super quiet, pets get no fear of cutting hair.

Detachable cutting heads, easy to clean.

Equipped with several guide combs for trimming hair of various lengths.

■ Introduction to cutter head

1. Cutter head classification (Subject to actual purchase)



Standard size trimmer ①

This is suitable for trimming the whole body of any pets. By attaching different guide combs, you can trim pet hair at different lengths of your choices, which is most useful for beginners who just learn how to trim pets.



Narrow size trimmer ②


This is suitable for trimming pet hair on areas around feet, hip and eyes for medium and large size pets. Along with standard size trimmer and guide comb, you can trim pet hair with personalized style and preferred hair length. Beginners are advised to use guide comb to trim hair for a safe trimming experience at their first attempt.



Nail Grinder ③

This is for grinding pet nail.

2. Heads Assembly and Disassembly

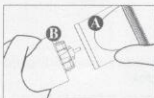

Assembly of cutter head

Aim the cutter connector A to the machine slot B.
Press the cutter back heavily until hearing a click.

Disassembly of cutter head

Pull the cutter head a way from the body B in the opposite direction.

3. Standard size trimmer assembly and disassembly ①

· Assembly of standard size trimmer



Turn off the clipper and press your thumb on cutter teeth, then push outward along the arrow direction as picture shows to take off the blade.
When disassembling, please hold up the blade to avoid falling.

· Assembly of standard size trimmer



1. Aim the cutter connector A to the machine slot B.

2. Press the cutter back heavily until hearing a click.



Warning

White ceramic blade is easily broken, please handle with care in the process;
The damaged ceramic blade may get the hair stuck and the blade won't work, please replace the cutter head timely.

And sterilize the blade regularly to ensure the hygiene.

■ Cleaning and Maintenance of cutter head

· Standard size trimmer ①

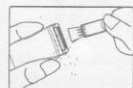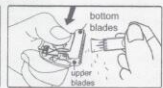

Applicable to all heads: Use the cleaning brush to brush off the hair which stick to the cutter head.

Standard size trimmer: Press the back end of bottom blade as indicated in the picture, and clean the hair stuck between upper and lower blades.

Warning

Never take off the springs of cutter head, otherwise the cutter head may not return to original state for normal operation.


Each time after using, please do take off the cutter head and clean the surface, as well as the seam between upper and lower blades to avoid weakening the sharpness of blades. Please dry the cutter head to avoid the springs getting rusty.

Please drip the blade oil into the cutter head for maintenance after each cleaning.

2. Lubrication of cutter head



Standard size trimmer

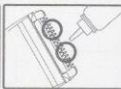

Other trimmers

Add a small amount of lubricating oil between blades as indicated in the picture. Please use the oil that included in the package and don't use other oil.

· Other trimmers ②③

Attention

The service life of cutter head is related to the frequency of use, hair thickness and maintenance;

Timely replacement of worn blades can avoid hair pulling during trimming, don't use unmatched blades from other manufacturers.



The blades may slightly heat up in the process of using, it's the normal situation which won't affect the using.

Guide Comb

Guide combs are used to cut hair at fixed lengths to avoid cutting too much hair by mistake, especially at the beginning.

Guide comb application and removal

① Standard size trimmer: 3mm- 6mm- 9mm- 12mm guide comb

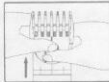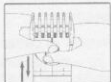

Comb application: Slide comb over front of trimmer with comb notches sliding into the grooves on sides of trimmer head until you hear a "click".

Comb adjustment: Adjust comb length by moving notches up or down to desired length.

Comb removal: Push up on bottom of comb and slide off trimmer head.

② Narrow size trimmer: 2mm guide comb

Comb application: aim the slot on one side first and then the other until you hear a "click".

Comb removal: this is opposite to comb application by removing one side from the slot then the other side.

It's advised to clean and blow dry pet hair before a trimming session.

Stain or other unusual object on hair will reduce blade sharpness and life.

Trimming Operation

Trimming with guide comb

According to the desired hair style, select suitable length of guide comb, hold the trimmer with cutter head upwards. Then let the flat surface of comb touch the pet skin gently, move the trimmer forward along the hair in the same direction that hair grows, and cut the hair that needs trimming.

Trimming without guide comb

Without using guide combs, it requires professional trimming skills to trim hair to the right length. If just move the back side of the cutter head along the pet skin without guide combs, the remaining length of the hair after trimming is about 1mm.



It is advised not to hold the trimmer upside down to trim hair which may cut pet skin.



Don't trim wet pet hair which will reduce cutting performance.

Don't hold trimmer too firmly against pet which may lead to scratch pet skin.

Trimming skills applicable to different areas

1. Use narrow size trimmer to trim pet hair on areas around feet, hip and eyes for medium and large size pets.

2. Nail grinder: Hold a pet paw and put pet nail slightly against rotating nail grinder to start nail grinding.



It is advised only to grind off the tip of nail when you grind pet nail first time. It takes a few nail grinding sessions for pets to get used to nail grinding.

Cleaning and Maintenance



Use oil free hair scraps in replaceable heads slots.

This product is only can be cleaned in wet cloths or with neutral soap lotion. Wipe the machine and make it dry, then equipped with the head. Keep it well for future use.

Don't wipe clipper body with gasoline, alcohol, Banana Oil and other corrosive chemical agents.

Don't disassemble or repair it without authority, please contact dealer or manufacturers for repair service.



Suitable for cleaning under an open tap

Warning: Only clean the handheld part in water after separating it from the power cord.

Charging



Connect the USB cable to trimmer

Warm tip: After you bought this trimmer, please charge it before you put it into use.



Make sure it has been closed, the USB cable end is put into the USB socket and its indicator lamp is on.

(USB cable could be put into its socket, and other sockets in cell phone adapter/desktop computer, laptop, portable power bank, etc).

Caution

- Regular cleaning and maintenance will ensure high performance and extend the life of the machine.
- Do not leave the machine in hot environments or in direct sunlight.
- Do not mix with pets or humans.
- Do not modify, disassemble or repair the product yourself.
- When the cutter head is worn out and needs to be replaced, please use the original parts.
- Do not put heavy objects on the charging cord or use other objects to jam the cord to avoid damage or deformation.
- During use and charging, the pet trimmer may become slightly warm, this is normal and please feel free to use it.
- Please check if the cutter head is damaged or deformed before use.
- This product can only be charged with the supplied USB charging cable.
- If the USB charging cable is damaged, it must be replaced with a special USB charging cable or a special kit from our company and from our professional repair department.
- Do not press the blade head hard against the skin.
- This product is not intended for use with persons with physical, sensory or intellectual disabilities and persons (including children) who lack experience and common sense.
- If you find any abnormalities or faults with this product, discontinue use immediately and treat the product according to the type of fault and refer it to our service department for repair if necessary.
- The charger should preferably be used in an ambient temperature of between 5°C and 40°C. The battery takes approximately 1.5 hours to charge. After 3 to 4 full charges and discharges, the battery capacity will reach its optimum state.

⚠ Note: If you find that the battery has leaked, wipe the body with a cloth and put the leaking battery in a plastic bag and hand it over to an institution qualified to recycle and dispose of it. If the leaking battery comes into contact with the skin, please rinse with water and seek medical attention if you feel unwell.

Warning

1. It is forbidden to use non-rechargeable batteries in this product!
2. Batteries should be left in reserve before charging and only use adapters or USB sockets with an output of DC5V 1A in accordance with national standards!
3. Use this appliance only for the purpose described in the instructions.

Recycling

The batteries in electric clippers contain substances that may be harmful to the environment.

- the batteries must be removed from the push cutter before it is disposed of;
- the electric push shears must be disconnected from the electricity when the batteries are removed;
- Batteries should be disposed of safely.

To remove the batteries: disconnect the power supply and let the push cutter work until the power is exhausted, then unscrew all the screws on the body, remove the housing and remove the rechargeable batteries.

Warning: Do not short-circuit the batteries as this may cause them to burn and cause a fire.

Do not throw the battery into a fire as this may cause an acoustic explosion or release toxic substances.