



Scanned + Archived
By:
FindMyManual.org



PRECISION
TRIMMER | **PT45**



USER MANUAL



TABLE OF CONTENTS

02

GREAT BEARDS ARE GROOMED

03

HERE'S WHAT YOU'RE WORKING WITH

04

BEARD WORKS OF ART

06

INSTRUCTIONS





THE BEARD CLUB
PRECISION
TRIMMER **PT45**

BEARDS ARE GROWN

GREAT BEARDS ARE GROOMED

Congratulations. You're now in possession of one of the best beard trimmers money can buy. No matter what style you're looking to sport, this powerful piece of machinery will get the job done right. And this thing is built like a linebacker; rugged, durable body with a 7,000 rpm motor, and a titanium coated blade. It will soon be your beard's best friend. Thanks for choosing The Beard Club Precision Trimmer.

HERE'S WHAT YOU'RE WORKING WITH

- 1 Steel alloy fixed blade, silver titanium coated ceramic moving blade.
- 2 Press and hold the power button for 5 seconds to lock during travel.
- 3 Twist handle to easily adjust to 5 different blade lengths.
- 4 LED display indicates battery life. A full charge gives you 3 hours of run time.
- 5 Powerful 7,000 RPM motor.
- 6 Most trimmers come with just a few guides. We give you 8 color-coded guides for the ultimate in precision. Combined with the 5 trimmer length settings, you've got the ability to set your Precision Trimmer to 45 unique trim lengths!





BEARD WORKS OF ART

Now that you have the tools you need to create your masterpiece, here are just a few looks for inspiration. For instructions and videos on how to get the look you want, be sure to visit blog.thebeardclub.com



CLASSIC GOATEE

This billygoat-inspired chin-warmer is a great look especially during the warmer season. It adds a nice touch of definition to any jawline.

ANCHOR BEARD

This crisp, nautical-themed beard will chart your course into stylishness without weighing down your face.



CIRCLE BEARD

The circle beard is exactly what the label says: A tidy ring of facial hair that encircles the mouth.

MUTTON CHOPS

Think of mutton chops as the opposite of a Goatee: The chin is the only part of the face that is shaved, while the sides remain neatly groomed.



SHORT BOXED BEARD

Full enough to count, short enough not to get in the way, the short boxed beard is a perfect beard for all situations.

THE VERDI BEARD

Pairing a full beard with a carefully shaped mustache, the Verdi combines rugged manliness and precision grooming.



FULL BEARD

The facial hair equivalent of pushing your chips across the table and sneering, all in.


THE GARIBALDI BEARD

A step beyond even the full beard, this style can truly be called a mane thanks to its impressive length and fullness.



INSTRUCTIONS


TRIMMER COMPONENTS

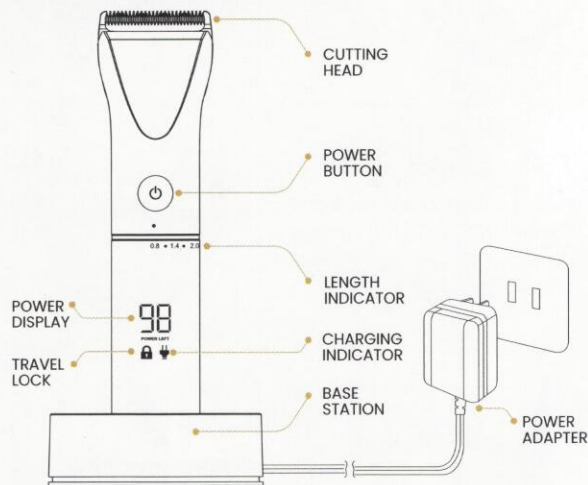

ACCESSORIES




OIL BRUSH

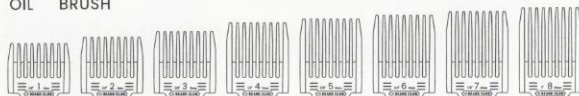


BEARD GUIDES

ADJUSTING CUTTING LENGTH

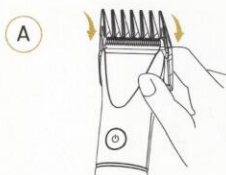

- Slide trimmer into beard guide, cutting head first
- Slide on with even pressure until you hear a "click"
- When fully secured, cutting head should be flush with the cutout in the beard guide's teeth
- To remove beard guide, while holding trimmer, place thumbs on both sets of three lines and push beard guide forward evenly

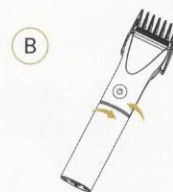

- Hold Top of trimmer body and twist bottom to desired position
- Final beard length will be the length indicator plus length of the beard guide used, if any

CHARGING METHODS



- Plug power adapter into wall outlet
- Ensure trimmer is off, then plug power adapter into the trimmer




- Plug power adapter into wall outlet
- Plug power adapter into base station
- Ensure trimmer is off, then place trimmer into base station.


CHARGING INFORMATION

- Fully charge trimmer prior to first use
- While charging, a blinking plug icon will be displayed
- When fully charged, the power indicator will display "99" and the plug icon will stop blinking
- The plug icon will flash red when the battery level is below 15%
- The trimmer will take approximately 2.5 hours for a full charge
- A full charge will provide approximately 3 hour of use


MAINTAINING CUTTING HEAD

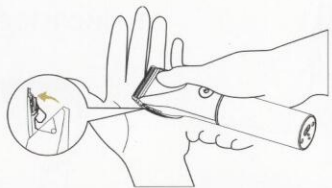

- Using thumb, apply pressure to teeth of cutting head away from trimmer body
- Use other hand to prevent blade from dropping

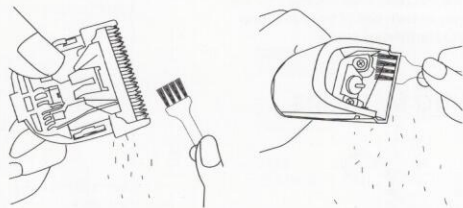


- Use brush to clean hairs from cutting head and trimmer cavity
- Cutting head may be rinsed with water but trimmer body must be kept dry

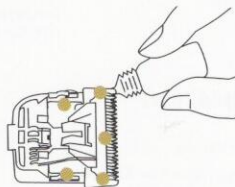

- Apply included oil to cutting head teeth
- Slide spring loaded cutting blade to one side and oil where it contacts metal plate
- Slide spring loaded cutting blade to other side and oil where it contacts metal plate

ATTACHING CUTTING HEAD

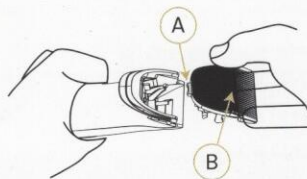

- Ensure length indicator is in the 2.0mm position
- Insert guiding clip ("A" above) into the receiving cavity in the trimmer body
- Ensure cutting head is aligned and press down on the center of the cutting head ("B" above)
- Press until you hear a "click" sound

SPECIFICATIONS

Lithium-ion Rechargeable Battery

Rated Voltage: 3.7V

Charging Time: Approx. 2.5 hours

Running Time: Approx. 3 hours

Capacity: 2,000 mAh

Adapter

Input: 100-240V 50/60Hz

Output: DC 5.0V 1A

LIMITED WARRANTY

- Your trimmer includes a one-year limited warranty against defects in materials and workmanship
- The warranty is valid for a period of one (1) year from the date of original purchase
- Valid proof of purchase with date is required
- For additional information, please visit <http://thebeardclub.com/warranty>

IMPORTANT SAFETY INSTRUCTIONS

This is an electrical appliance with built-in battery and NOT water-proof. Basic precautions should always be observed in order to reduce the risk of electric shock or injury, including the following:

- Read all instructions before using this trimmer.
- Use the trimmer only for its intended purpose as described in this Manual.

FOR HOUSEHOLD USE ONLY

DANGER To reduce the risk of electric shock:

- Keep the trimmer dry.
- Do not reach for an appliance that has fallen into water. Unplug immediately from receptacle.
- Do not use while bathing or in a shower.
- Do not place or store the trimmer where it is able to fall or be pulled into a tub or sink. Do not place in or drop into water or other liquid.
- Except when charging, always unplug this trimmer from the electrical outlet immediately after using.
- Always unplug this trimmer before cleaning.

WARNING To reduce the risk of burns, fire, electric shock, or injury to persons:

- An appliance shall never be left unattended when plugged in.
- This trimmer is not intended for use by persons (including children) with reduced physical, sensory, or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Keep the trimmer and packaging away from children.
- Only use attachments specified by the manufacturer.
- Use only the supplied charger to recharge.
- Before using, make sure blades are aligned properly.
- Never operate this appliance when it has a damaged cord or plug, when it is not working properly, after it has been dropped or damaged, or after it has been dropped into water.
- Keep the cord away from heated surfaces.
- Do not use this appliance with a damaged or broken guide, as it has the potential to result in facial injury.

SAVE THESE INSTRUCTIONS

Distributed by The Beard Club, Inc. | Westwood, NJ 07675
support@thebeardclub.com | Copyright © 2021 The Beard Club, Inc.

