
orgo

Countertop

Ice Maker

INSTRUCTION MANUAL

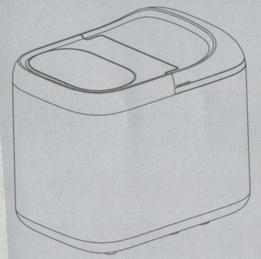

Scanned + Archived By: FindMyManual.org

The Aspen

01 • IMPORTANT INFORMATION

In order to avoid harm caused by misuse, please read the instruction manual carefully before using this product, and use this product strictly in accordance with its intended purposes.

1. The refrigerant of this product is flammable. Keep away from fire and keep the indoors ventilated during any maintenance. Please do not use combustible items near the machine to avoid fire and danger.
2. There should be no obstacles around the machine to keep it properly ventilated and unobstructed.
3. Except for the method recommended by the manufacturer, no machinery or other methods may be used to accelerate the defrosting process.
4. Do not damage the refrigeration circuit of the machine.
5. Do not use any appliances in the machine except those recommended by the manufacturer.
6. Keep the machine away from fire. Do not put in garbage. Contact local authorities to dispose of machine in accordance with legal regulations.
7. Do not store explosives in appliances, such as combustable spray cans.
8. Add drinkable water only.
9. The refrigeration system contains a high-pressure refrigerant. Do not damage the refrigeration system.
10. If the power cord is damaged, to avoid danger, it must be replaced by the maintenance department of the manufacturer or a similar department's professional staff.

11. After the working life of the ice machine is over, please dispose of appliance at a specialized recycling center.
12. Do not use ice machine if outer shell is damaged.

Warning:

When using or storing ice machine, make sure power cord is not obstructed or damaged.

Warning:

Do not place ice machine in front of multiple socket outlets or portable power supplies.

Warning:

Keep ventilation opening and system in the machine or in its built-in structure, clear of obstruction.

Warning:

Do not use mechanical devices or any other means to accelerate the defrosting process. Only use the methods recommended by the manufacturer.

Warning:

Do not use electrical appliances in the food storage compartments of the machine, unless they are made by and recommended by the manufacturer.

1. This appliance is not intended for use by persons (including children) with reduced physical, sensory, or mental capabilities, or lack of experience or knowledge, unless they have been given supervision or instruction concerning the use of this appliance by a person responsible for their safety.

2. This appliance can be used by children aged 8 years and above with adult aged supervision and instruction concerning the use of the appliance and understanding of the hazards involved.
3. Children shall not play with the appliance. Cleaning and user mainentance is not to be done by children without adult supervision.
4. Children aged 8 years and younger are not allowed to load and unload refrigeration equipment.
5. Do not store explosive substances such as aerosol cans with a flammable propellant in this appliance.

Attention

This appliance is intended to be used in household and similar applications such as:
- staff kitchen areas in shops, offices, and other working environments.
- clients in hotels, motels, and other residential environments.
- bed and breakfast type environments
- catering and similar not-retail applications.

Safety Tips

The most important thing is your safety and that of others. Many important safety messages have been provided in this manual regarding the ice machine. Please read all safety tips.

Safety Alert Symbols

DANGER
WARNNG

All safety messages will follow the safety alert symbol and the word "DANGER" and "WARNING." You can be seriously injured if you do not follow safety instructions.
All safety messages will tell you what the potential hazard is, how to reduce the chance of injury, and what the consequences are if instructions are not followed.

Warning:
NEVER TOUCH THE EVAPORATOR SURFACE BY HAND WHEN THE ICE MAKER IS WORKING. IT MAY CAUSE FROSTBITE TO YOUR SKIN.

When using household appliances, you must follow basic safety rules to reduce the risk of fire, shock, and damage to people or objects. Please read the following safety tips carefully before using the appliance.

1. Do not operate machine when power cord is damaged.
2. Use the correct power socket and make sure plug is fully inserted into power socket.
3. When using machine, do not allow the power cord to be on carpet or near heat. Do not cover the power cord. Keep cord away from high traffic areas. Do not submerge cord in water.
4. Use of extension cord is not recommended as it may overheat.
5. Unplug ice maker before cleaning or service.
6. Children must use supervised by adults.
7. Do not clean ice maker with flammable liquids that could cause a fire or explosion.

orgoproducts.com

Thank you for using Orgo products.

support@orgoproducts.com

Please read the user manual before using and keep for future reference.

2030011949

8. Do not turn the ice maker over. If it gets overturned, place the machine rightside up with power off for at least 2 hours before turning the power back on.

9. If ice maker is left outside in cold weather, allow for a few hours to warm up to room temperature before turning power on.

10. If the power cord is damaged, it must be replaced by the manufacturer or simillary qualified service person.

11. The refrigerant and insulation blowing gas are flammable. When disposing of appliance, only do so at an authorized waste disposal or recycling center. Do not expose to flame.


12. The symbol  is a warning and indicates the presense of flammable refrigerant and insulation gas.

13. Ice maker is not suitable to store food. Never do so for for any reason.

14. If ice maker is left off for long periods, switch off, defrost, clean, dry, and leave door open to prevent mold from growing in the appliance.

02 • PRODUCT OVERVIEW


The Aspen

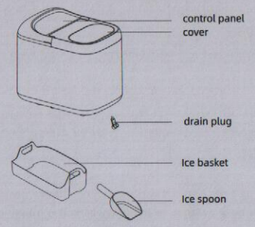

03 • SPECIFICATIONS

Country	China	Europe	Korea	USA
Item no	ICEQ5-RZB15(B)-N7-G	ICEQ5-RZB15(B)-N7-1	ICEQ5-RZB15(B)-N3-2	RGA1504,RGA2504
Product size	400X280X363mm	400X280X363mm	400X280X363mm	400X280X363mm
Product weight	9Kg	9Kg	9Kg	9.6Kg
Rated Voltage	220V~ 50Hz	220V-240V 50/60Hz	220V 60Hz	120V 60Hz
Rated Power	150W	150W	150W	180W
Refrigerate	R290/18g	R290/18g	R600a/24g	R600a/24g
Capacity of water tank	2L	2L	2L	2L
Thermal insulation material	Cyclopentane	Cyclopentane	Cyclopentane	Cyclopentane

04 • CONTROL PANEL

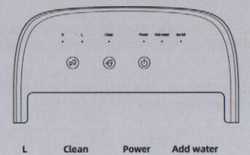

Automatic cleaning Ice cube selection Power button

Power button
Touch on/off.

Ice selection key
Touch select small ice/large ice in turn.


Automatic cleaning button
automatic cycle cleaning water tank.

Add Water indicator
Water shortage corresponding indicator light on.

Ice full indicator
The corresponding indicator light is on when the ice is full.

05 • USAGE INSTRUCTIONS

1. Remove all internal and external packaging. Check for included scoop and basket.
2. Remove ice basket and hand wash with warm soap and water. Wash tank with warm water only using a soft cloth.
3. Place ice maker out of direct sunlight and away from heat. Please keep the ice maker upright and at least 6 inches away from walls or other obstructions.
4. Place neat a suitable socket to plug cord into.
5. Open the top cover and put in ice basket (as shown below)

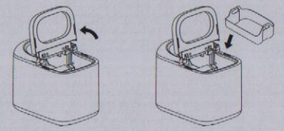

6. Touch Ice Cube selection button to select the ice size. If the room temperature is below 59°F, then Small Ice is recommended.
7. Open the top cover, remove ice basket, add water to the water tank, keeping the water level below the high mark. Replace ice basket and close top cover.
8. Touch the Power Button on the control panel to start making ice. The initial water amount should exceed 34 ounces.
9. The duration of the ice making cycle depends of the size of ice being made and room temperature. The size of ice cubes is related to water temperature and ambient temperature.
10. After the ice machine is started, the water level in the water tank should be checked regularly. If the pump can not pump water, the ice maker will automatically stop and the Water Shortage indicator light will appear. Fill the water tank back up and press the button to restart ice making.

11. If the ice basket is full, ice making automatically stops.
12. It is recommended to change the water every 24 hours keep the water clean. If the ice maker is not used for some time, drain the water from the tank. Touch the automatic cleaning button to start the cleaning function.
13. The cleaning time is 30 minutes. The Clean indicator light remains lit during cleaning. After cleaning, drain the water from the bottom of the machine.


Warning: Use only water that is drinkable.

Daily Maintenance

- Before and after using ice machine, it is recommended you completely clean entire machine.
- Open the control panel cover (as shown in figure below) and the upper cover to take out the ice basket.
- Open the drain plug to let out unused water.
- Wipe the liner only with warm water and one drop of dish soap.

The outside of the machine should be cleaned regularly with diluted non toxic cleaners.

Close the drain plug with the machine is not used for long times and wipe the liner dry.

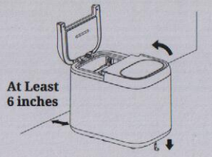

06 • TROUBLESHOOTING

PROBLEM	POSSIBLE CAUSE	SOLUTION
"Add Water" indicator light on	Lack of Water	Add water to remake ice
	Water tank bottom blocked	Clean
Ice making cycle is normal but no ice is made	Ambient temperature or water temperature is too high,refrigeration system leakage or refrigeration system blackage	Contact purchasing store or manufacturer's after-sales service center
Ice cubes sticking together	The ice making cycle time is too long; The evaporator is too much immersed in the ice box	Stop ice making. After the ice cubes melt, restart ice making and select Small Ice. Adjust the evaporator.
	The water temperature in the tank is too low	Change the water in the tank, the water temperature should be between 46°F and 90°F
The ice making process is normal, but no ice is formed.	Ambient temperature or water temperature is too high	Please make ice when the ambient temperature is lower than 90°F , and add a certain amount of cold water to the water tank
	Leak in the refrigeration system	Contact after-sales service
	Clogged refrigeration system	Contact after-sales service