Scanned + Archived By: FindMyManual.org

Westinghouse

INNOVATION YOU CAN BE SURE OF

®, WESTINGHOUSE, and INNOVATION YOU CAN BE SURE OF are trademarks of Westinghouse Electric Corporation. Used under license by W Appliance Company. All Rights Reserved.

020316

SELECT SERIES

User Manual

Waffle Maker

MODEL: WWM1SSA

1. READ these instructions carefully before installing and operating the appliance. Keep them for further reference.
2. Record in the space below the "SERIAL/MODEL NUMBER" found on the back or bottom of your appliance and retain this information for future reference.

SERIAL NUMBER: 15164202

MODEL NUMBER:

DATE OF PURCHASE:

Save and staple your sales receipt to your manual for warranty coverage.

Westinghouse

INNOVATION YOU CAN BE SURE OF

⚠ DANGER	⚠ WARNING	⚠ CAUTION
DANGER - Immediate hazards which **WILL** result in severe personal injury or death	**WARNING** - Hazards or unsafe practices which **COULD** result in severe personal injury or death	**CAUTION** - Hazards or unsafe practices which **COULD** result in minor personal injury

IMPORTANT SAFETY INSTRUCTIONS

⚠ WARNING

When using electrical appliances, basic safety precautions should be followed, including the following

1. READ ALL INSTRUCTIONS BEFORE USE
2. Do not touch hot surfaces. Use handles or knobs.
3. To protect against risk of electric shock, do not immerse cord, plug or unit in water or other liquid.
4. Close supervision is necessary when any appliance is used by or near children.
5. Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts, and before cleaning appliance.
6. Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions or has been damaged in any manner. Return appliance to the nearest authorized service facility for examination, repair or adjustment.
7. The use of accessory attachments not recommended by the manufacturer may cause injuries.
8. Do not use outdoors.
9. Do not let cord hang over the edge of the table or counter, or touch hot surfaces.
10. Do not place on or near a hot gas or electric burner or heated oven.
11. Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.
12. To disconnect, remove plug from the wall outlet.
13. Do not use appliance for other than intended use.

SAVE THESE INSTRUCTIONS

HOUSEHOLD USE ONLY

SAFETY INFORMATION

ELECTRICAL REQUIREMENTS

This appliance has a polarized plug (one blade is wider than the other). To reduce the risk of electric shock, this plug is intended to fit into a polarized outlet only one way. If the plug does not fit into the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not attempt to modify the plug in any way.

POWER SUPPLY CORD

1. A short power supply cord is provided to reduce the risk of becoming entangled in or tripping over a longer cord.
2. If the power supply cord is too short, do not use an extension cord. Have a qualified electrician or serviceman to install an outlet near the appliance.
3. If it is absolutely necessary to use longer cord sets or an extension cord, extreme care must be exercised.

a) The marked electrical rating of the cord set or extension cord must equal to or be greater than the electrical rating of the appliance. The longer cord should be arranged so that it will not drape over the counter top or table top where it can be pulled on by children or tripped over unintentionally.

NOTE: Neither Westinghouse nor the dealer can accept any liability for damage to the product or personal injury resulting from failure to observe the electrical connection procedures.

PARTS & FEATURES

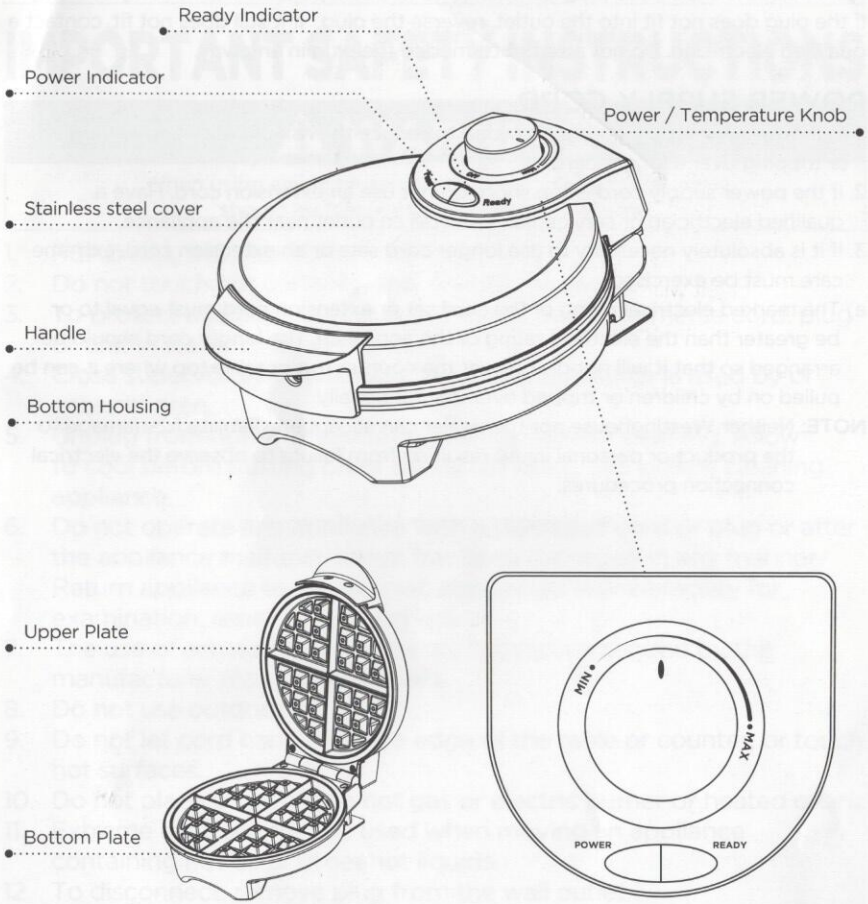


Diagram for instructional purposes only.

USING YOUR WAFFLE MAKER

Before using the appliance for the first time, peel off any promotional and packaging materials and check that cooking plates are clean and free of dust. If necessary, wipe over with a damp cloth. For best results, pour a teaspoon of vegetable oil on to the non-stick plates. Spread over with an absorbent cloth and wipe off any excess oil.

NOTE: When your waffle maker is heated for the first time, it may emit slight smoke or odor. This is normal with many heating appliances. This does not affect the safety of your appliance.

- With power/temperature knob in "OFF" position, plug into power outlet. Power (red) and ready (green) indicators will go on. This is only indicating power to the appliance. Preheating has not yet started.
- Rotate power/temperature knob clockwise and when you reach "MIN" mark just the power light will stay illuminated and preheating has begun.

CAUTION: Cooking plates will begin to get hot.

NOTE: If you desire a hotter temperature, continue turning power/temperature knob further clockwise.

- Power light indicator will go off and ready light indicator will come on when waffle maker has reached your chosen temperature and is ready to start cooking.

NOTE: For best results, lightly spray the cooking plates with a cooking oil spray before using. This will assist in the removal of the waffles after cooking.

- Pour batter onto cooking plates using a measuring cup, spoon or fabric piping bag.

NOTE: Do not use disposable plastic piping bags as these may melt if they come into contact with the hot cooking plates.

- Gently close the lid all the way down. Do not slam the lip down as it may cause the batter to run off the cooking plates.
- Allow to cook for approximately 3- 5 minutes or until golden brown.
- To remove waffles, always use a plastic or wooden spatula. Never use a sharp object or anything metal as this will damage the non-stick surface of cooking plates.



RECIPES

BASIC WAFFLES (YIELD APPROX.. 8)

2 cups (473 ml) flour

2 tablespoons (30 ml) sugar

1 tablespoon (15 ml) baking powder

1 teaspoon (5 ml) salt

1 3/4 cup (414ml) milk

1/3 cup (79 ml) vegetable oil

2 eggs

In a large bowl, combine flour, sugar, baking powder and salt; set aside. In a small bowl, whisk together milk, oil, and eggs. Gradually add milk mixture to flour mixture. Stir until just blended. Pour 2/3 cup (158 ml) of batter into waffle maker. Close cover and cook 6 to 7 minutes or until golden brown.

BUTTERMILK WAFFLES (YIELD APPROX.. 4-6)

1 1/2 cups (355 ml) flour

1 1/2 teaspoons (7.4 ml) baking powder

1/2 teaspoon (2.5 ml) baking soda

1/2 teaspoon (2.5 ml) salt

1 1/2 cups (355ml) buttermilk

6 tablespoons butter (89ml) melted

2 eggs beaten lightly

In a medium bowl, whisk together flour, baking powder, baking soda, and salt; stir in buttermilk, butter, and eggs, stirring until thoroughly mixed (batter will be thick). Pour 2/3 cup (158 ml) of batter into waffle maker. Close cover and cook 6 to 7 minutes or until golden brown.

TIPS: Homemade waffle batter may take longer to cook than packaged pancake and waffle mixes. The packaged mix waffles are done in about 5 minutes. Made-from-scratch recipes take a few minutes more.

CARE AND CLEANING

- Always turn off the power and remove the plug from outlet before and after cleaning.
- The cooking plates are coated with a non-stick cooking surface, therefore a little cleaning is required. Simply wipe cooking plates over with a damp cloth.

CAUTION: Do not immerse the waffle maker in water or other liquid.

- Do not use abrasive scouring pads, powders or cleaners.
- Do not place in the dishwasher.
- Before next use, lightly grease the cooking plates for easy removal of cooked waffles.

CARE AND CLEANING

STORAGE

- Always unplug the waffle maker before storage.
- Always make sure the waffle maker is cool and dry before storing.
- To minimize storage space in your kitchen, the waffle maker can be stored vertically.

TROUBLESHOOTING & WARRANTY

BEFORE YOU CALL FOR SERVICE

IF THE APPLIANCE FAILS TO OPERATE:

A) Check to make sure that the appliance is plugged in securely. If it is not, remove the plug from the outlet, wait 10 seconds and plug it in again securely.

B) Check for a blown circuit fuse or a tripped main circuit breaker. If these seem to be operating properly, test the outlet with another appliance.

IF NONE OF THE ABOVE SOLVES THE PROBLEM, CONTACT A QUALIFIED TECHNICIAN. DO NOT TRY TO ADJUST OR REPAIR THE APPLIANCE YOURSELF.

CUSTOMER SERVICE

IMPORTANT

DO NOT RETURN THIS Appliance TO THE STORE

If you have a problem with this appliance, please contact the W Appliance Co. Customer Satisfaction Center at 1-855-855-0294.

DATED PROOF OF PURCHASE, MODEL # AND DATE CODE REQUIRED FOR WARRANTY SERVICE

TROUBLESHOOTING

Troubleshoot your problem by using the chart below. If the appliance still does not work properly, contact W Appliance Co. customer service center or the nearest authorized service center. Customers must never troubleshoot internal components.

TROUBLE	POSSIBLE CAUSE	POSSIBLE REMEDY
Appliance does not turn on	Appliance is not plugged in	Check that appliance is plugged into a working outlet
Waffle maker is not heating up	Power/temp knob not rotated far enough	Rotate power/temp knob at least to "MIN" mark

SPECIFICATIONS

- Unit Dimensions (W x D x H): 8" x 9.75" x 4.37"
- Net Weight: Approx. 2.11 lbs.

TROUBLESHOOTING & WARRANTY

LIMITED WARRANTY

Westinghouse brand is used under license. Any repair, replacement, or warranty service, and all questions about this appliance should be directed to W Appliance Co. at **1 (855) 855-0294** from the USA or Puerto Rico.

W Appliance Co. warrants to the original purchaser that the appliance will be free from defects in material, parts and workmanship for the period designated for this appliance. The warranty commences the day the appliance is purchased and covers up to a period of **1 year (12 months) for labor/1 year (12 months) for parts (manufacturing defects only)/carry in service**. W Appliance Co. agrees that it will, at its option, replace the defective appliance with either a new or remanufactured appliance equivalent to your original purchase during the warranty period.

Exclusions: This warranty does not apply to the below:

1. If the appearance or exterior of the appliance has been damaged or defaced, altered or modified in design or construction.
2. If the appliance original serial number has been altered or removed or cannot be readily determined.
3. If there is damage due to power line surge, user damage to the AC power cord or connection to improper voltage source.
4. If damage is due to general misuse, accidents or acts of God.
5. If repair attempts are done by unauthorized service agents, use of parts other than genuine parts or parts obtained from persons other than authorized service companies.
6. On units that have been transferred from the original owner.
7. On appliances that have been purchased as refurbished, like new, second-hand, in a "As-Is" or "Final Sale" terms.
8. To appliances used in a commercial or rental setting.
9. To appliances used in settings other than ordinary household use or used other than in accordance with the provided instructions.
10. To damages for service calls for improper installations.
11. To glass parts and other accessory items that are included with the unit.
12. Transportation and shipping costs associated with the replacement of the unit.
13. Food loss for loss due to appliance failure or delay in service, repair or replacement.
14. Service calls to instruct you how to use your slow cooker.
15. Service calls to repair or replace the house fuse, reset the circuit breaker or correct the wiring in the house.

REPAIR OR REPLACEMENT AS PROVIDED UNDER THIS WARRANTY IS THE EXCLUSIVE REMEDY OF THE CUSTOMER; W Appliance Co. SHALL NOT BE LIABLE FOR ANY INCIDENTAL OR CONSEQUENTIAL DAMAGES FOR BREACH OF ANY EXPRESS OR IMPLIED WARRANTY ON THIS Appliance, EXCEPT TO THE EXTENT PROHIBITED BY APPLICABLE LAW. ANY IMPLIED WARRANTY OF MERCHANTABILITY OF FITNESS FOR A PARTICULAR PURPOSE ON THIS Appliance IS LIMITED TO THE DURATION OF THE WARRANTY.

Some states do not allow the exclusion or limitations of incidental or consequential damages, or limitations on how long the warranty lasts. In these cases the above exclusions or limitations may not apply to you. This warranty gives you specific legal rights and you may also have other rights which vary from state to state.

Obtaining Service: To obtain service, appliance literature, supplies or accessories please call **1 (855) 855-0294** to create a ticket for exchange/repair. Please make sure to provide the date of purchase, model number and a brief description of the problem. Our customer service representative will contact you or send detailed return instructions.

W Appliance Co. does not warrant that the appliance will work properly in all environmental conditions, and makes no warranty and representation, either implied or expressed, with respect to the quality, performance, merchantability, or fitness for a particular purpose other than the purpose identified within this user's manual. W Appliance Co. has made every effort to ensure that this user's manual is accurate and disclaims liability for any inaccuracies or omissions that may have occurred. Information in this user's manual is subject to change without notice and does not represent a commitment on the part of W Appliance Co.. W Appliance Co. reserves the right to make improvements to this user's manual and/or to the appliances described in this user's manual at any time without notice. If you find information in this manual that is incorrect, misleading, or incomplete, please contact us at **1- 855-855-0294**.

W Appliance Co.,
1356 Broadway
New York, NY 10018