Scanned + Archived By:
FindMyManual.org


QUICK START GUIDE

LG Stylo™5

MBM67200501 (1.0) TV

Parts overview

To turn on the device, press and hold the **Power key** for a few seconds.

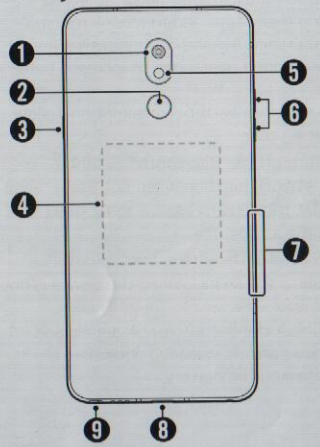


1. Rear camera lens
2. Fingerprint sensor
3. Power/Lock key
4. NFC area
5. Flash
6. Volume keys (+/-)
7. SIM/Memory card tray
8. Charger/USB cable port
9. Stylus pen

⚠ Do NOT attempt to remove the back cover.


- This device has a non-removable battery. Do not attempt to remove the back cover. Doing so may severely damage the battery and device, which could cause overheating, fire, and injury.

Installing the SIM card and memory card

1 Turn the phone off, insert the ejection pin into the hole on the card tray and push until the tray pops out. Then, carefully pull out the card tray.

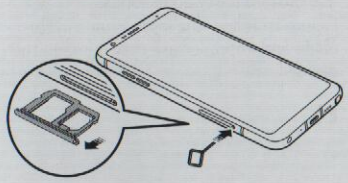

2 Place the Nano SIM card or memory card on the card tray with the gold contacts facing downwards. Make sure that card is positioned as shown below.

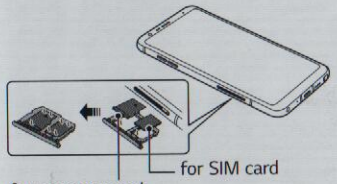

NOTE

- Always use a Nano SIM card supplied by your service provider.
- For problem-free performance, it is recommended to use the phone with the correct type of SIM card.
- The memory card can be easily damaged by improper operation. Please be careful when inserting, removing, or handling it.

⚠ Warning


- Some memory cards may not be fully compatible with the device. If you use an incompatible card, it may damage the device or the memory card, or corrupt the data stored in it.
- Be careful with the ejection pin since it has a sharp edge.
- If you insert the card tray into your device while the card tray is wet, your device may be damaged. Always make sure the card tray is dry.

BC

Printed in Vietnam

Charging the battery

Charge the device with the USB Type-C cable.

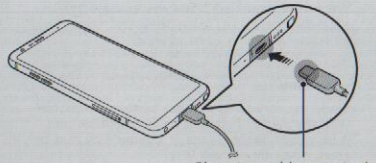

Charging cable terminal

⚠ Warning

- Do not charge while the device or charging cable is wet or contains moisture. This can cause fire, electric shock, injury or damage to device.

NOTE

- A charging adapter that supports fast charging is included with your device.
- Do not use third-party chargers with your device as they may not support fast charging and may cause damage to your device.

Precautions when using the device

- Make sure to use the USB cable provided; do not use third party USB cables or chargers with your device. The LG limited warranty does not cover the use of third party accessories.
- Failure to follow the instructions in this guide and improper use may damage the device.

Using the battery efficiently

Battery lifespan may decrease if you keep many apps and functions running simultaneously and continuously. Cancel background operations to increase battery life.

To minimize battery consumption, follow these tips:

- Turn off the **Bluetooth®** or Wi-Fi network function when not using them.
- Set the screen timeout to as short a time as possible.
- Minimize the screen brightness.
- Set a screen lock when the device is not in use.
- Check the battery usage details and close any downloaded apps that are draining the battery.

All materials in this QSG including, without limitation, the design, the text, and any images are the property of LG Electronics MobileComm U.S.A., Inc. Copyright © 2019 LG Electronics MobileComm U.S.A., Inc. ALL RIGHTS RESERVED. LG, LG Life's Good and the LG logo are registered trademarks of LG Corp. Stylo is a trademark of LG Electronics, Inc. Google is a trademark of Google LLC. Bluetooth® is a registered trademark of Bluetooth SIG, Inc. worldwide. Wi-Fi® and the Wi-Fi logo are registered trademarks of the Wi-Fi Alliance. All other trademarks and copyrights are the property of their respective owners. Unless otherwise specified herein, all accessories referenced herein are sold separately. All features, functionality, and other product specifications are subject to change.

Visit **www.lg.com** to view the user guide and more information.

The device apps, services, illustrations and content may differ depending on the area, service provider, software version and device, and are subject to change without notice.

www.lg.com/us/