
chest


Product ID. QCJHA

Scan for Support
support@garvee.com

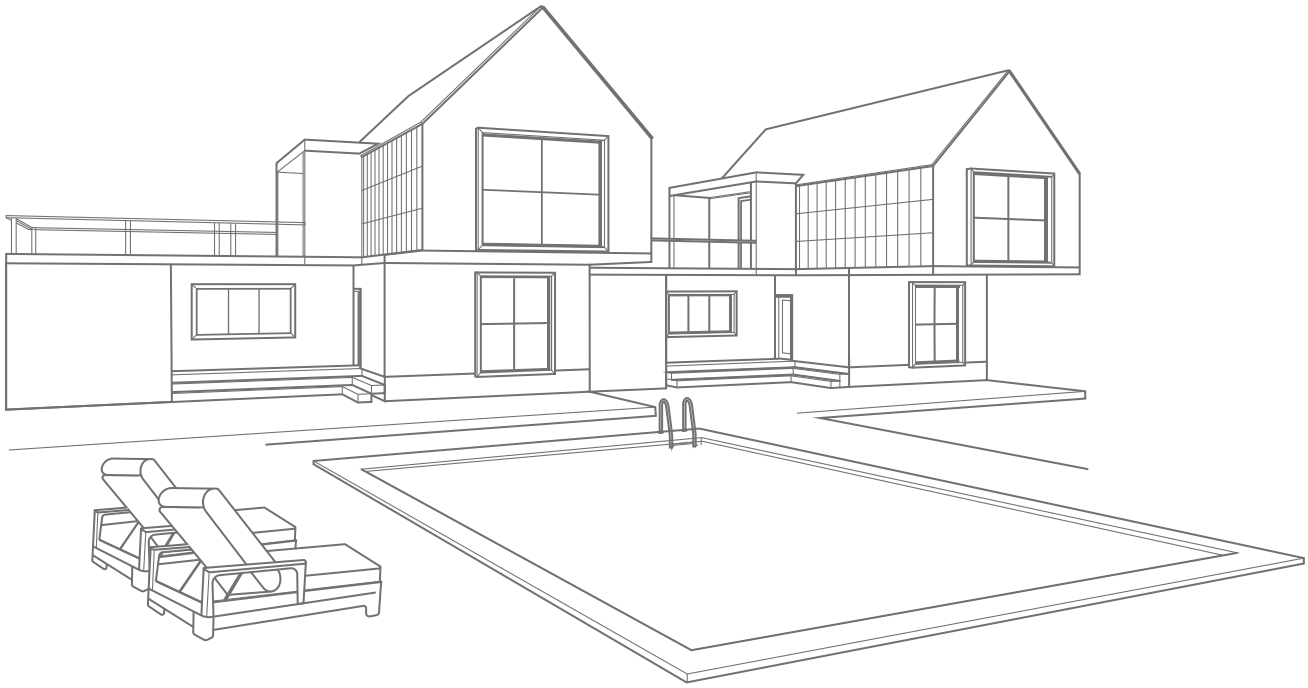


Distributed by
GARVEE.com

INSTALLATION INSTRUCTION










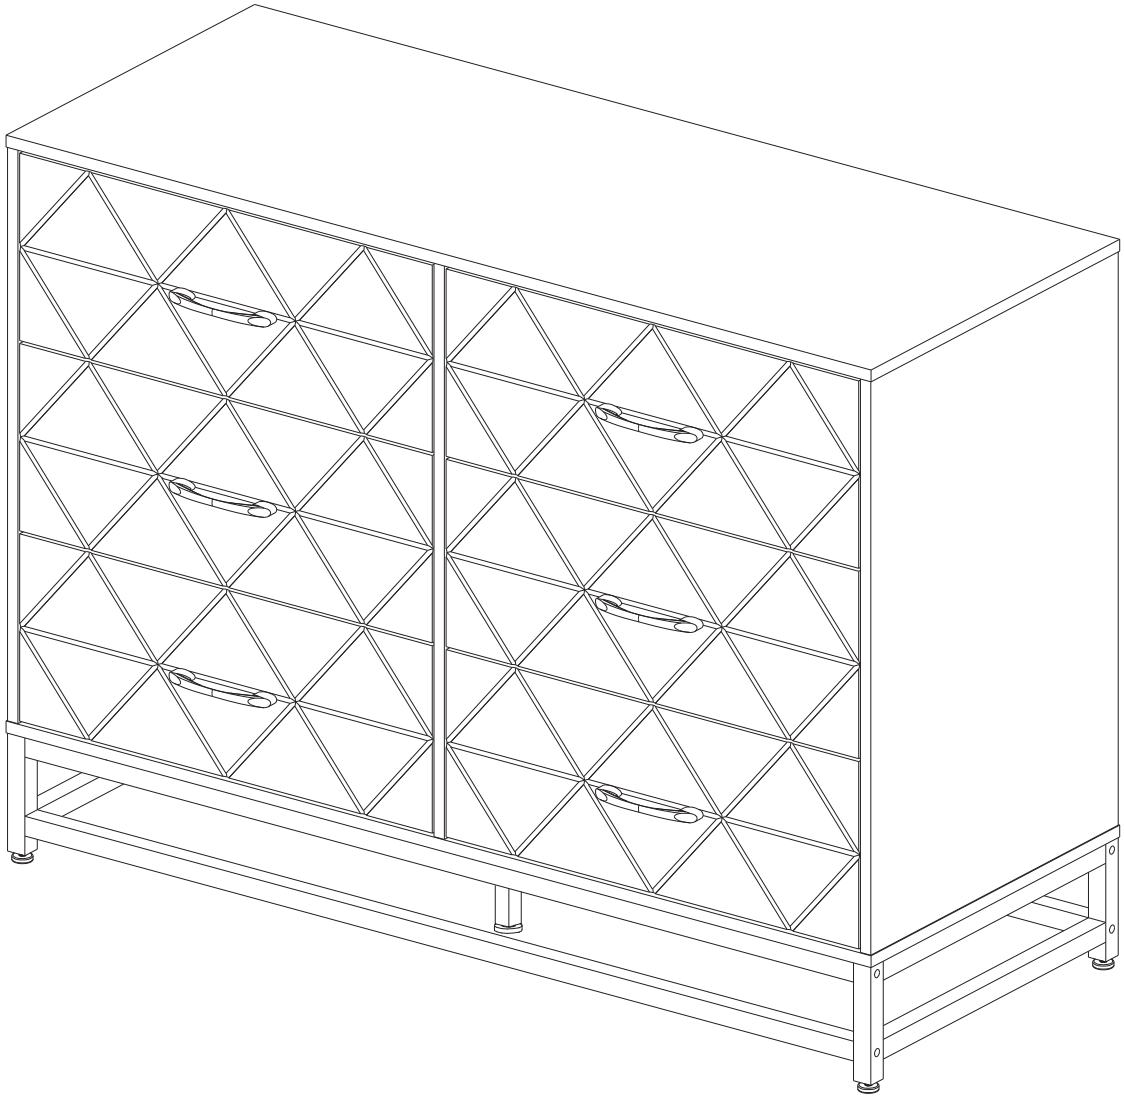


Thank you for purchasing our products. Please contact us if you have difficulty with assembly or need replacement parts. Our customer service is here to assist you. Please attach your User Name and Order ID so that we can assist you better.**support@jojoka.net**

BOARD IDENTIFICATION

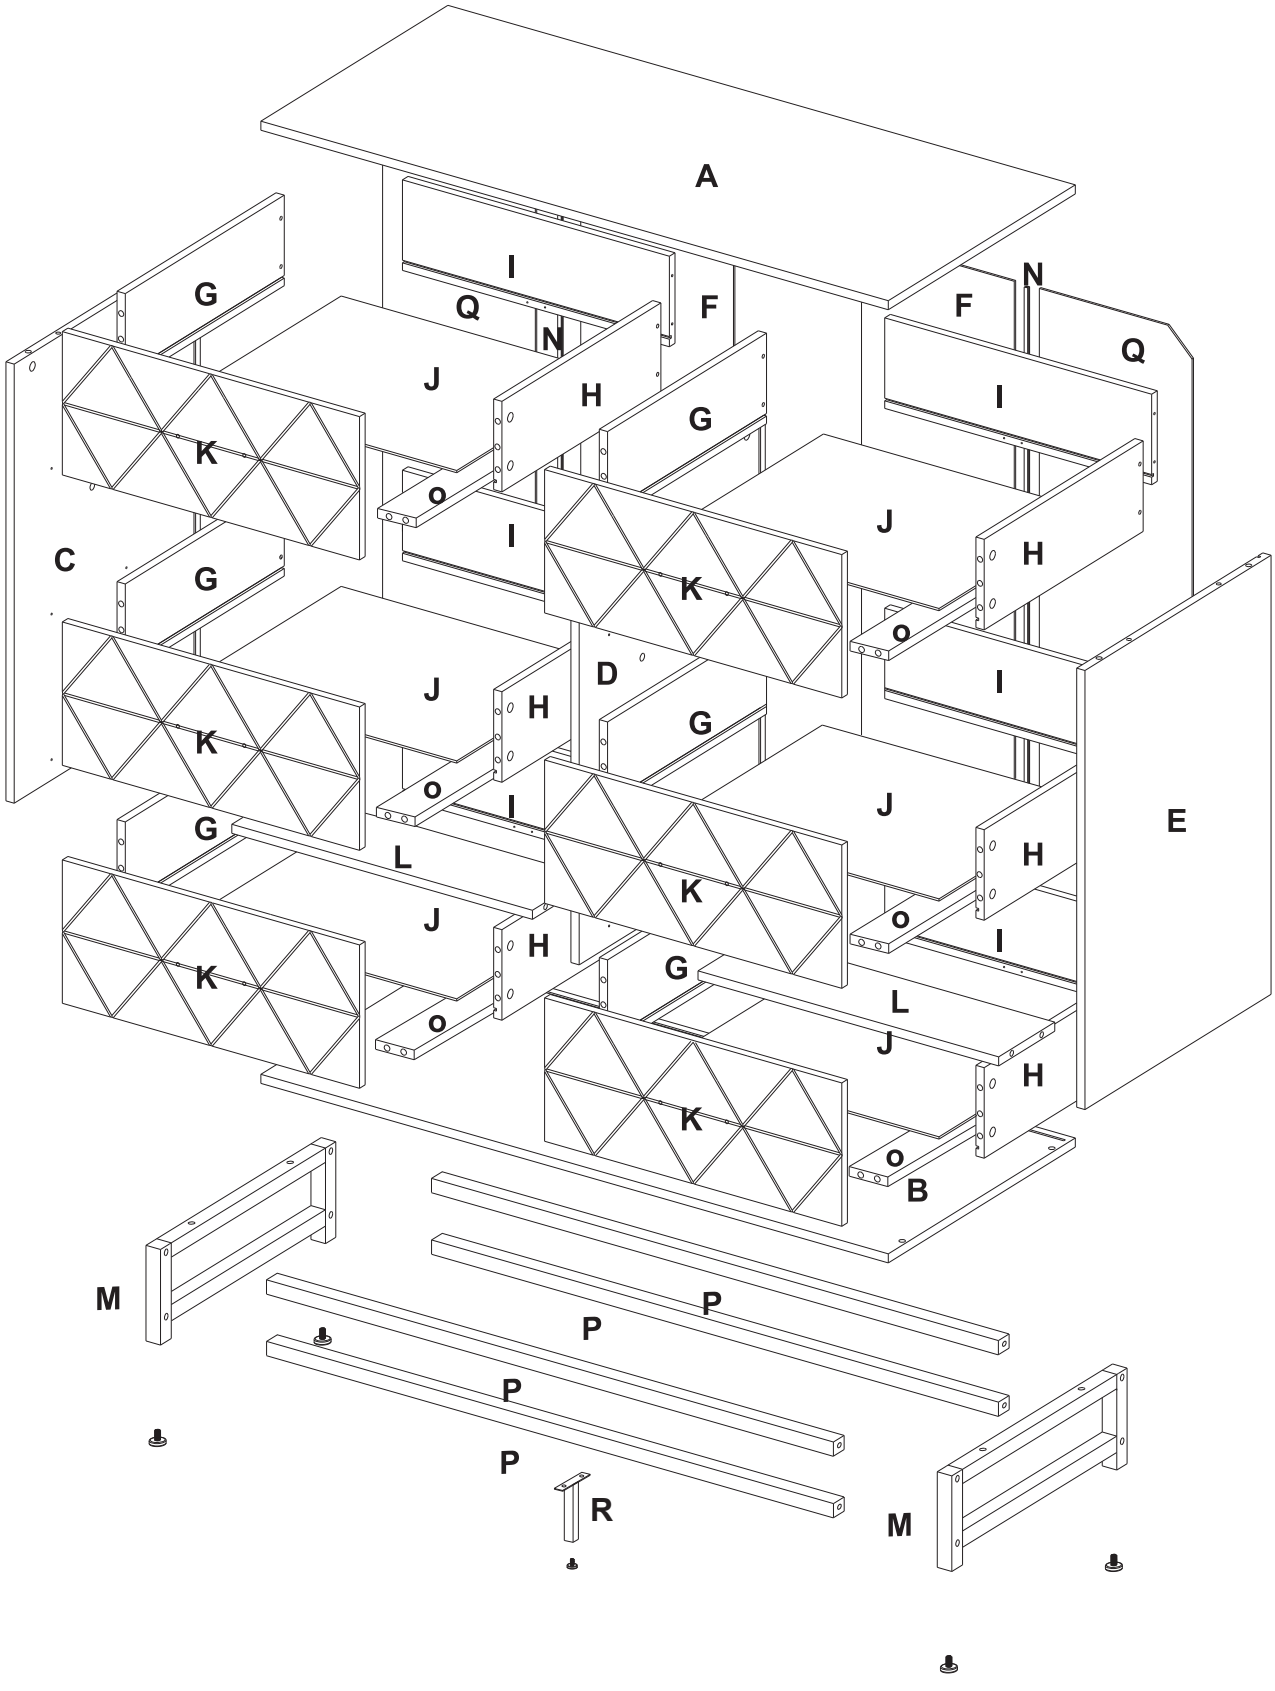


BOARD IDENTIFICATION

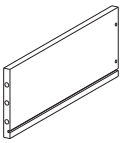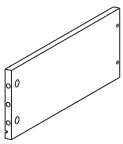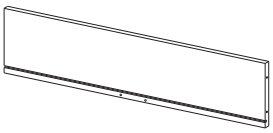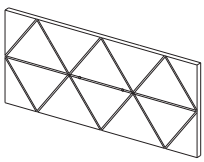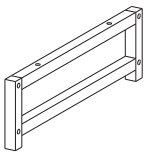				
Ax1	Bx1	Cx1	Dx1	Ex1
				
Fx2	Gx6	Hx6	Ix6	Jx6
				
Kx6	Lx2	Mx2	Nx2	Ox6
				
Px4	Qx2	Rx1		

BOARD IDENTIFICATION


Installation of Eccentric Wheel Nut Set

1

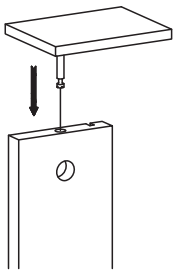


Screw the end of cambolt on the board, find the corresponding board and insert the other end.

2

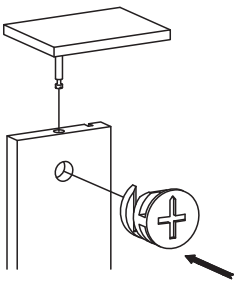


Stuff the camlock into the round hole.
The arrowpoints to the cambolt.

3

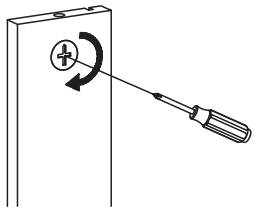


Turn clockwise about 180° to lock the plate.



1	X48

Screws
M4X10



2	X50

Cam bolt
Ø6X18



3	X50

Cam lock
Ø12X10




4	X8

Screws
M6x35




5	X36

Screws
M4x30



6	X6

Screws
M6.3x40




7	X18


Wood dowl
Ø6X30




8	X6

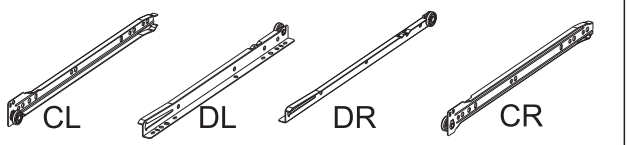

9	X6

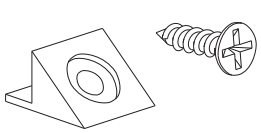


10	X16

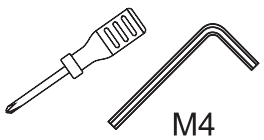

11




12	X5




13	X4

Screws
M6x28

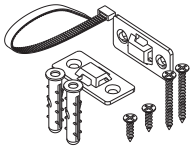

14	X2

Anti-inverted parts





15	X2

Screws
M6x10


INSTALLATION STEPS


STEP1：

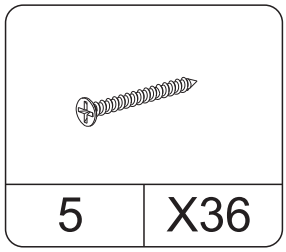

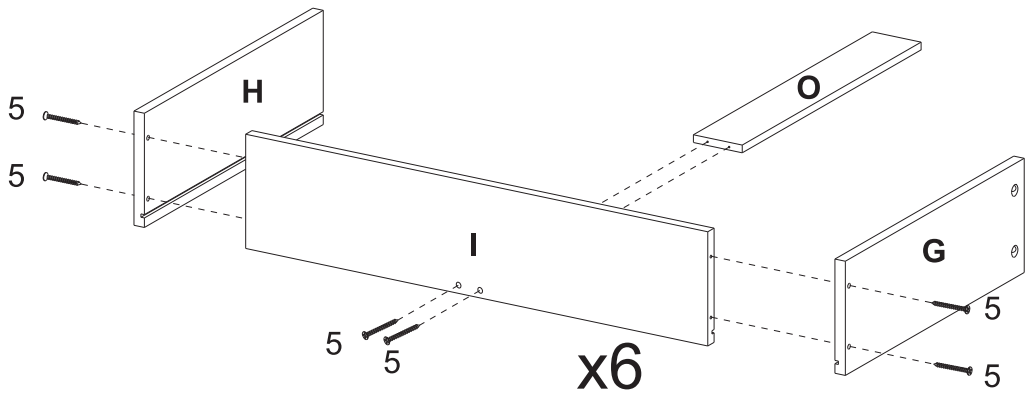

STEP2：

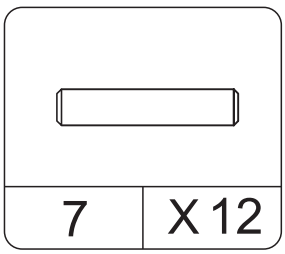


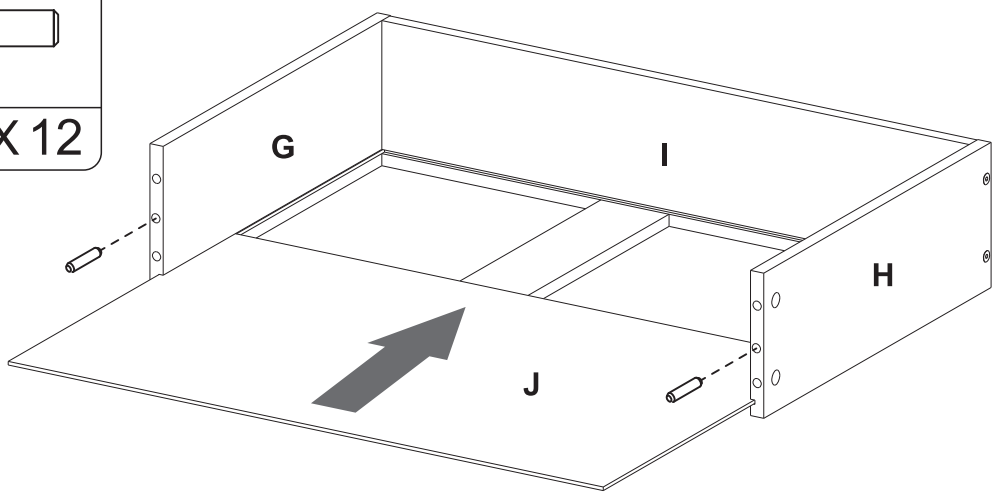


x6

INSTALLATION STEPS

STEP3：

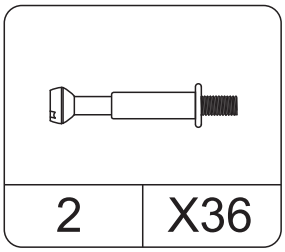


2	X36

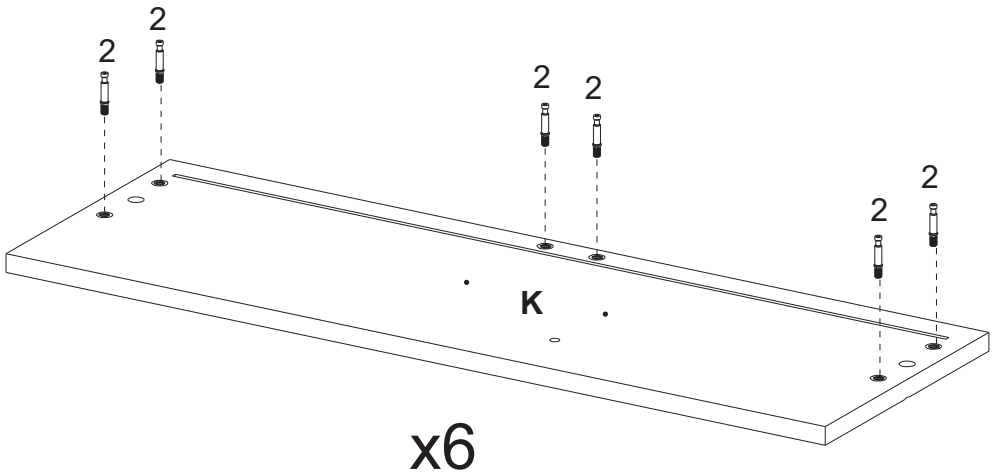


x6

STEP4：

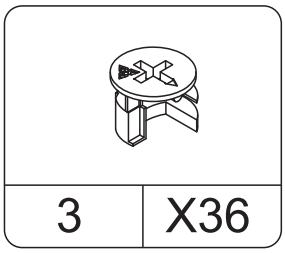


3	X36

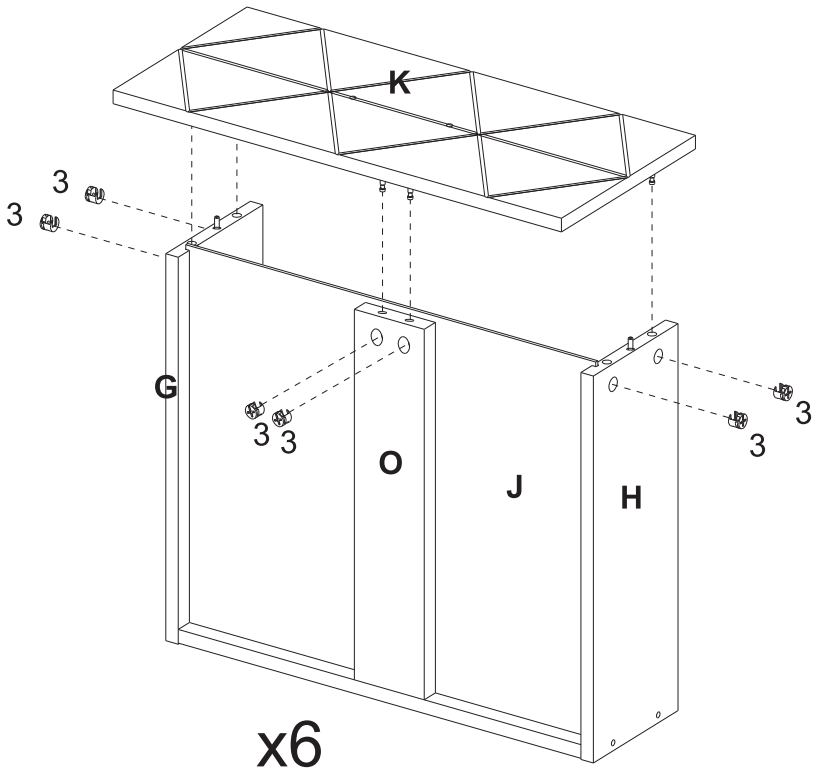


x6

INSTALLATION STEPS


STEP5:

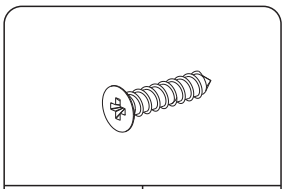


1	X24

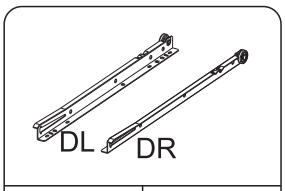


9	X6

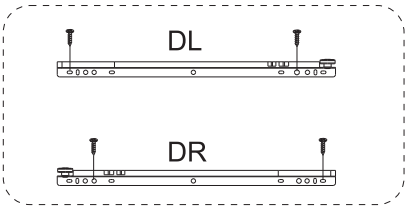


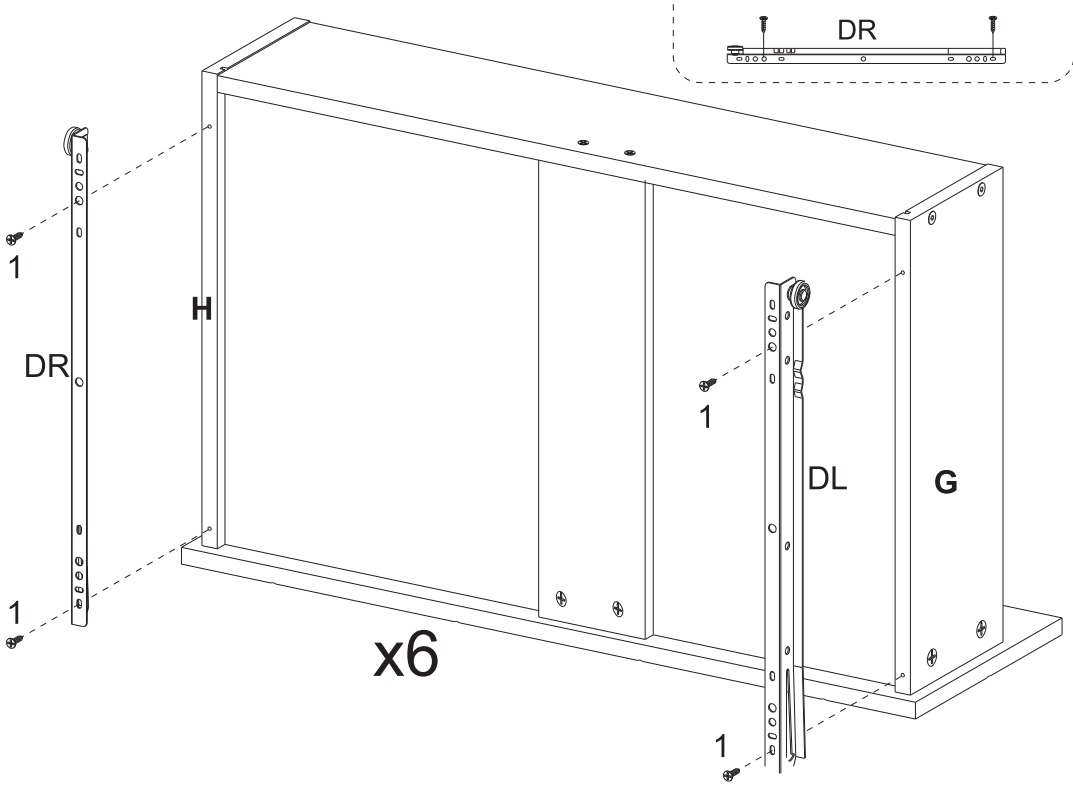

STEP6:

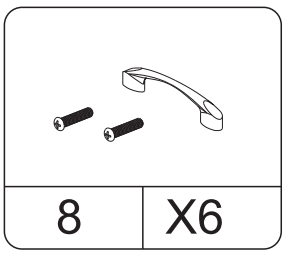


8	X6

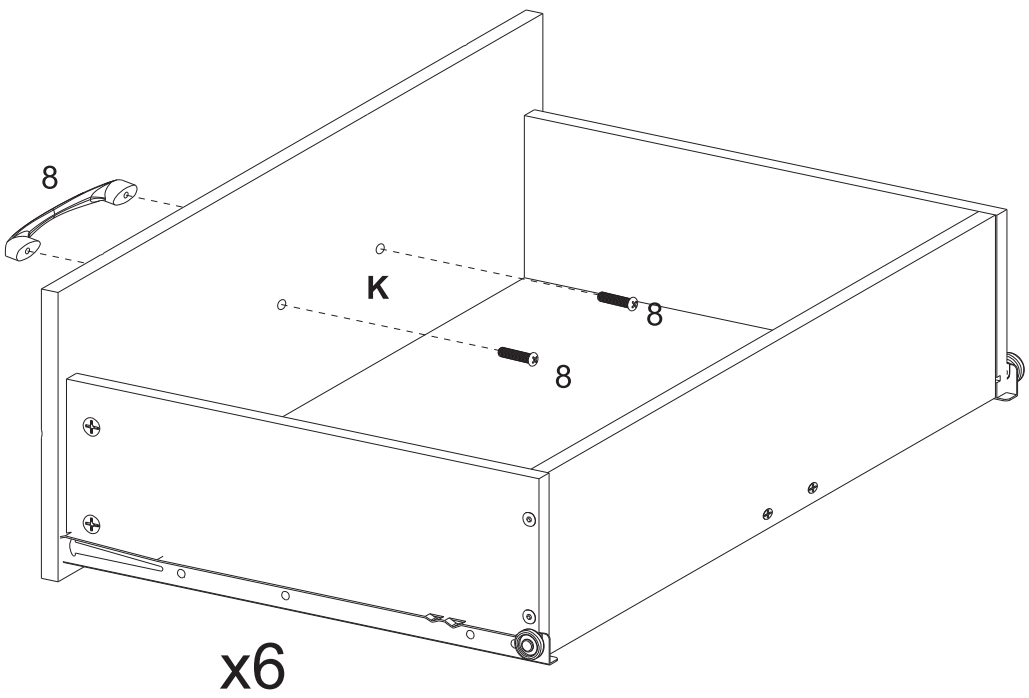


INSTALLATION STEPS


STEP7:

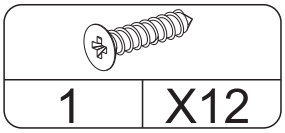



1	X12

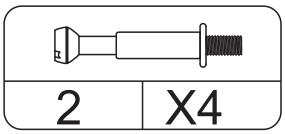


2	X4

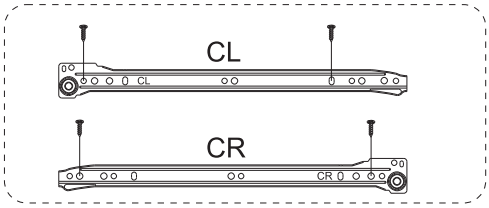

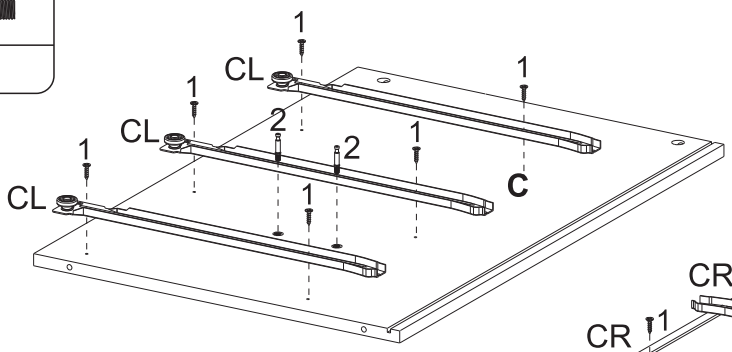


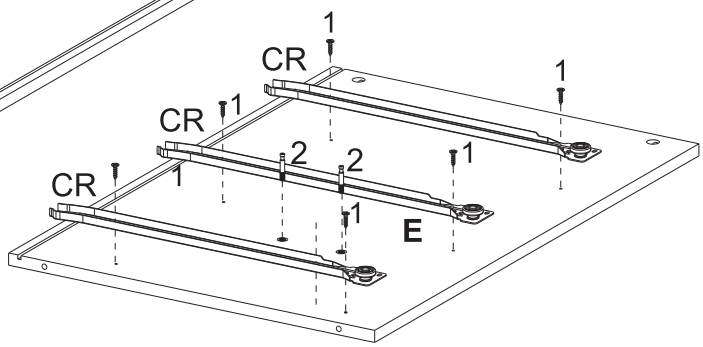

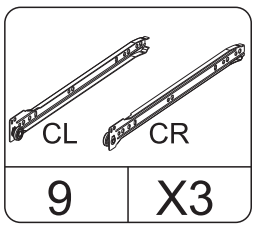


9	X3


STEP8:

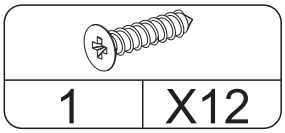



1	X12

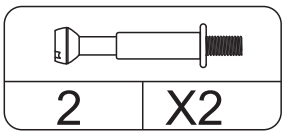


2	X2

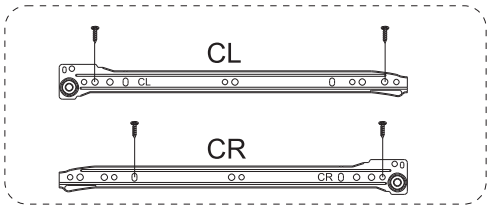

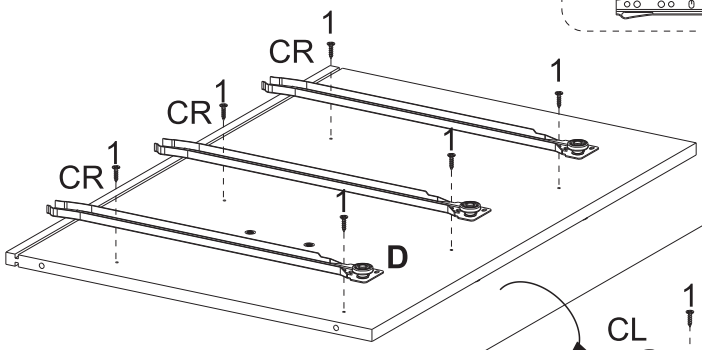

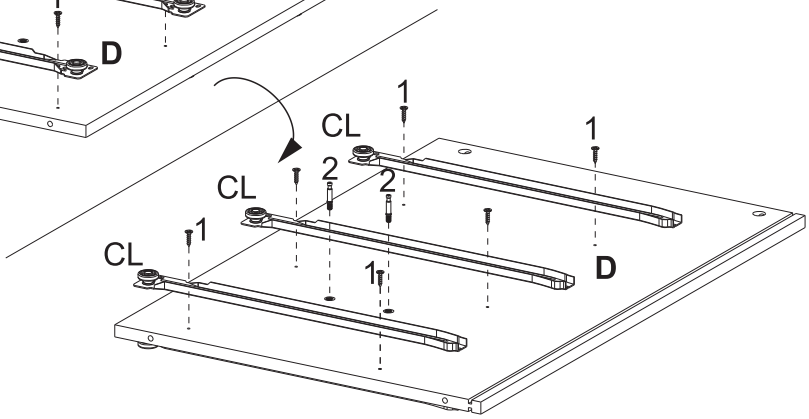


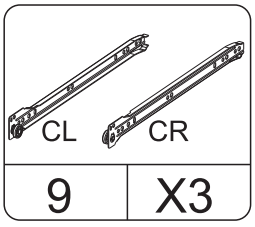


9	X3

INSTALLATION STEPS


STEP9:

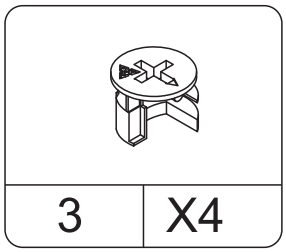


3	X4

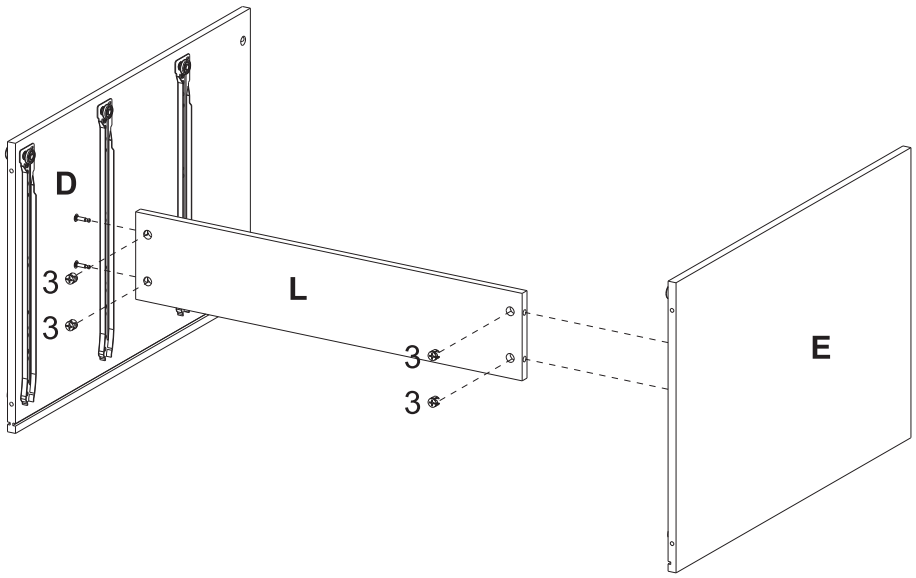

STEP10:

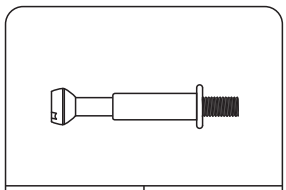



2	X2

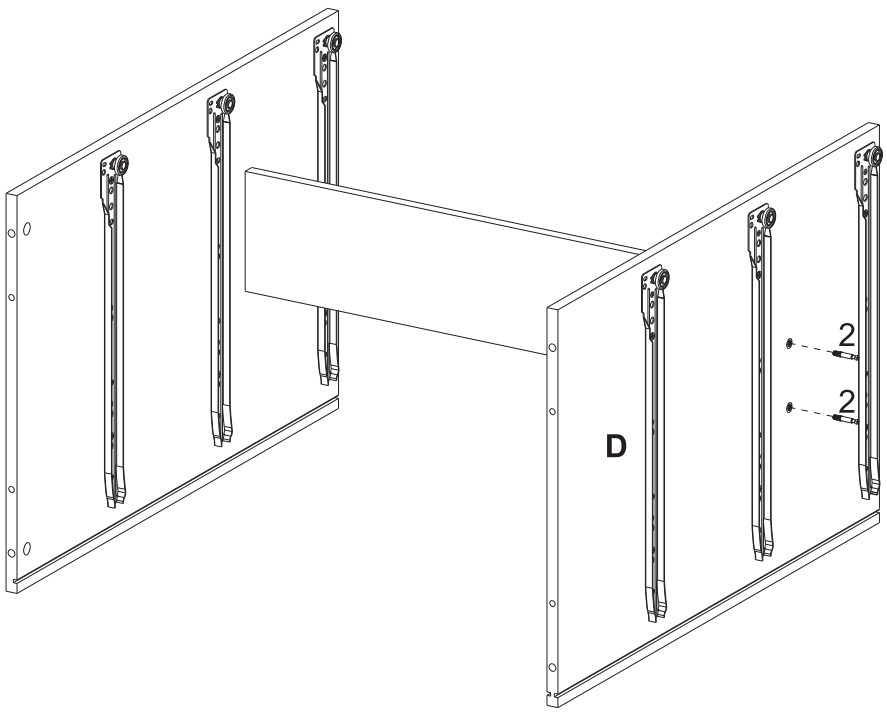


INSTALLATION STEPS


STEP11：

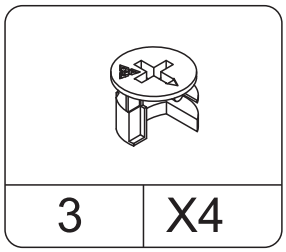


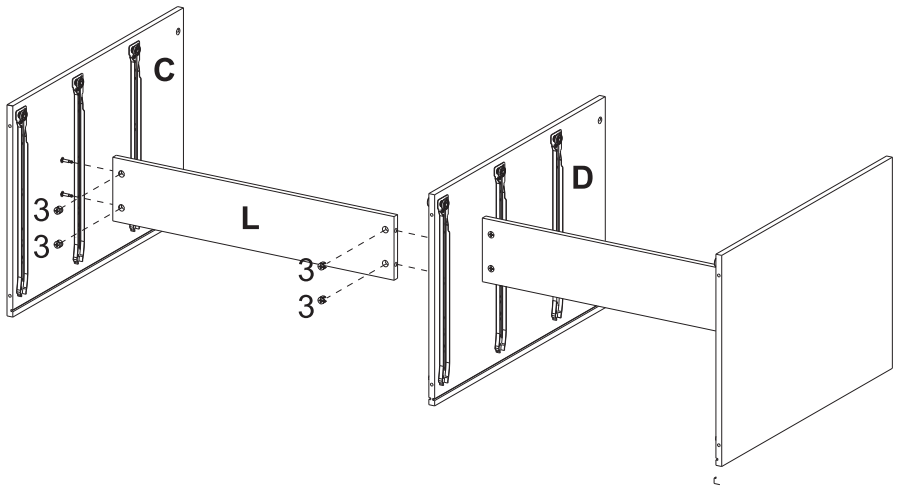


STEP12：

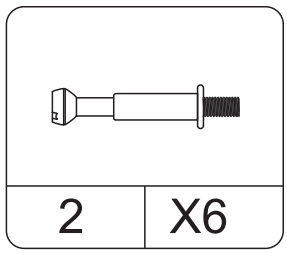

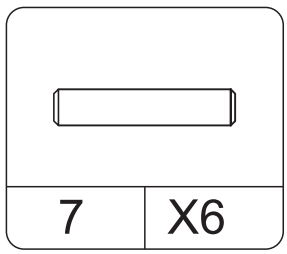


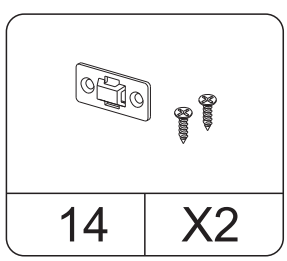


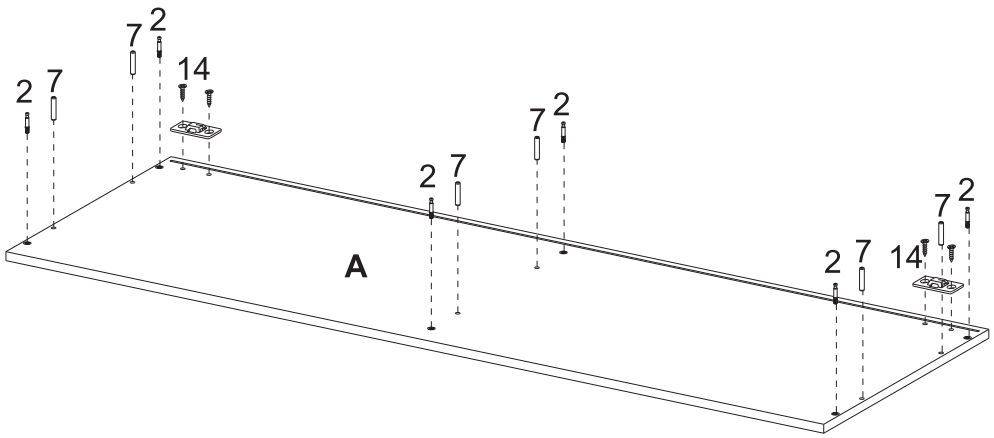


INSTALLATION STEPS

STEP13:

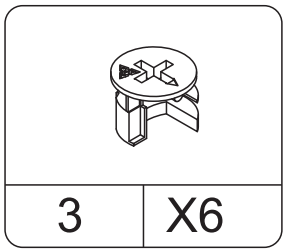


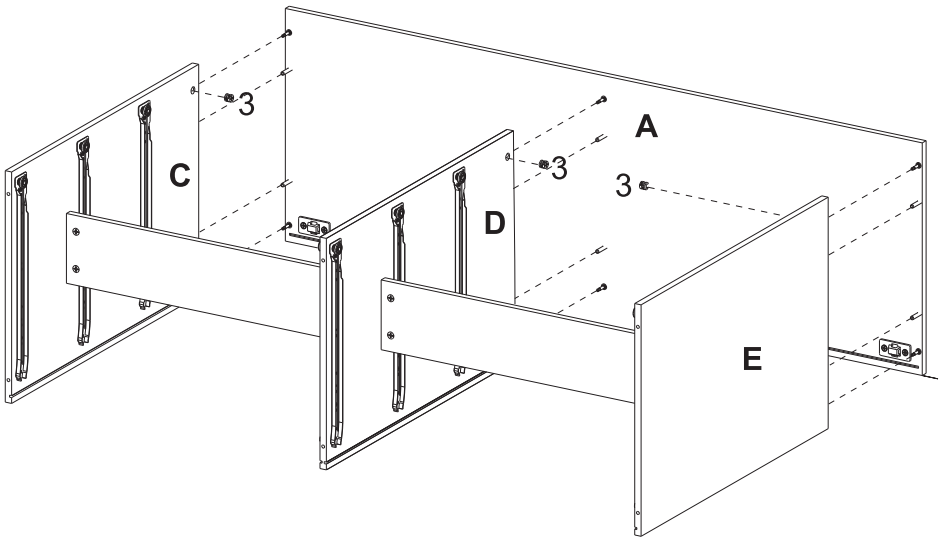

STEP14:

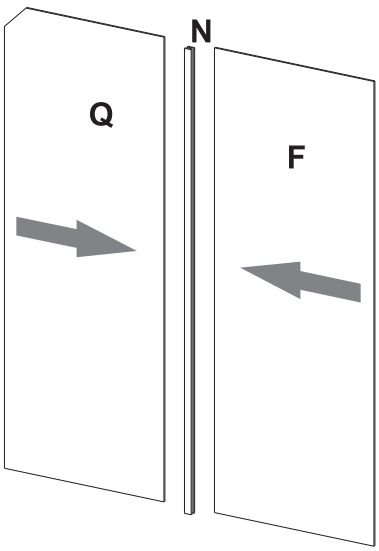



x2

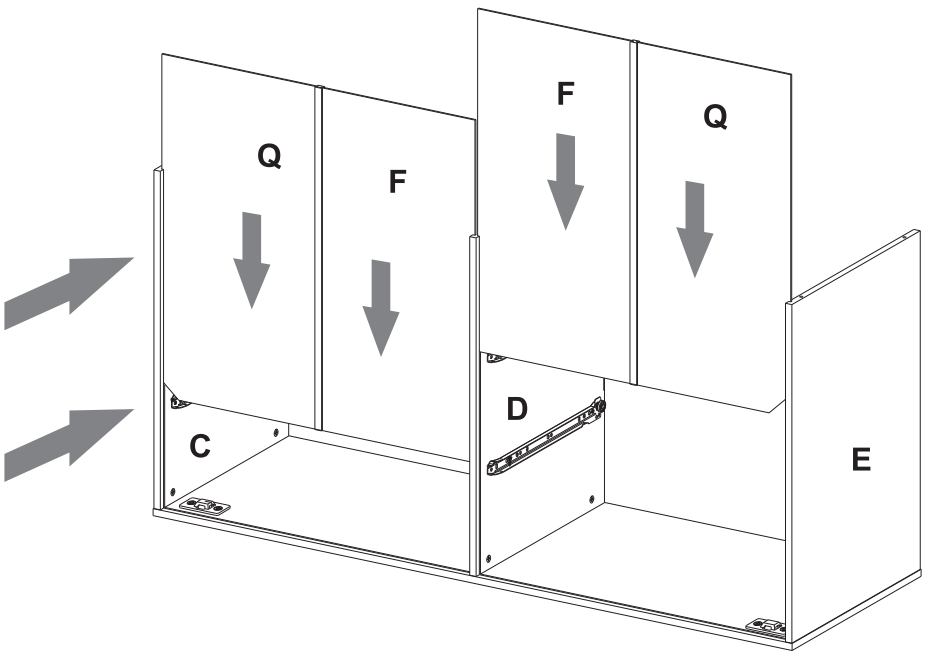


INSTALLATION STEPS


STEP15:

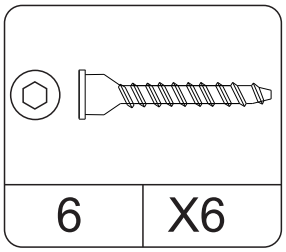

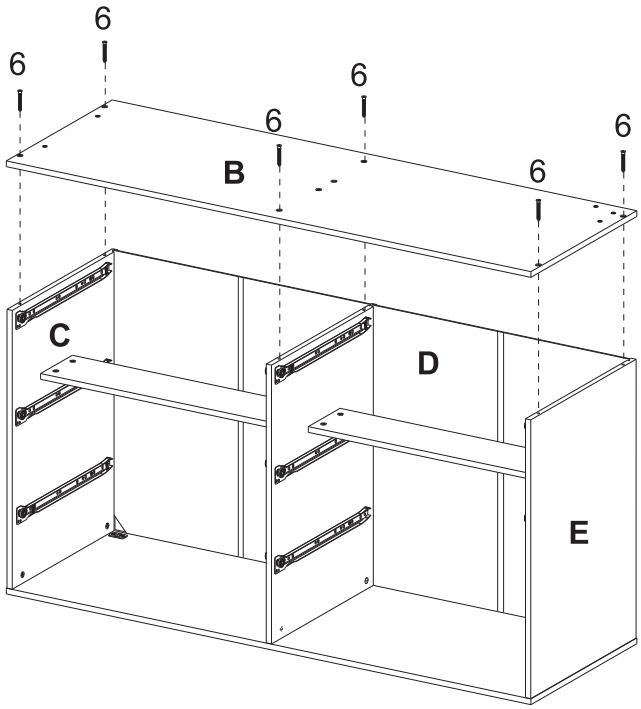


STEP16:

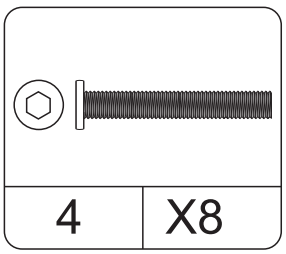

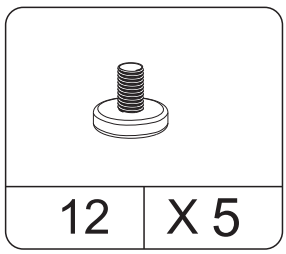


INSTALLATION STEPS


STEP17:

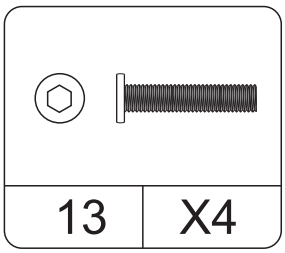


13	X4

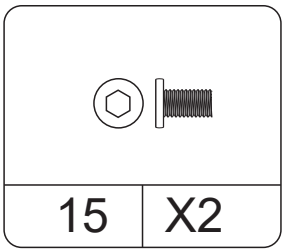

15	X2

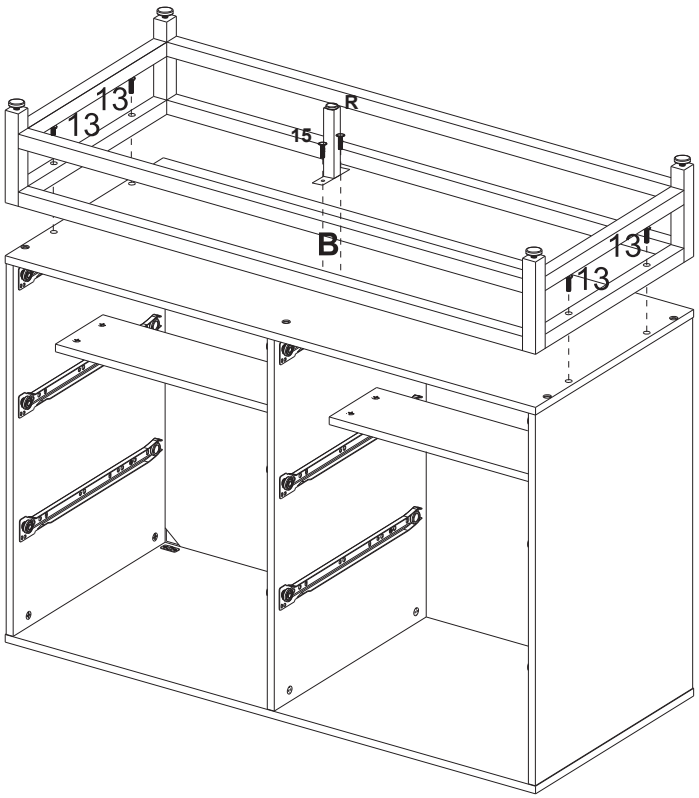


STEP18:

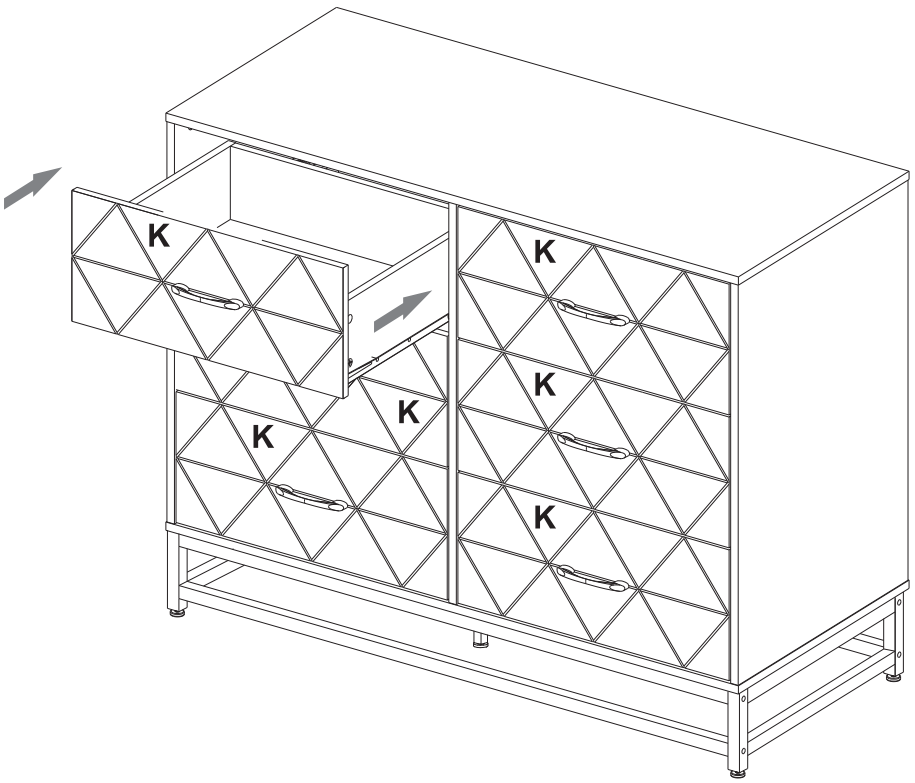


INSTALLATION STEPS

STEP19:

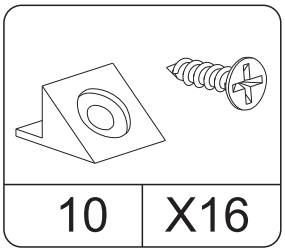


10	X16

STEP20:

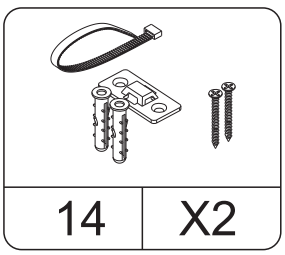


14	X2

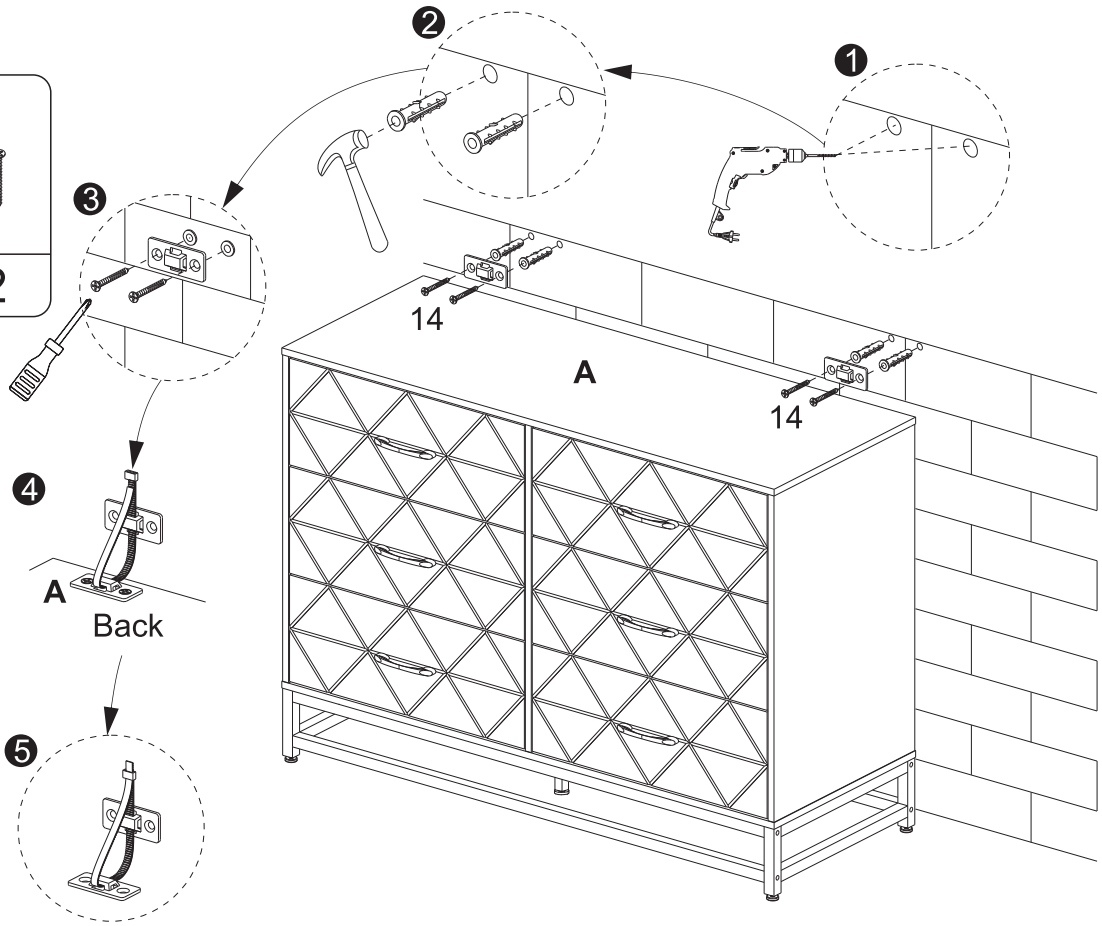

INSTALLATION STEPS

STEP21：

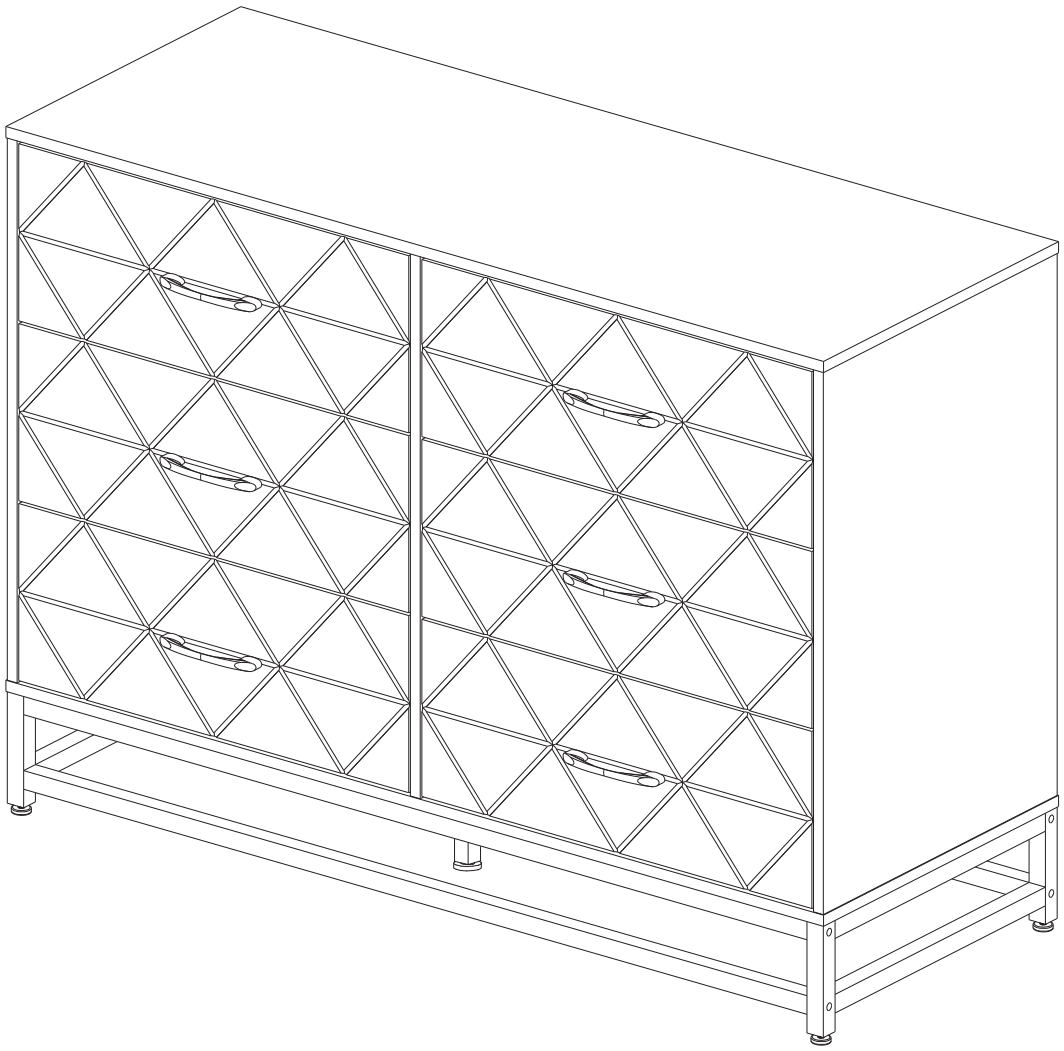

Thank you for purchasing our products. Please contact us if you have difficulty with assembly or need replacement parts. Our customer service is here to assist you. Please attach your User Name and Order ID so that we can assist you better.**support@jojoka.net**