



THE T-LOC™ SYSTEM


T-LOC is a new sideshield attachment system that eliminates the need to drill and rivet sideshields. There are two versions of T-LOC . . . "M" for all metal styles and "P" for all plastic styles. The T-LOC system can be used on existing product in the field and with all existing Titmus shields. Sideshield packages have been changed to include the T-LOC trademark. The system has been designed for ease of use and without the need for any type of tools.

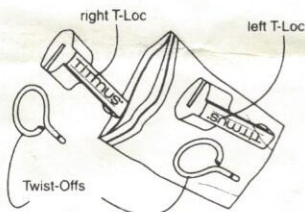


1. Remove T-Locs from polybag (1 left and 1 right).

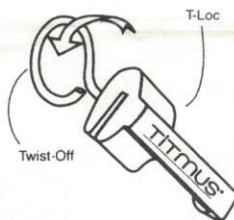


2. Insert Twist-Off into T-Loc and screw in one full revolution.

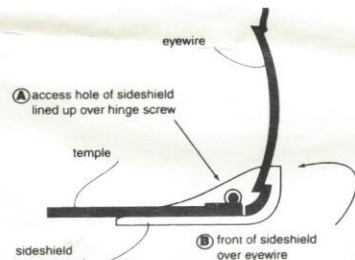

3. Place sideshields in proper position - see A & B (top view shown of right side).

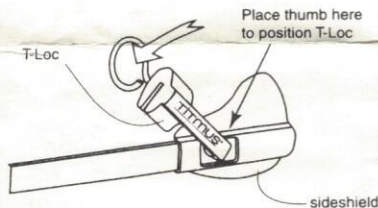


4. Fit T-Loc into sideshield hole on outside of temple and push T-Loc down onto temple while holding with thumb.

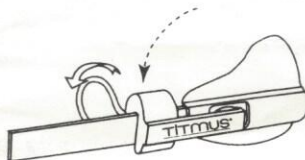

5. Twist handle of "Twist Off" clockwise holding T-Loc with thumb.

disposable
"Twist-Off"
handle

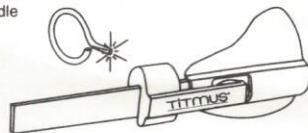

6. Handle of "Twist-Off" Snaps Free. Sideshield is mechanically fixed.