


LINCOLN

Roadster

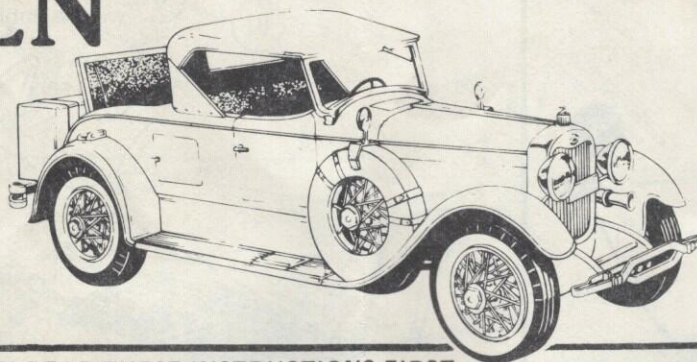

Scanned + Archived
By:
FindMyManual.org



IMPORTANT! READ THESE INSTRUCTIONS FIRST.

Before you begin building your kit, read the instructions and study the illustrations carefully. Test fit the parts before cementing them together, to acquaint yourself with their proper location. It is best to cut the parts from the "runners" with a modelers knife instead of twisting them off. Cut the parts only as they're needed. Only paint and cement made for styrene should be used. Trim

off excess plastic or "flash". The plating should be scraped from chromed parts where they are to be cemented. Use cement sparingly. Apply cement to small parts with a toothpick. When painting your model it is best to cement all non-chromed parts to the body and paint the whole unit at one time.

© 1979 Fundimensions Inc. A Division of CPG Products Corp.

mpe

78-3152-250

STEP NUMBERS FOR
CHROMED PARTS

10

STEP NUMBERS FOR
NON-CHROMED PARTS

10

PART NUMBERS

37

CEMENT ----->

DO NOT CEMENT ----->


CLEAR
PLASTIC PARTS

CLEAR


RED CLEAR
PLASTIC PARTS

RED CLEAR

1

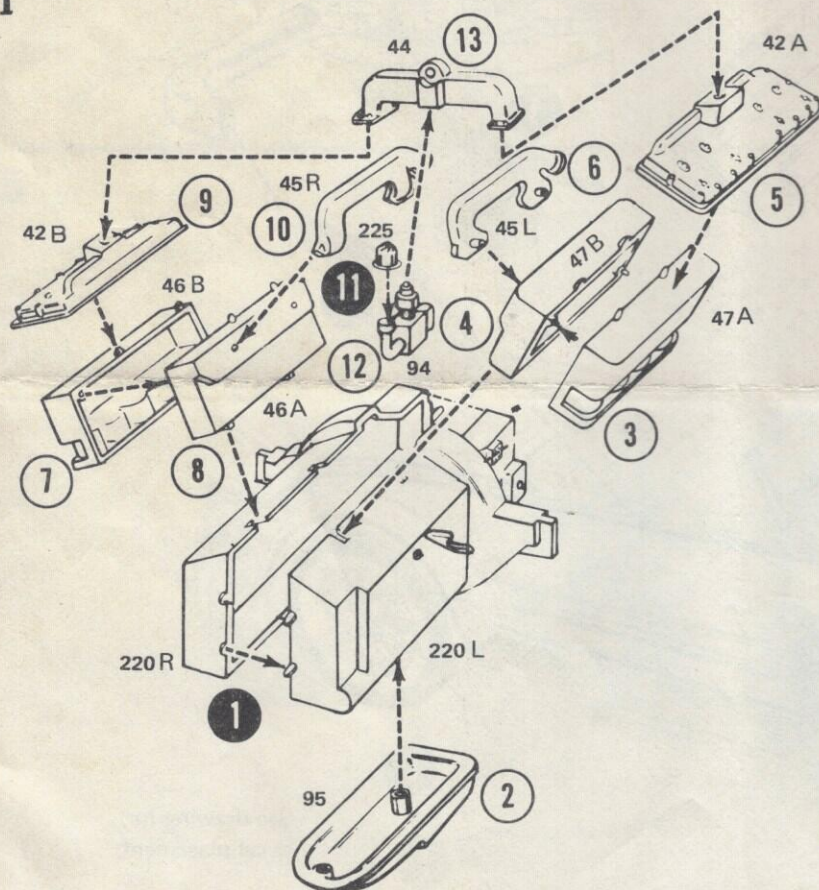


2

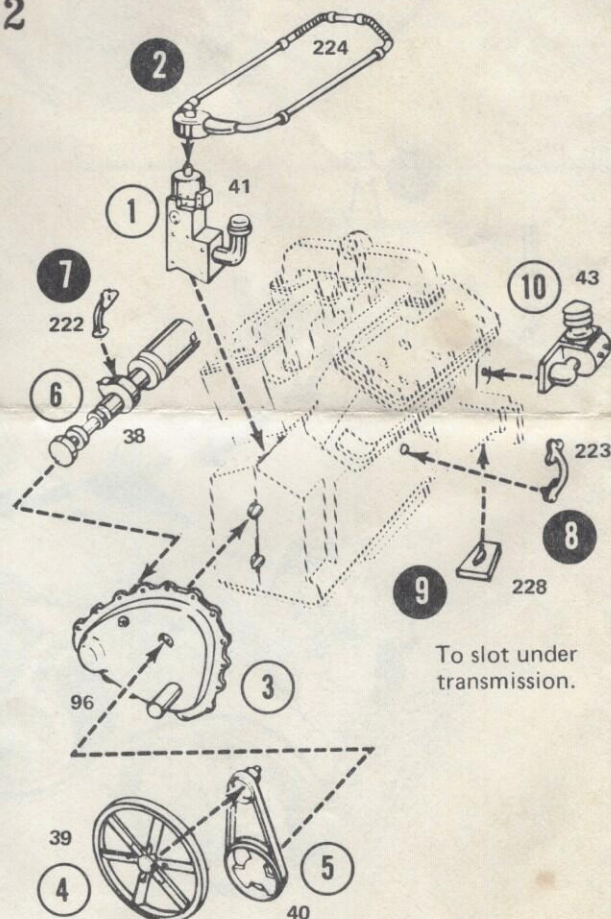


Cement pin to brakes but
not to spoked wheel.

Line up wheel spokes as shown in Figure 1.


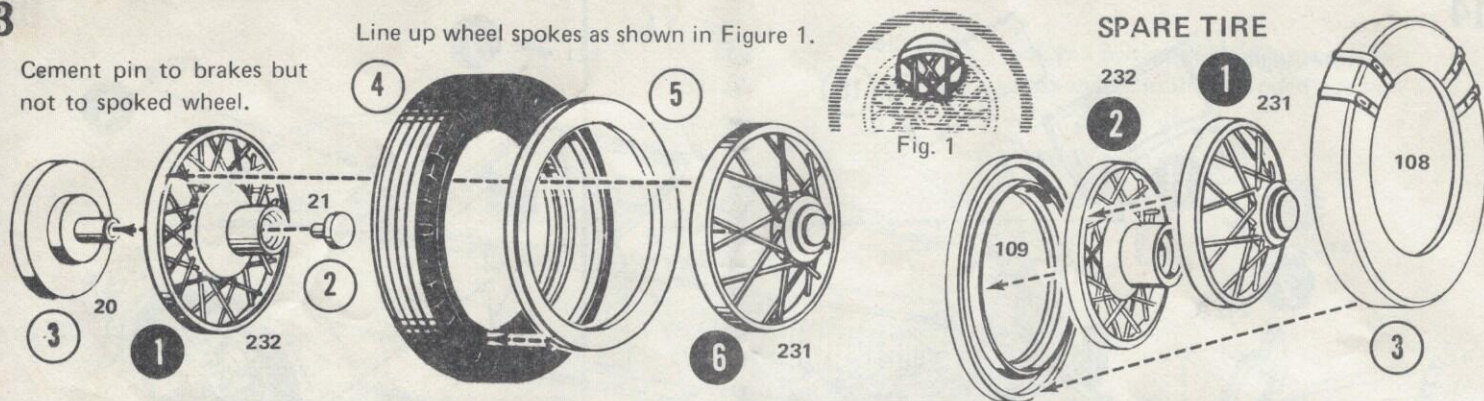







4



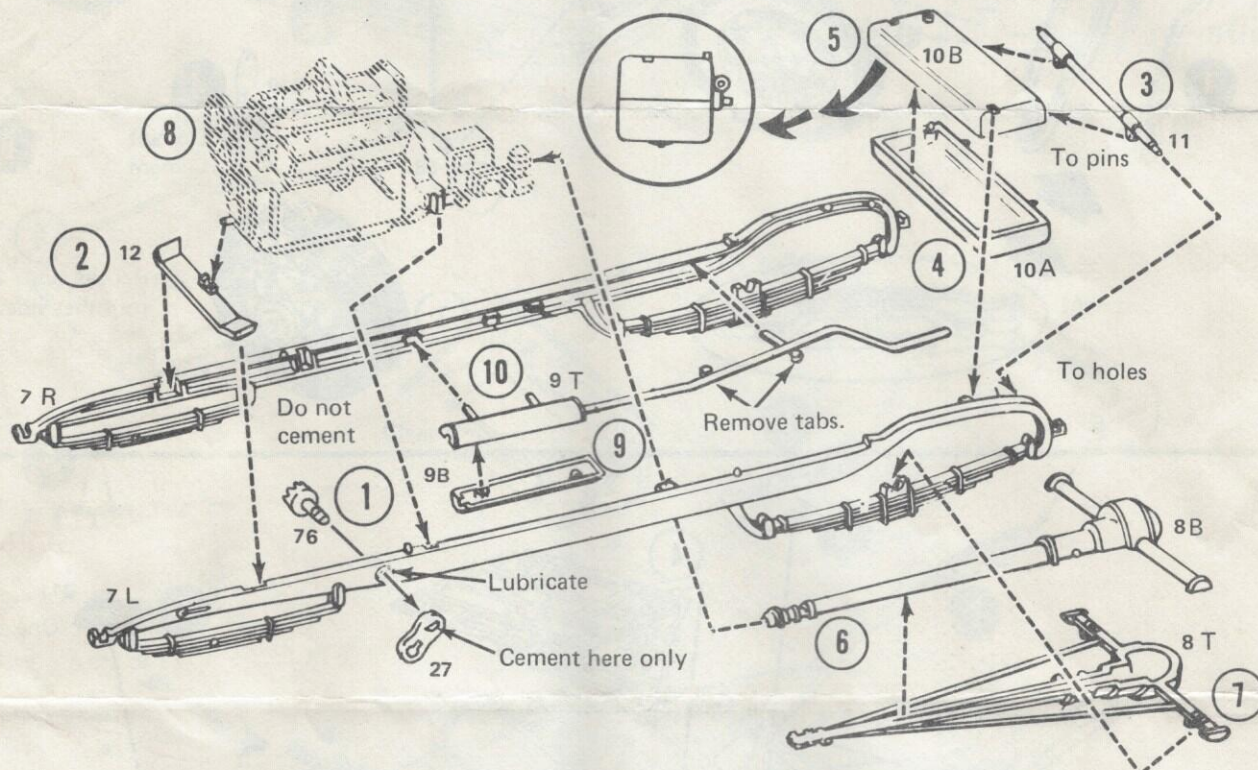


5


Cement here
only. \

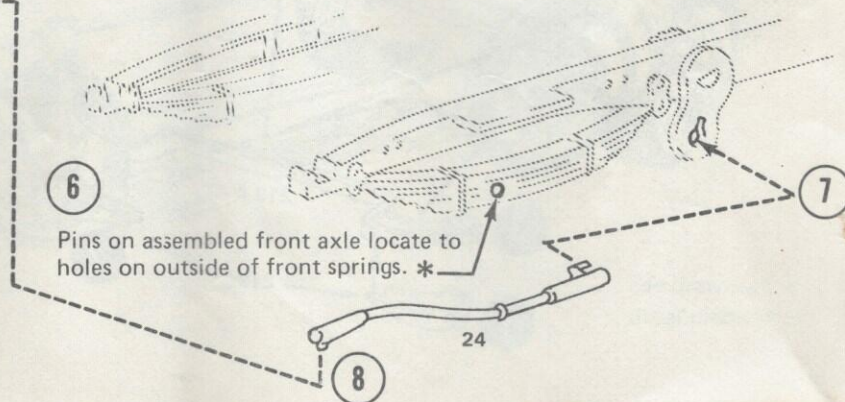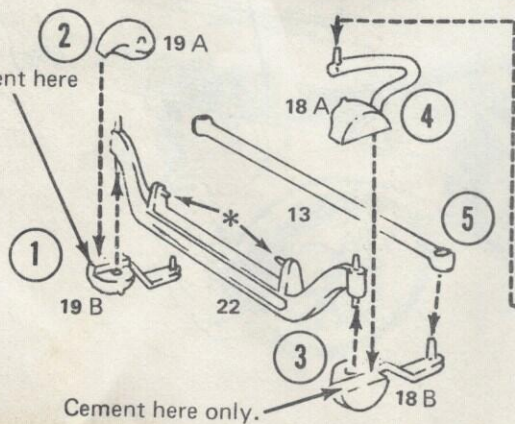

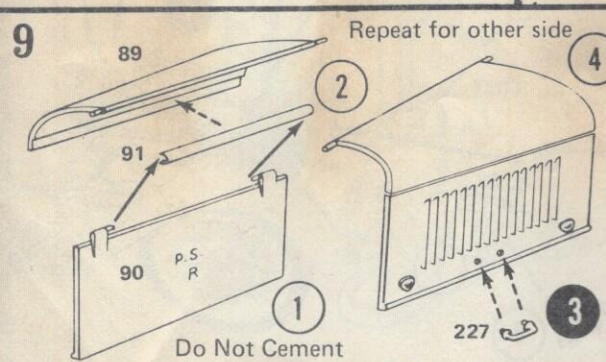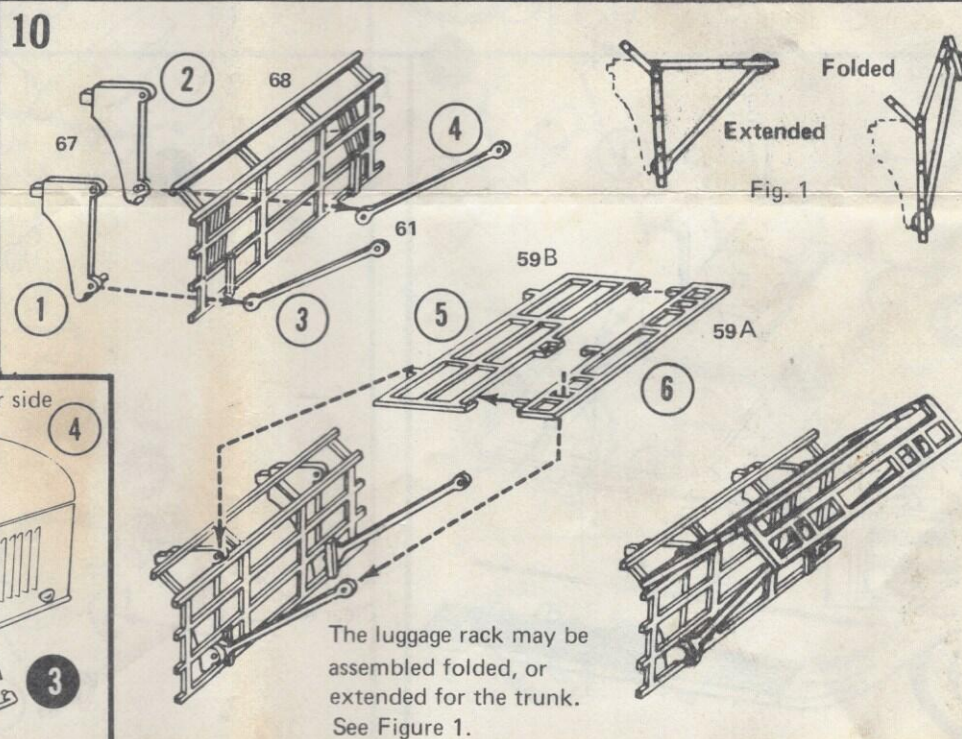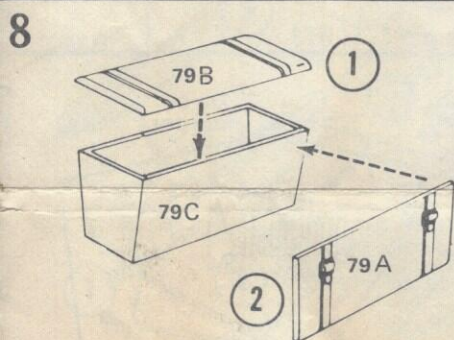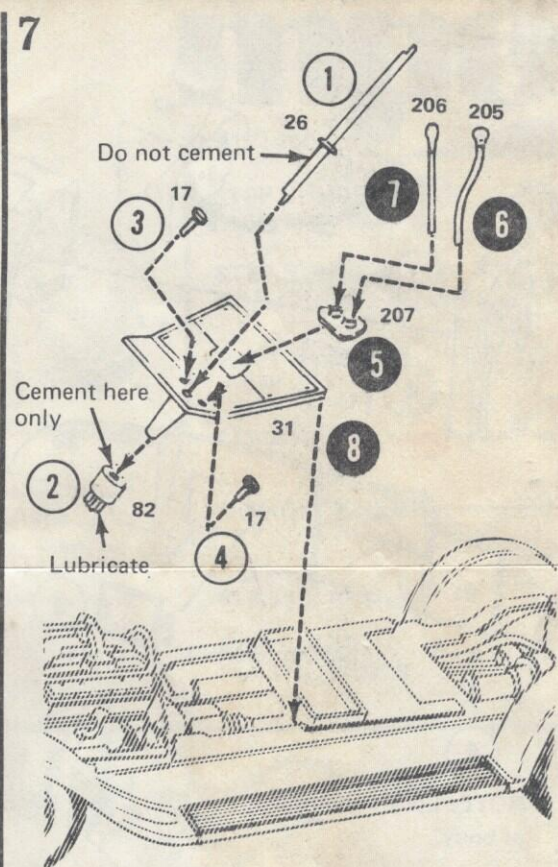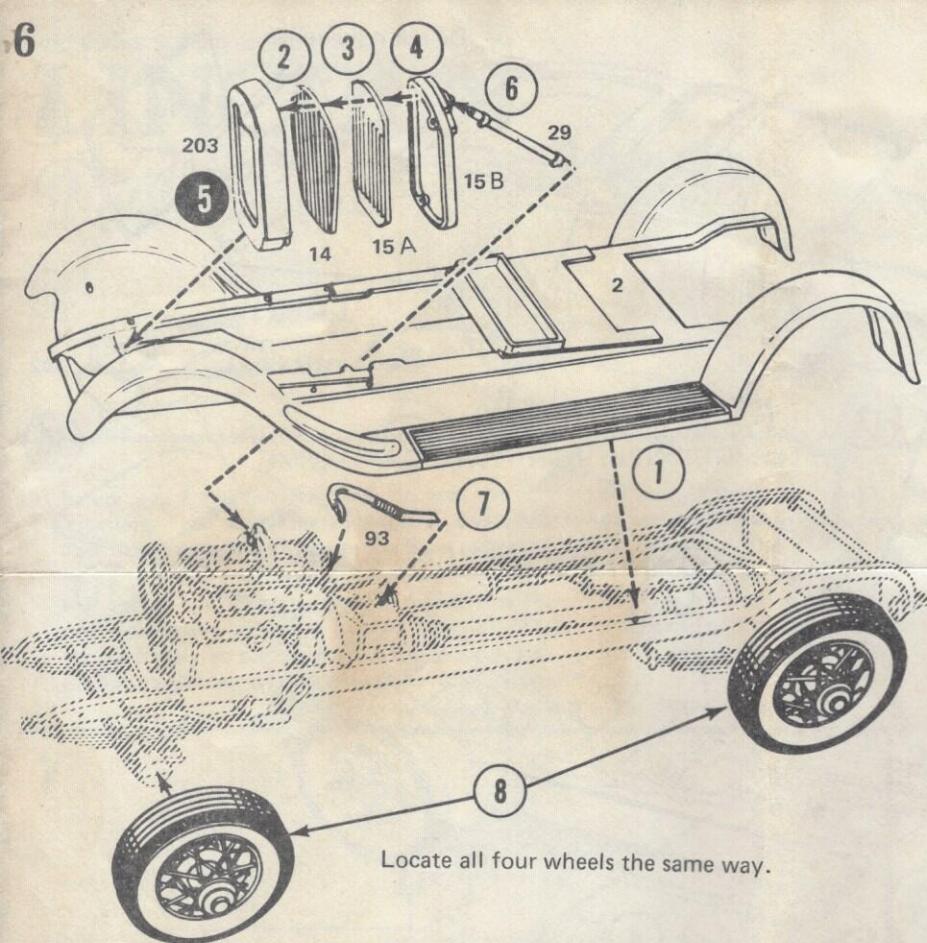


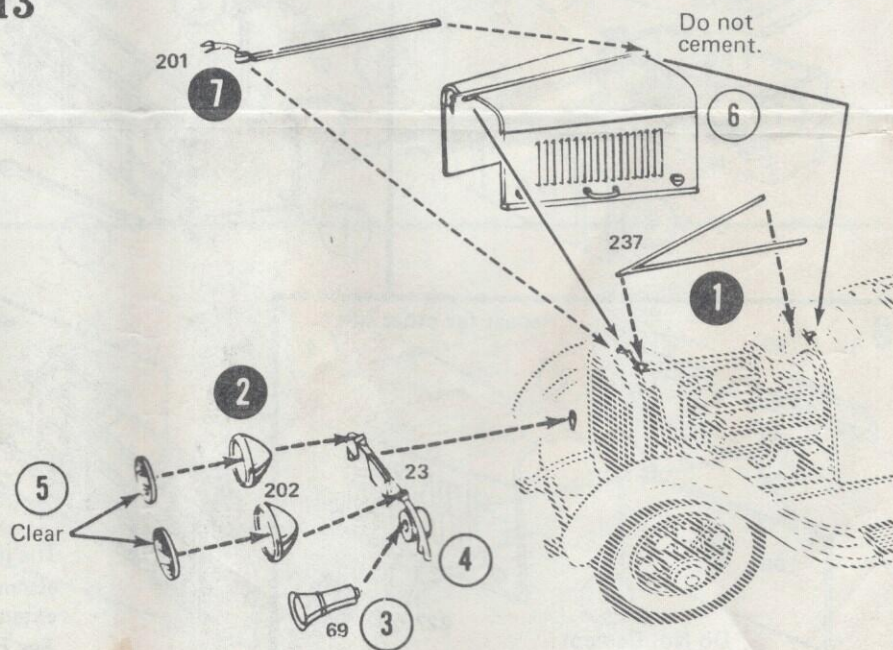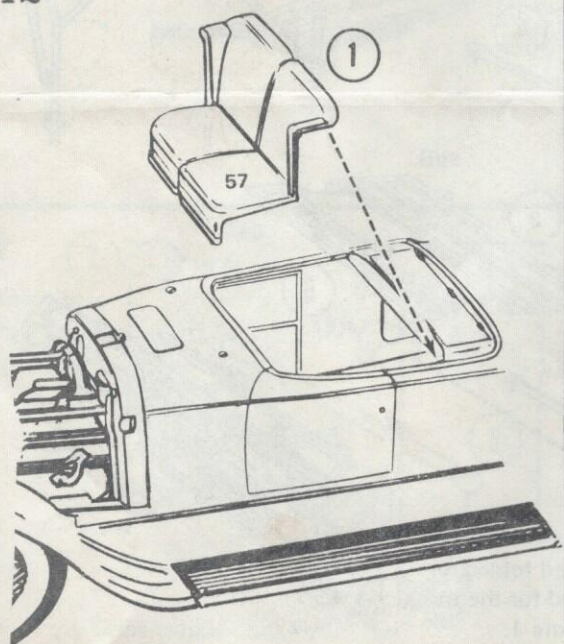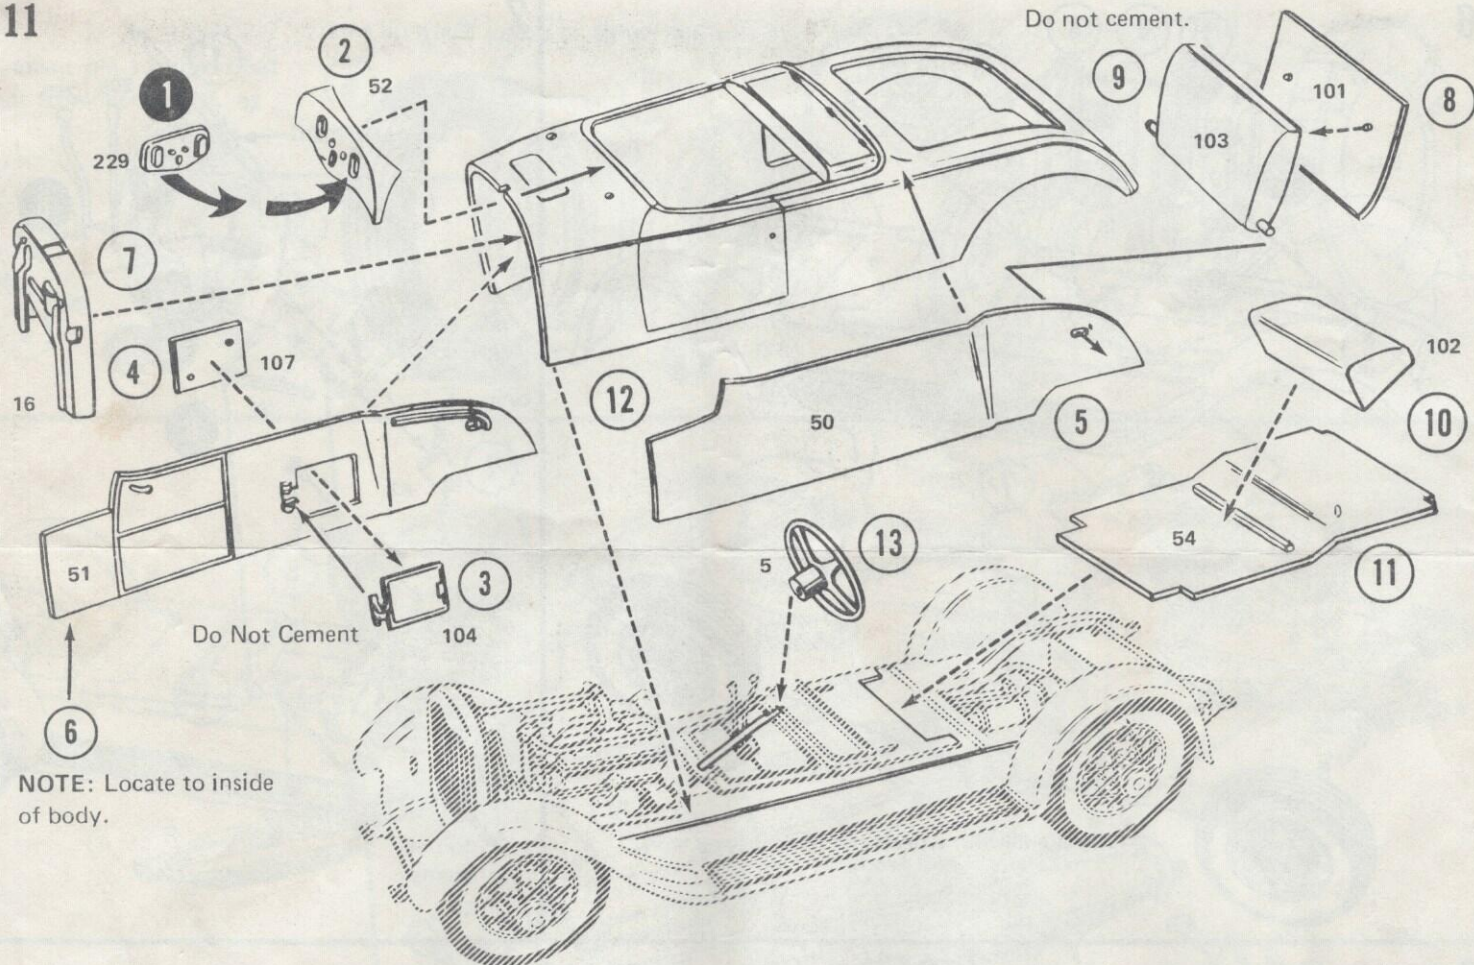


14

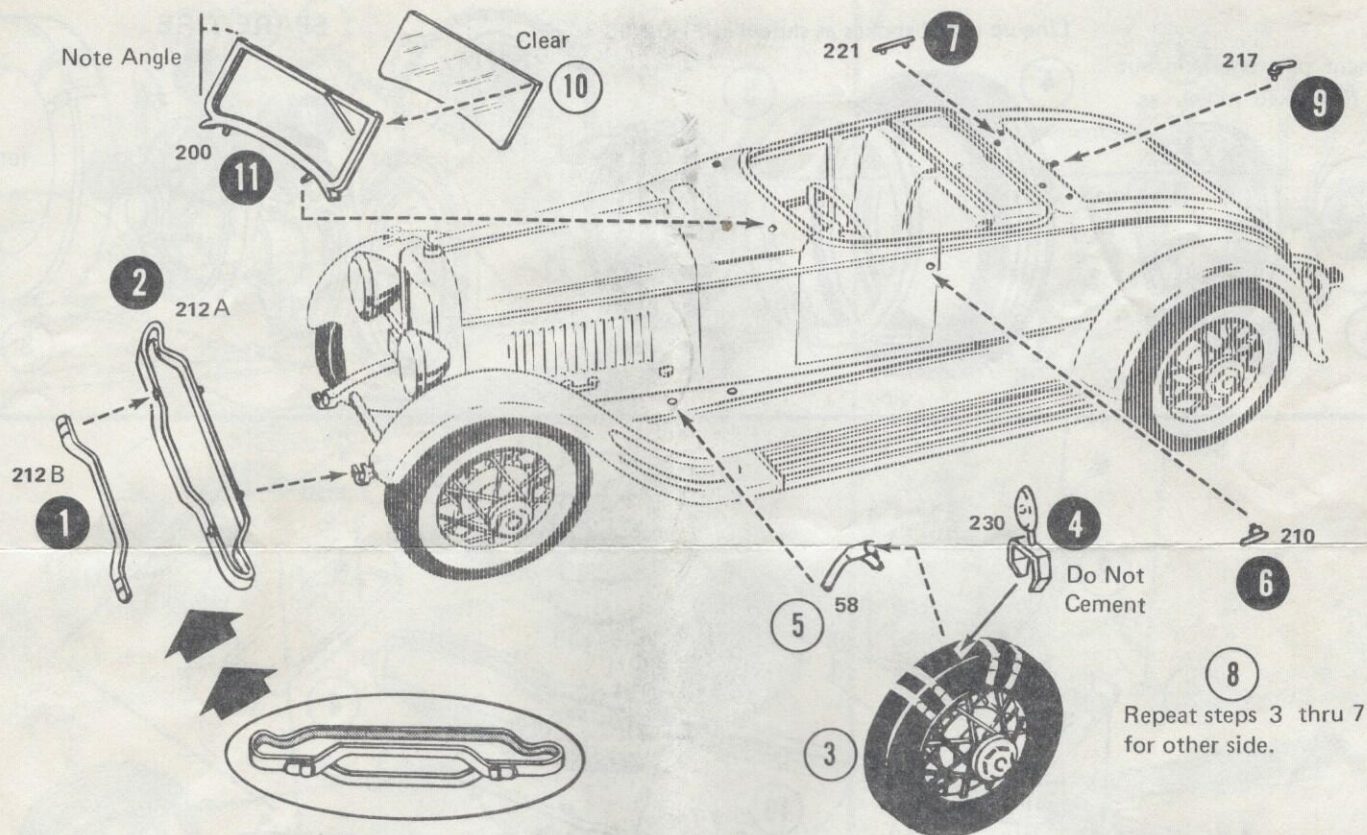


15

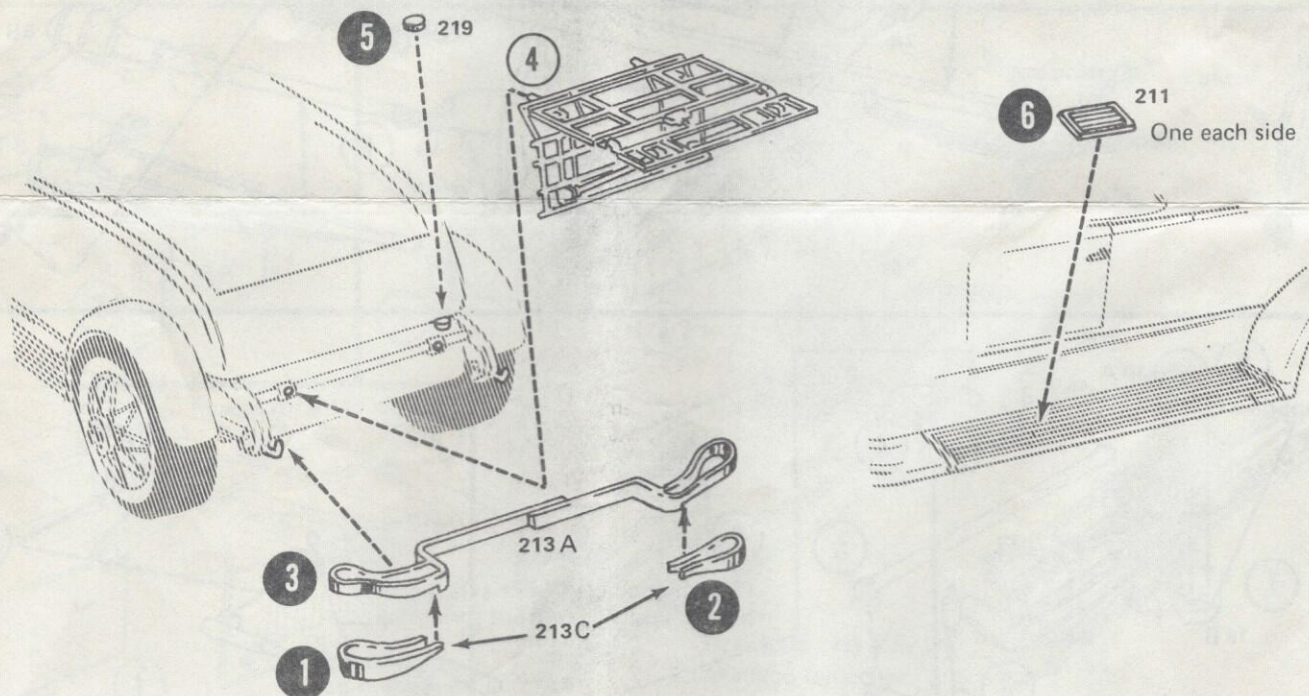

16

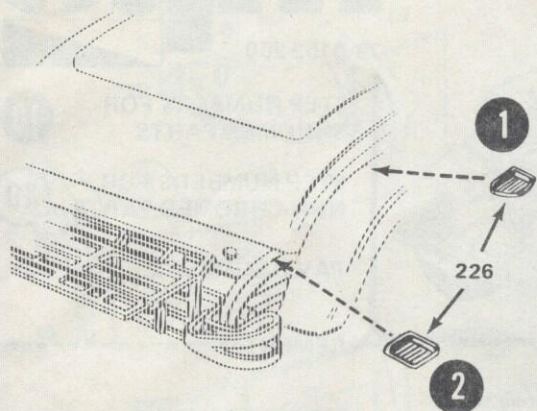

17

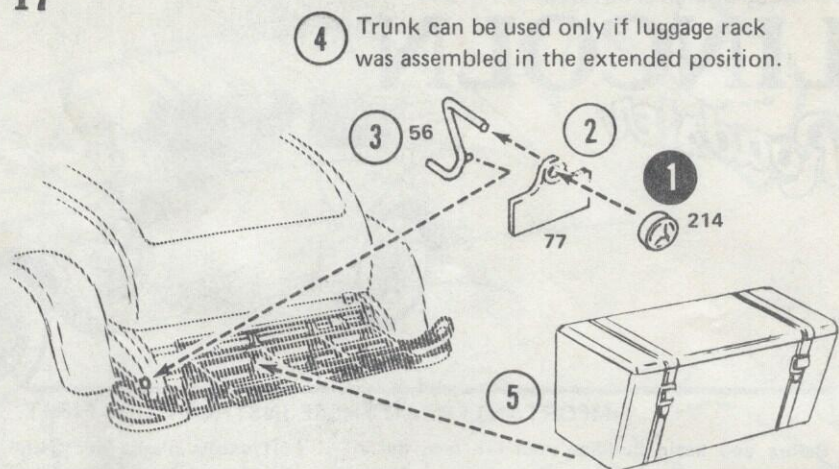

18

